■SEAT BELT

1. General


The following types of seat belts are provided.

Seat	Seat Belt Type	Remarks
Driver	3-point ELR*1	Electrical Sensing type Pretensioner & Force Limiter Tension Reducer
Front Passenger	3-point ELR & ALR*2	Electrical Sensing type Pretensioner & Force Limiter
Rear (LH, RH, and Center)		-

*1 : Emergency Locking Retractor
*2 : Automatic Locking Retractor

2. Rear Seat Belt

- 3-point type ELR/ALR seat belts have been adopted for all of the rear seat positions to improve passenger restraint performance. The rear center seat belt is built in to the seatback.
- In accordance with the addition of the double folding function to the rear seat, the structure of the rear seat has been changed to allow the belt buckles to be stowed in pockets provided on the seat.

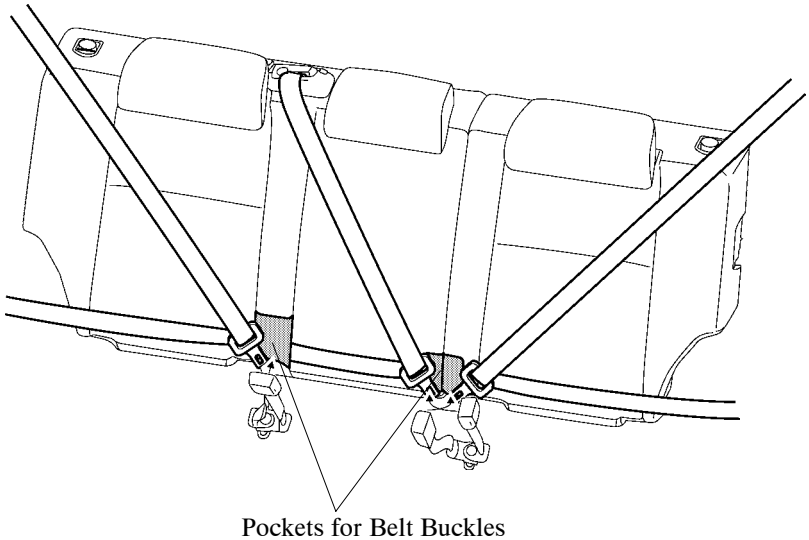


Pockets for Belt Buckles

0240BO15C

3. Pretensioner and Force Limiter

In accordance with the deployment signal from the airbag sensor assembly, the seat belt pretensioners activate simultaneously with the deployment of SRS airbag for the driver and front passenger.
In the beginning of the collision, if the tension of the seat belt applied to the occupant reaches a predetermined level, the force limiter helps to control the force applied to the occupant.
Even if the front passenger airbag is not deployed in accordance with the front passenger occupant classification system, the pretensioner and force limiter for the front passenger will be deployed.

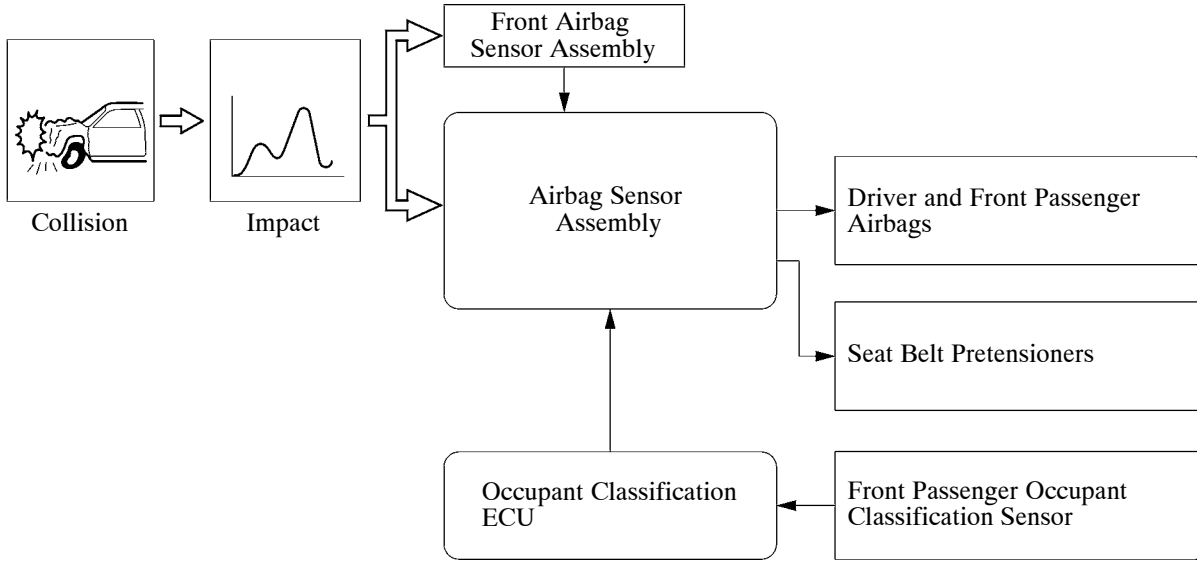

0240BO19C