
BODY PANEL UNDERCOATING AREAS

HINT:
1) First wipe off any dirt, grease or oil with a rag soaked in silicone remover.
2) Cover the surrounding areas with masking paper to avoid coating unnecessary areas. If other areas are accidently coated, wipe off the coating immediately.
3) Apply the first coating of undercoat to all welded areas and panel joints, then apply a second coat over the entire area.
4) Do not coat parts which become hot, such as the tailpipe, or moving parts, such as the propeller shaft.
5) Besides the locations described below, apply undercoating to all weld points under the body to insure corrosion prevention.
6) Be sure to seal the edge of the flange of the member and bracket with undercoating.
7) If undercoat is damaged by peeling, cracks, etc., be sure to repair as necessary.
8) Before the undercoat apply sealer allowing rust prevention to be attained.


[Standard body]

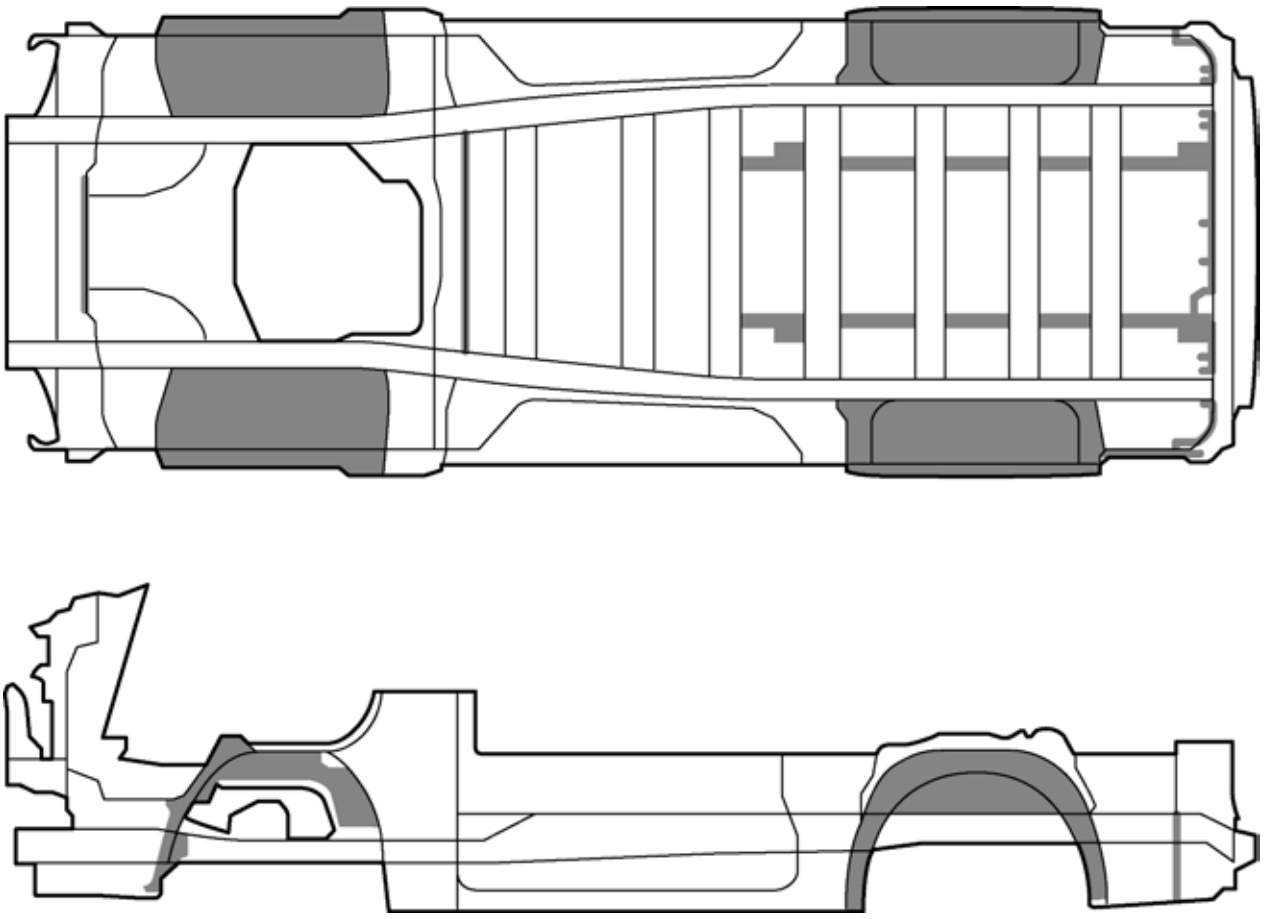

F20511

REFERENCE
Referring to the notes above, undercoating should be applied according to the specifications for your country.

[Super long body]

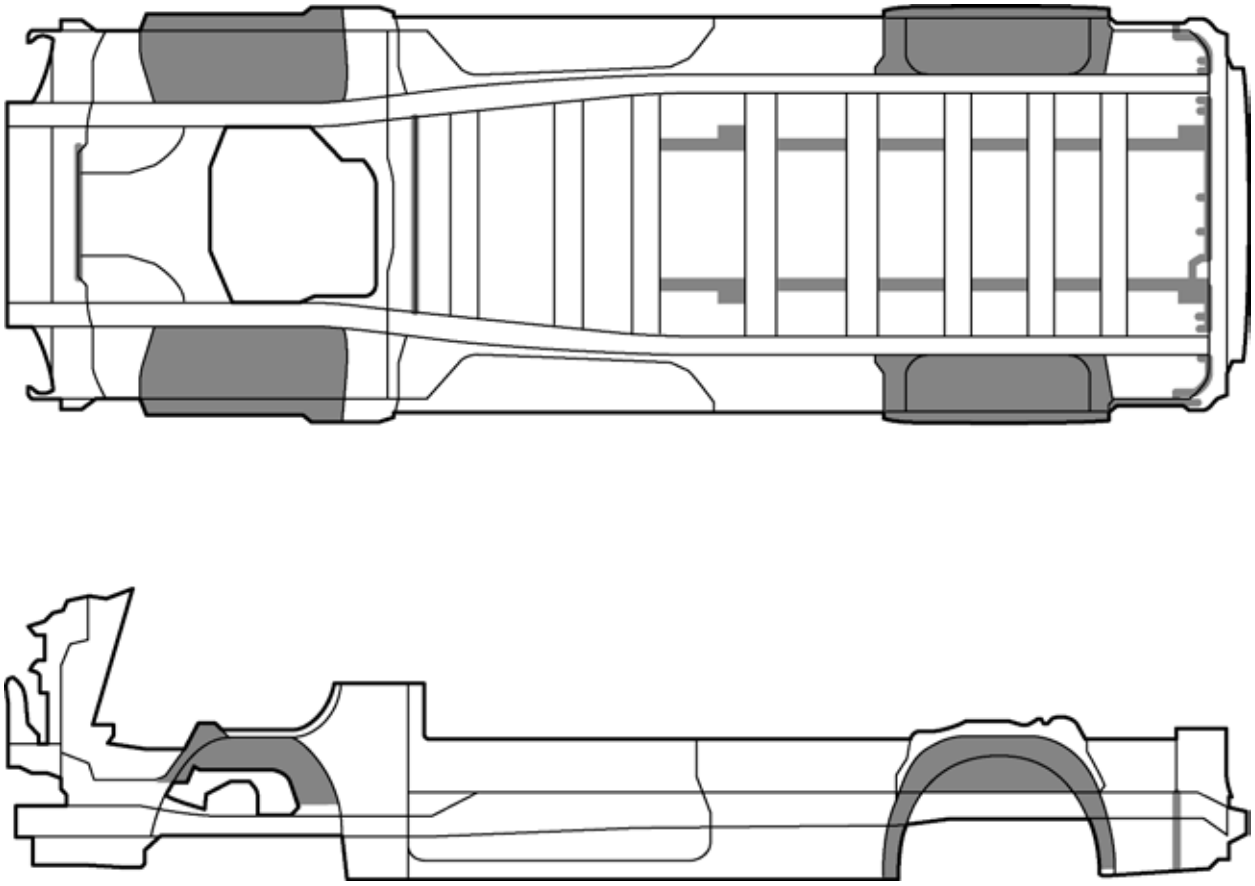

F22657