




(IG)
(BAT)
(BAT)
7. 5A
ECU–IG
10A
ECU–B
120A
MAIN4
* 1 : w/ Automatic Light Control System
SIG
ECUB
GND
AUTO
TRLY
H7(A)
Integration
Relay
T–LP
Relay
10A
PANEL
H40
Diode
(Automatic Light
Control No. 2)
H42
Junction
Connector
H41
Junction
Connector
H14
Blower SW (Front A/C)
H16
A/C SW
H17
Rear Window Defogger SW
H13
Ashtray Illumination
H10
Room Lamp SW
H9
Hazard Warning Signal SW
(LHD)
(RHD)
Light
Control SW
OFF
Tail
Head
Auto
A
H
T
EL
H28(A), H29(B)
Combination SW
W–B
B–G
W–R
R–G
G
O
R
B3
H1


(BAT)
10A
DOME
2
R
18 5E
8 5S
R
7 5Q
8 5P
6 5P
6 5Q
G
4 IH3 (LHD)
4 IH4 (RHD)
1 A
4 A
3 B
1 B
I12(A), I13(B)
Junction Connector
H11
Rear Blower SW (Main)
H21
A/T Shift Lever
Illumination
ILL+
B
Pointer
Illumination
Illumination
E1
H20
Combination Meter
I9
Headlamp Leveling SW
I3
Rear Fog Lamp SW
I4
Hazard Warning
Signal SW
(LHD)
(RHD)
I5
Room Lamp SW
I6
Idle–Up SW
I7
Door Lock
Control SW
I2
Radio Receiver Assembly
ILL+
GND
W–B
BR
12 6F
14 6F
10 6F
9 6F
7 6F
1 6F
2 IH3 (LHD)
2 IH4 (RHD)
1 HH1
H2


H 7
White

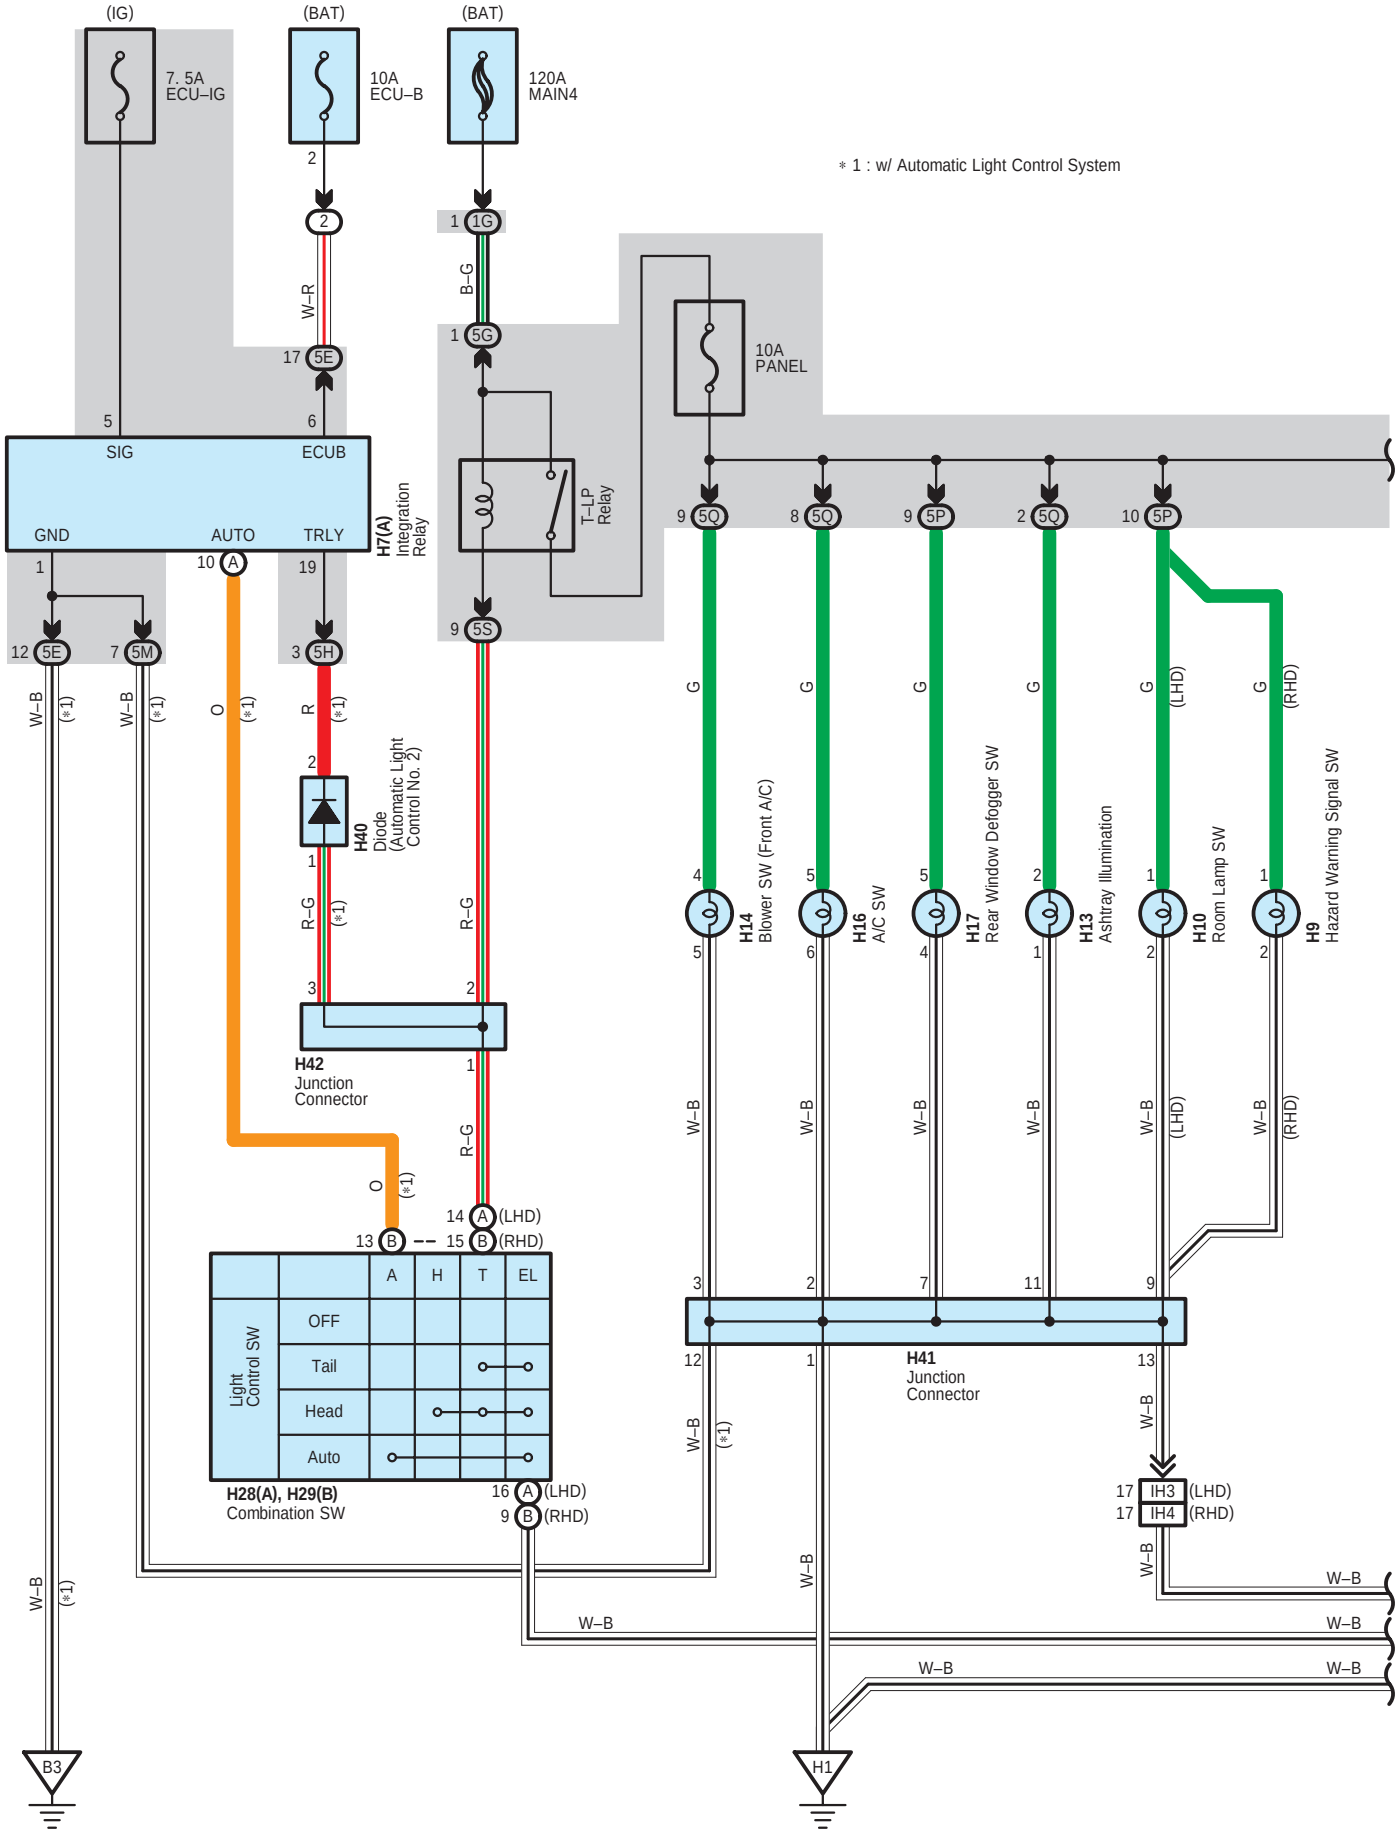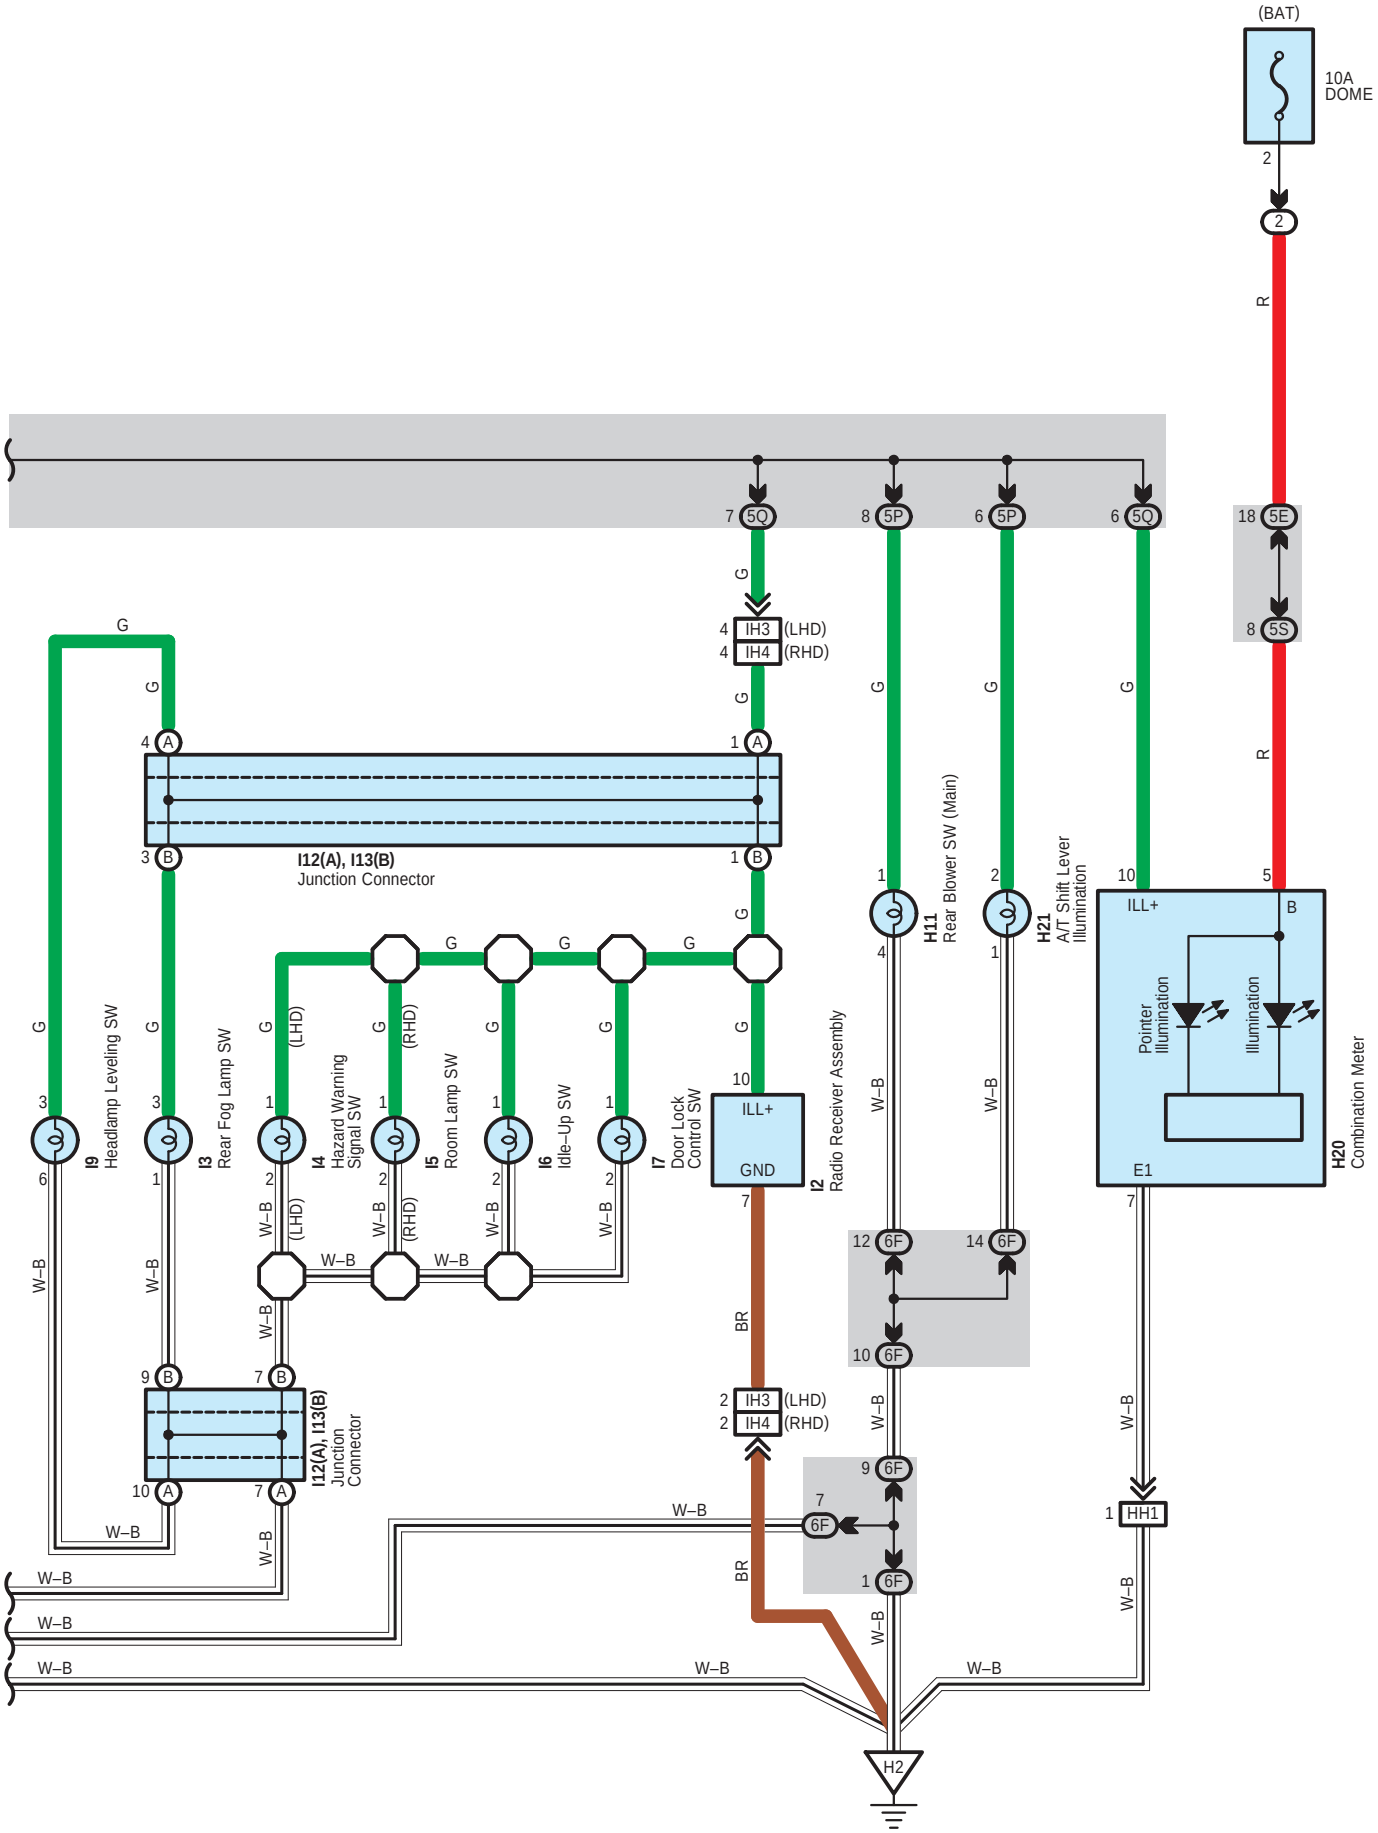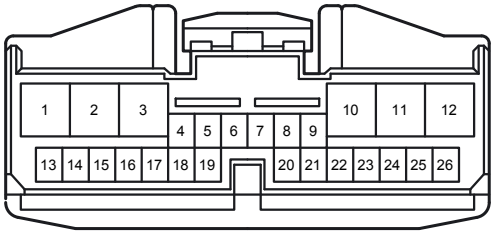

H 9
Black




H 10
Gray

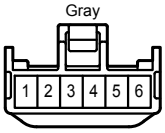


H 11
Black




H 13
Gray




H 14
Black

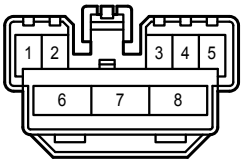


H 16
Gray

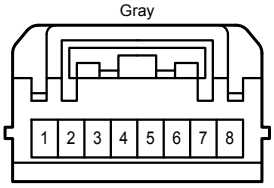

H 17
Black

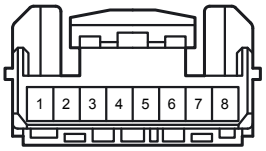


H 20
White

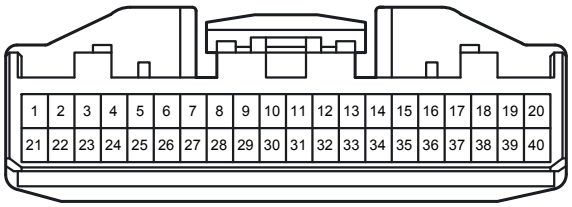


H 21
Black



H 28
White

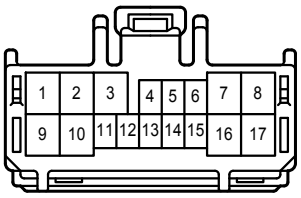


H 29
White

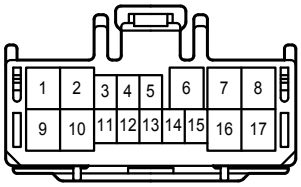


H 40
Black




H 41
Black

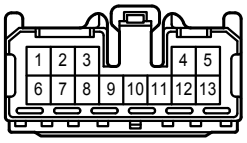


H 42
Black

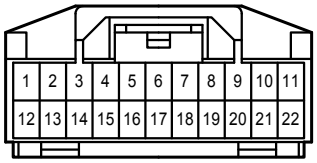


I 2
Blue

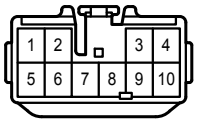


I 3
White

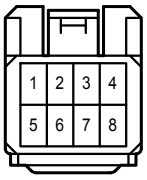


I 4
Black



I 5
Gray

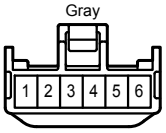

I 6
Black




I 7
Black




I 9
Gray




I 12
Blue

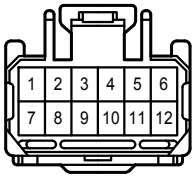


I 13
Blue

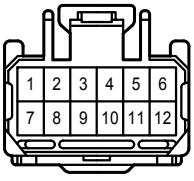


1G
White

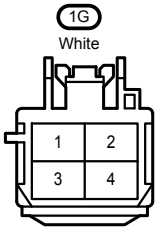


5E
White

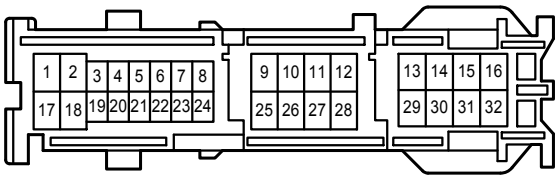


5G
Black



5H
White

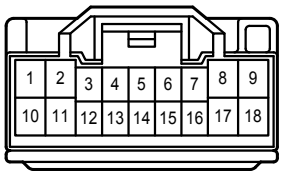


5M
White

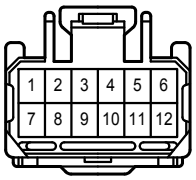


5P
White




5Q
White

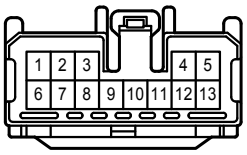


5S
White

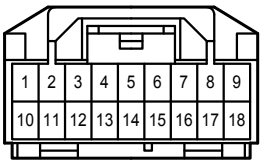


6F
Gray

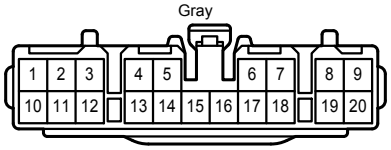

HH1
White

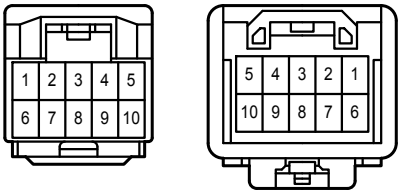

IH3
White

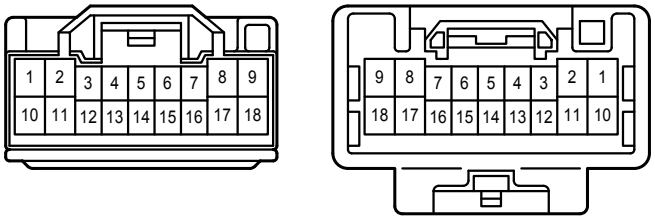

IH4
Gray

