DOOR LOCK CONTROL SYSTEM

■ DESCRIPTION

The new model has a door lock control system with the following setting:

<table>
<tr><th></th><th>Australia</th><th colspan="3">G.C.C. Countries</th><th>Russia & Ukraine</th><th colspan="4">General Countries</th></tr>
<tr><td>Vehicle Type</td><td>All</td><td>Commuter</td><td colspan="2">Van</td><td>Commuter</td><td colspan="2">Van</td><td colspan="2">Commuter</td></tr>
<tr><td>Grade</td><td>All</td><td>GL</td><td colspan="2">DX</td><td>GL</td><td>GL</td><td>DX</td><td>GL</td><td>DX</td></tr>
<tr><td rowspan="5">Seating Capacity and Rear Side Window</td><td rowspan="5">All</td><td rowspan="5">16, Glass</td><td rowspan="3">3, Panel</td><td rowspan="5">15, Glass</td><td rowspan="5">12, Glass</td><td colspan="2" rowspan="3">6, Half-panel</td><td>10, Glass</td><td>9, Glass</td></tr>
<tr><td>11, Glass</td><td>12, Glass</td></tr>
<tr><td>12, Glass</td><td>15, Glass</td></tr>
<tr><td rowspan="2">16, Glass</td><td>6, Glass</td><td>13, Glass</td><td rowspan="2">16, Glass</td></tr>
<tr><td>3, Glass</td><td>16, Glass</td></tr>
<tr><td>Setting</td><td>Standard</td><td>Standard</td><td colspan="2">Option</td><td>Standard</td><td>Standard</td><td>Standard*</td><td colspan="2">Option</td></tr>
</table>

*: Includes the 4-door high roof wide body commuter model with the 2KD-FTV engine.

This door lock system has the following functions:


Function	Outline
Manual Lock and Unlock Function	This function can lock or unlock all doors by the door lock control switch of the driver operation.
Key-linked Lock and Unlock Function	This function, which is linked with the driver's door key cylinder, can lock or unlock all doors when lock or unlock operation is effected.
Door Lock Security Function	If either of the conditions below is met, driver's door manual unlocking is prohibited. • With the ignition switch OFF and the driver's door closed, when the door is locked with the key-linked lock or wireless lock*1 • With the ignition switch OFF and the driver's door locked (driver's door open and locked), when the driver's door is locked approximately 0.25 seconds after it is closed
Key Confine Prevention Function	When the key is inserted in the ignition key cylinder and the driver's door is open, this function does not establish manual locking or key-linked locking.
Doors Lock with Transmitter Function*2 (see page BE-65)	Pressing the door lock switch of the transmitter locks all doors.
Doors Unlock with Transmitter Function*2 (see page BE-65)	Pressing the door unlock switch of the transmitter unlocks all doors.

*1: Includes locking by the automatic lock function of the wireless function.

*2: Only for models with wireless door lock system.

BE

▶ System Diagram ◀

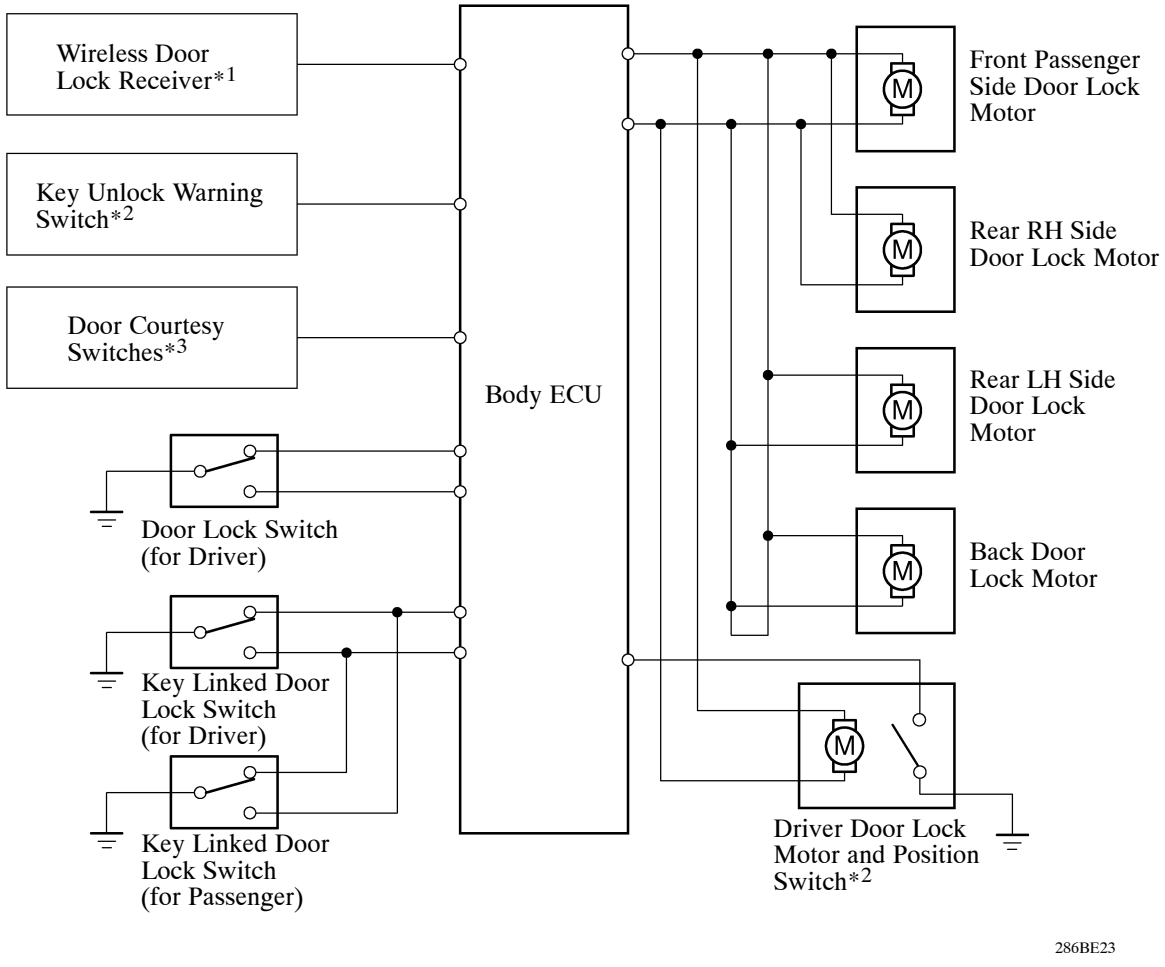

*1: Vehicles with the wireless door lock remote control system
*2: Vehicles with the key confine prevention function
*3: Vehicles with door lock security function