

CENTER BODY OUTER PILLAR (CUT): SUPER LONG BODY (4-DOOR (FRONT PASSENGER'S SIDE), 5-DOOR)


F22717B

REPLACEMENT

REMOVAL

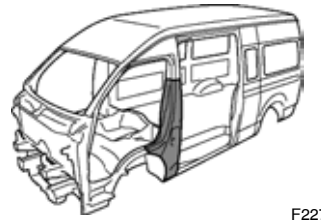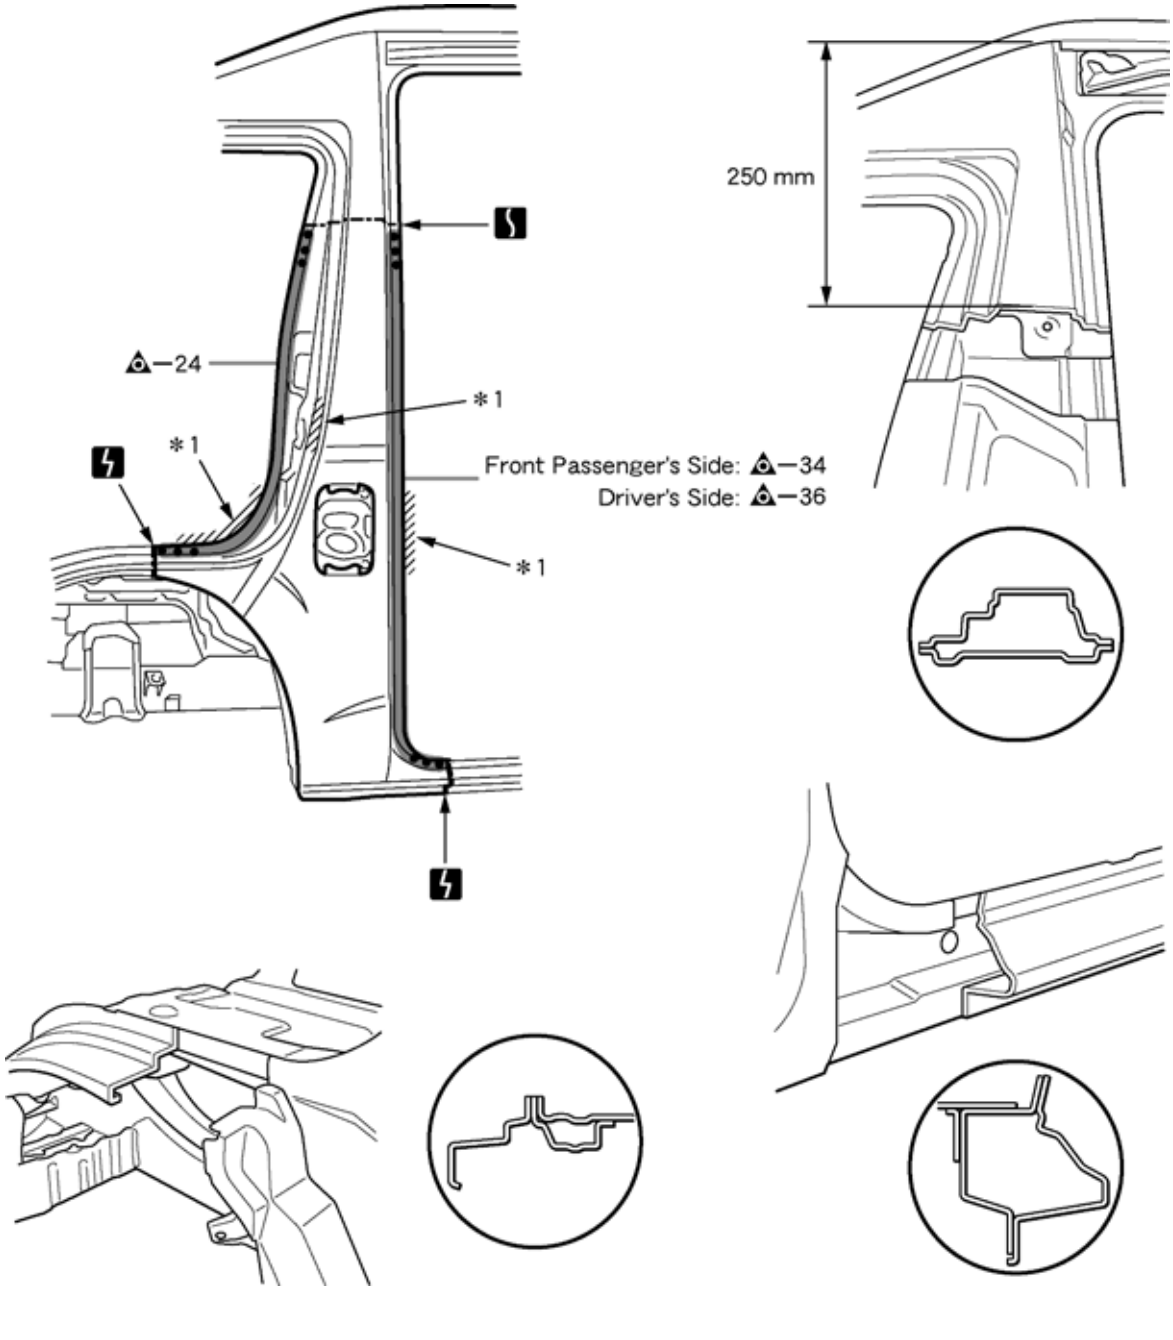


F22671

POINT


1 *1 in illustration above indicates where the adhesive is.
2 Cut through the adhesive with a cut chisel to remove the panel.

250 mm (9.84 in.)

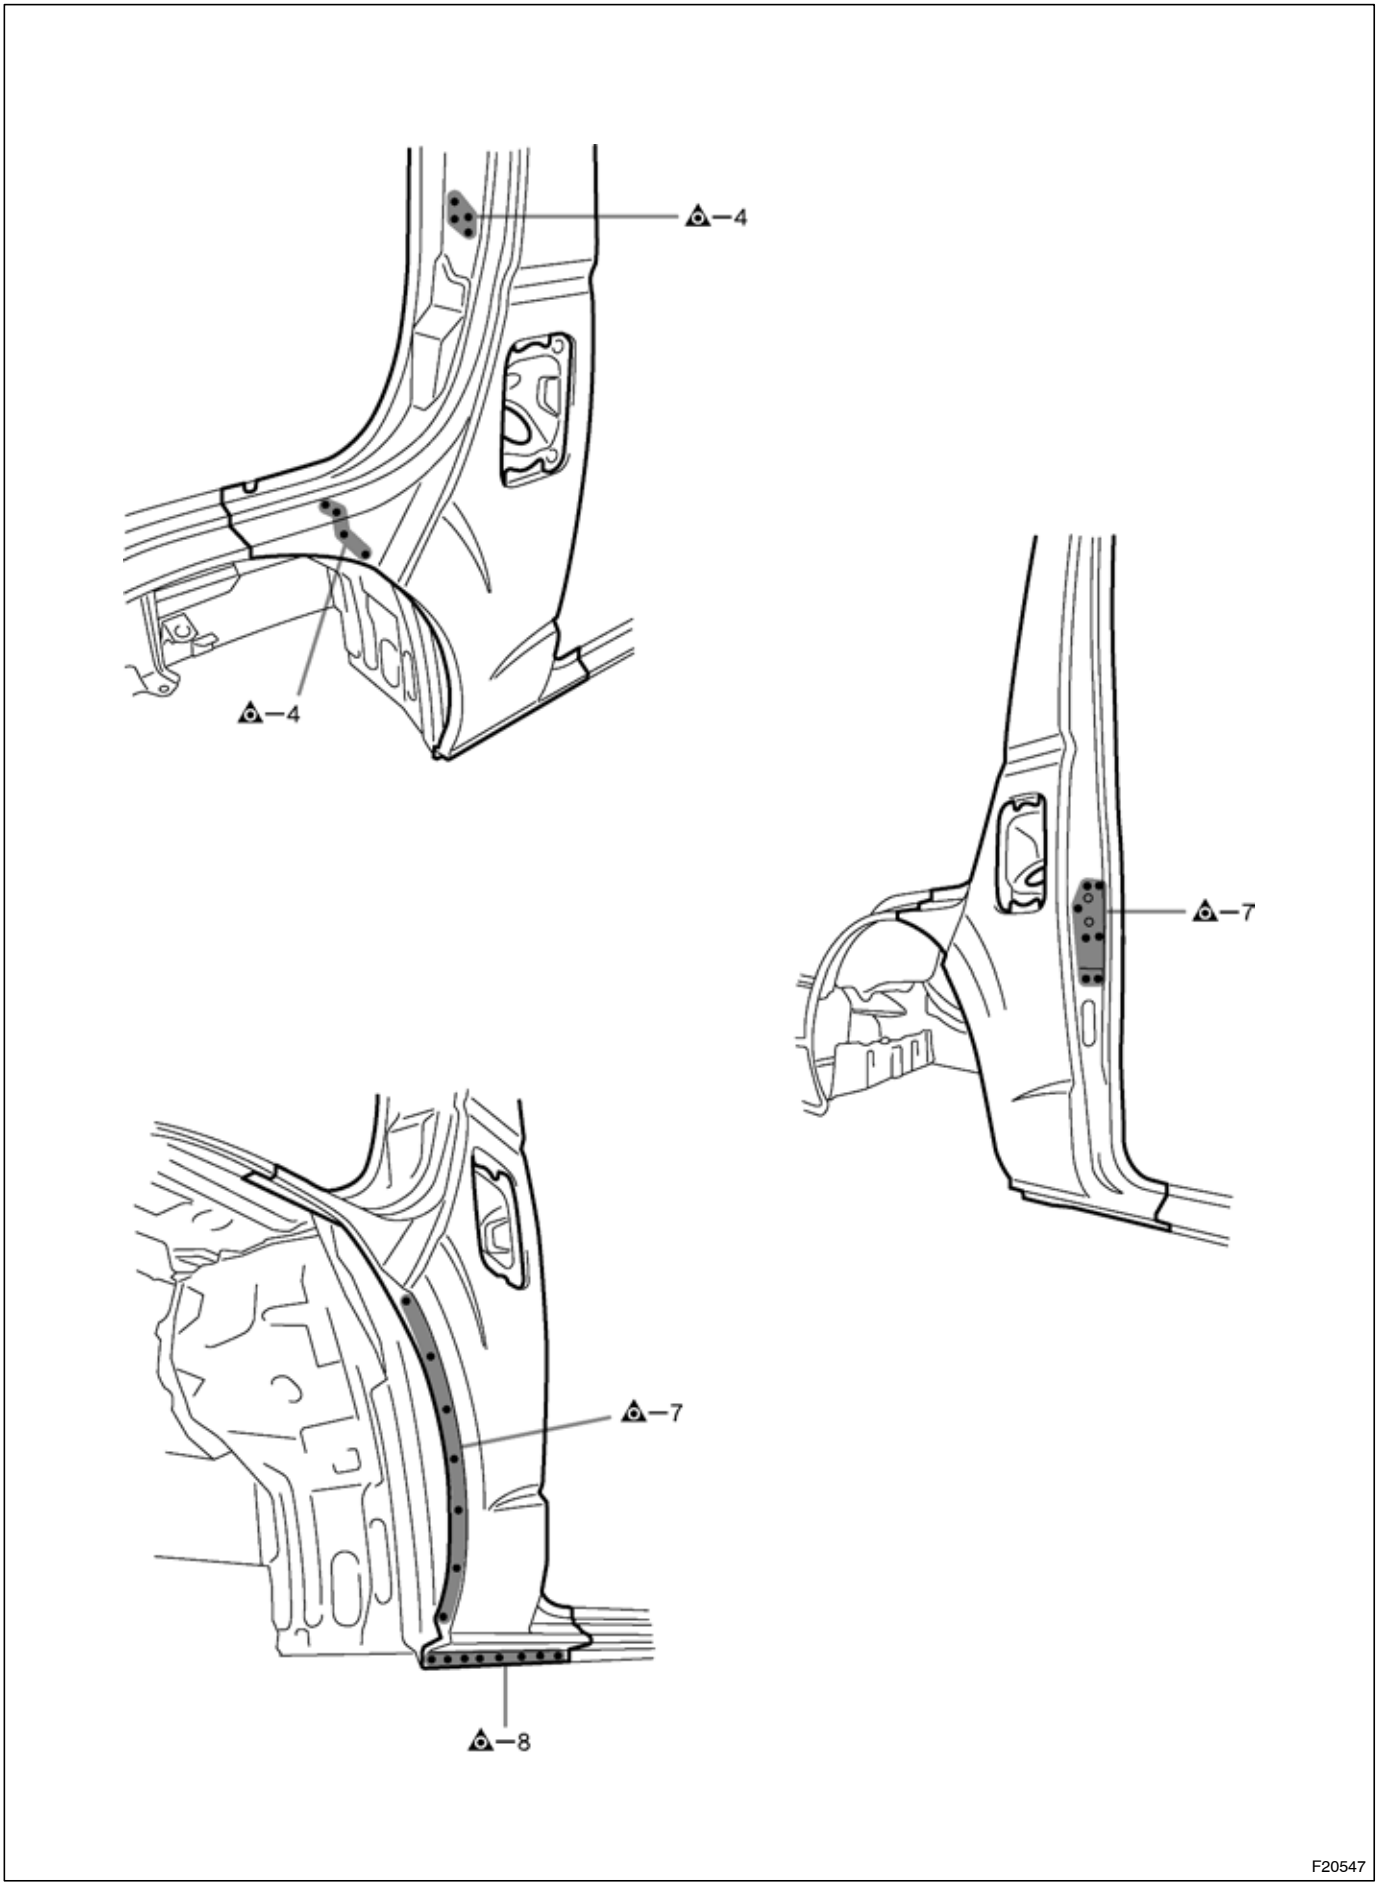
4
4
7
7
8
F20547

INSTALLATION

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

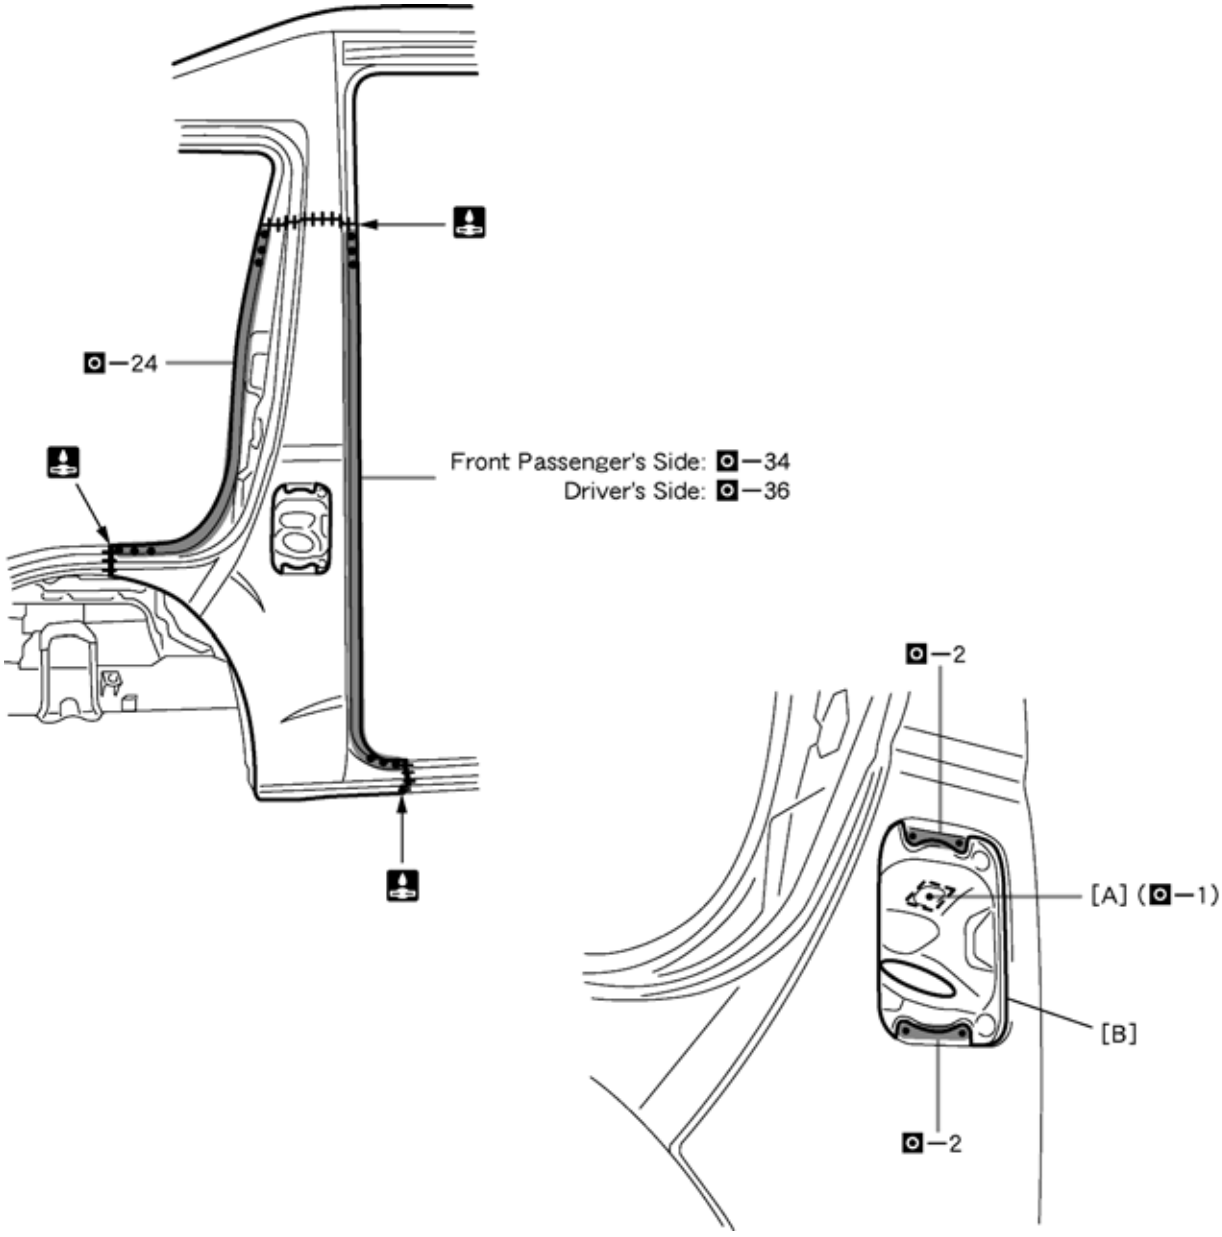


F22672

POINT

1 Inspect the fitting of the front door and slide door, etc., before welding, since this affects the appearance of the finish.

PART NAME

[A] Fuel Filler Opening Lid No.1 Stopper [B] Fuel Inlet Box

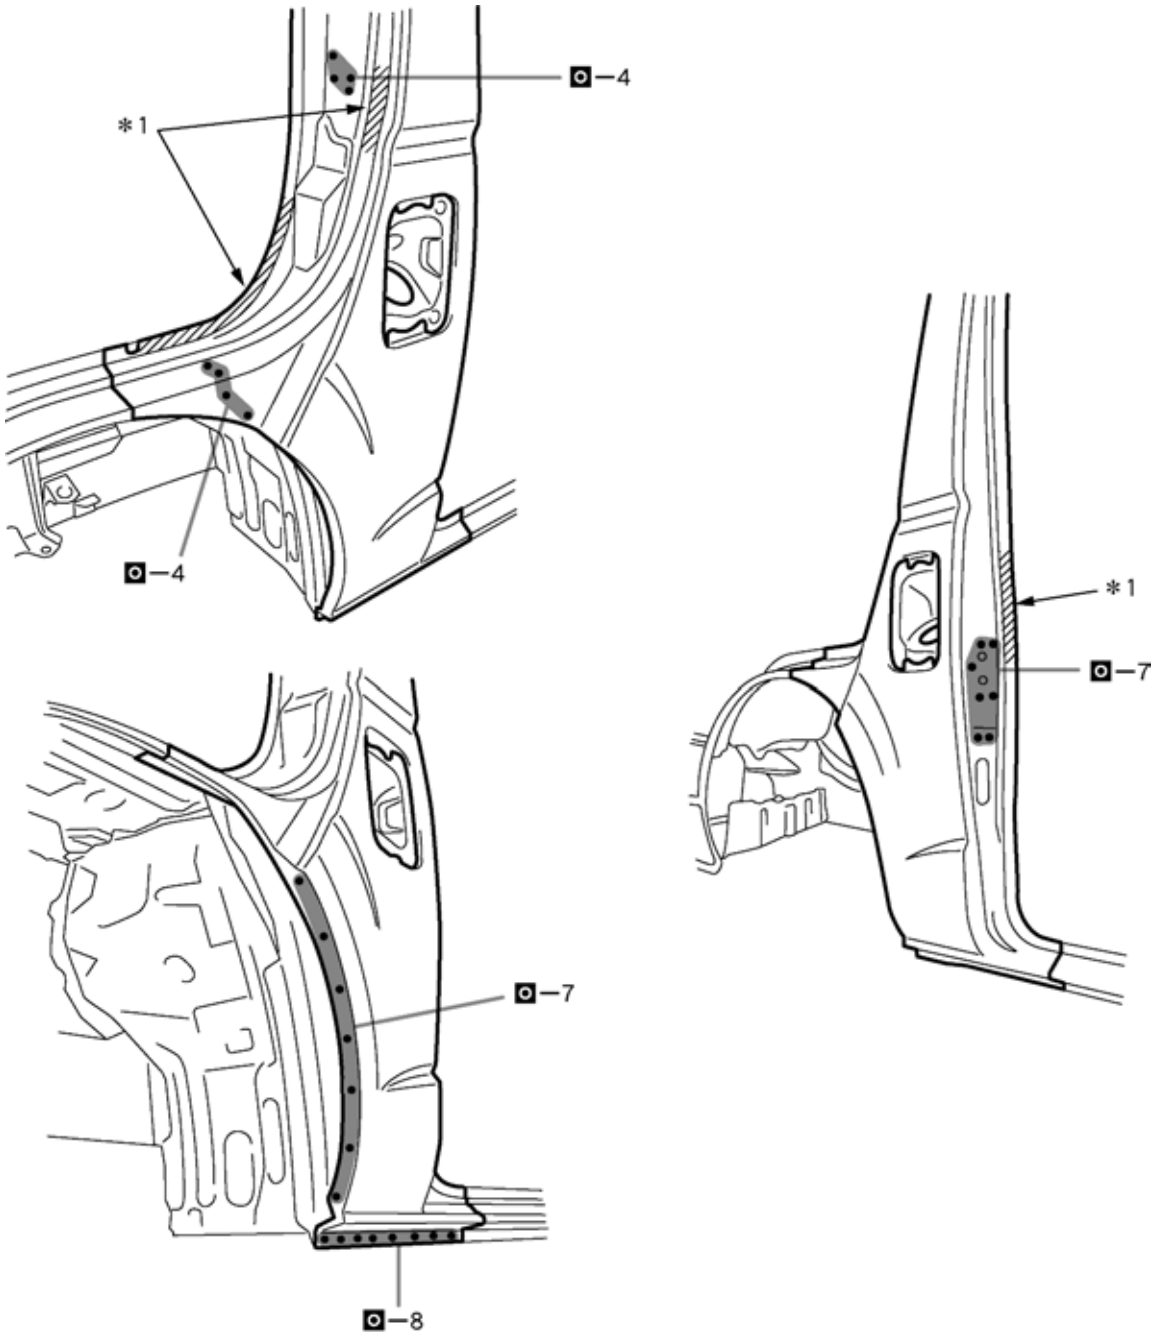

F20549

POINT

1 Apply adhesive to the area indicated by *1 in illustration.
HINT:
1) Apply enough adhesive for the panels to sick to each other.