
REAR FLOOR REAR INNER CROSSMEMBER (CUT-H): STANDARD BODY

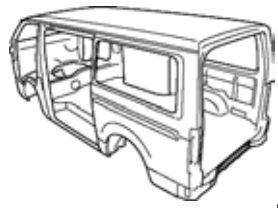



F20600A

REPLACEMENT

With the rear floor rear outer crossmember removed.

REMOVAL

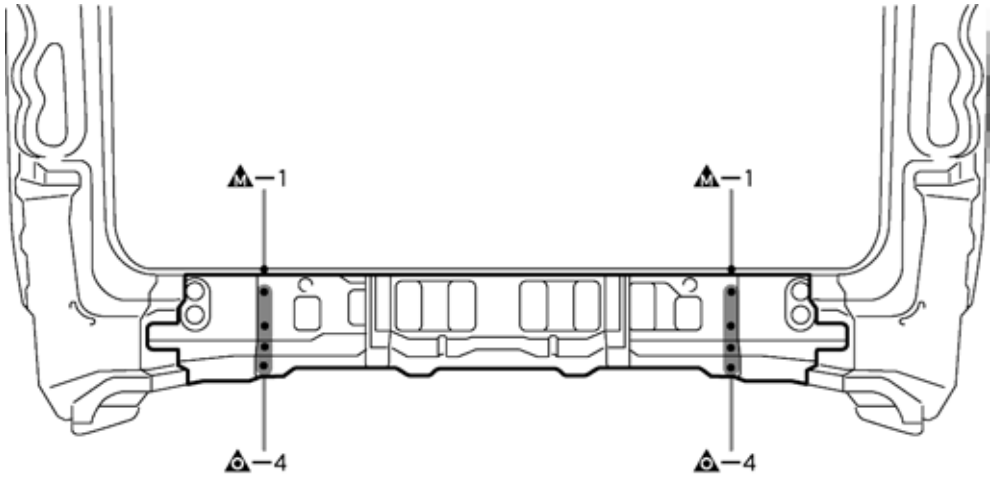


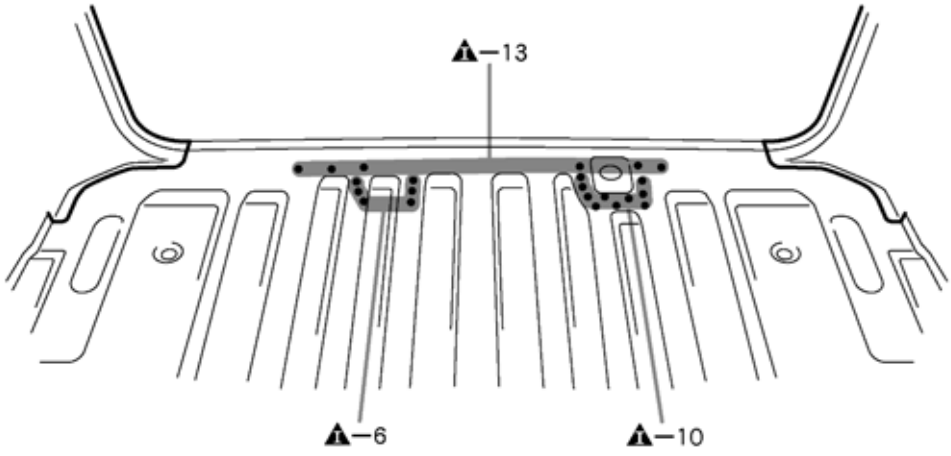

F20600

INSTALLATION

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

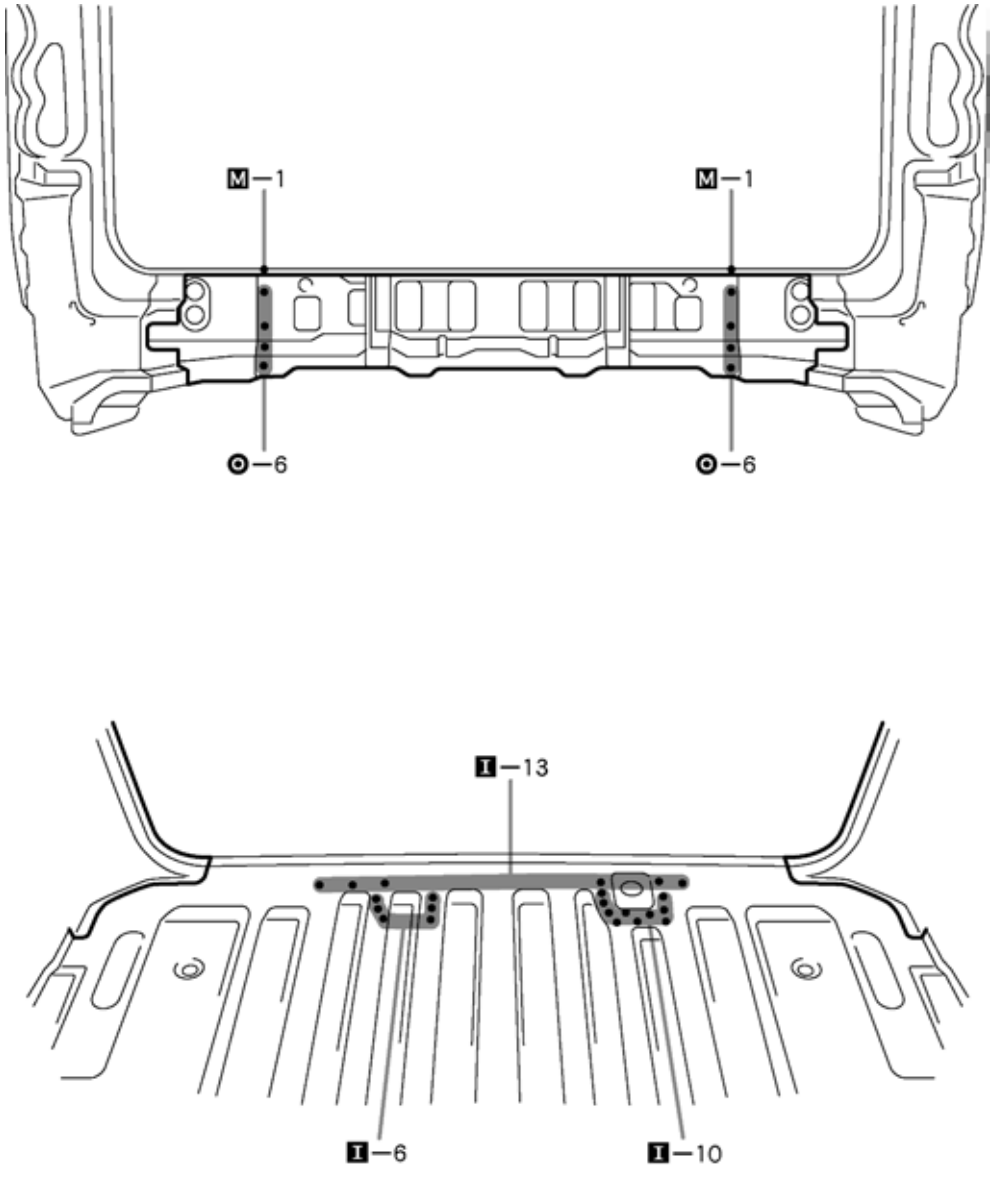

F20601

POINT

1 Inspect the fitting of the rear floor rear outer crossmember, etc., before welding, since this affects the appearance of the finish.