
BODY PANEL SEALING AREAS

HINT:
1) Prior to applying body sealer, clean the area with a rag soaked in silicone remover.
2) If weld-through primer was used, first wipe off any excess and coat with anti-corrosion primer before applying body sealer.
3) Wipe off excess body sealer with a rag soaked in silicone remover.
4) If body sealer is damaged by peeling, cracks, etc., be sure to repair as necessary.

++++++++++	Flat Finishing	————	No Flat Finishing


1. ENGINE COMPARTMENT

[Standard body]

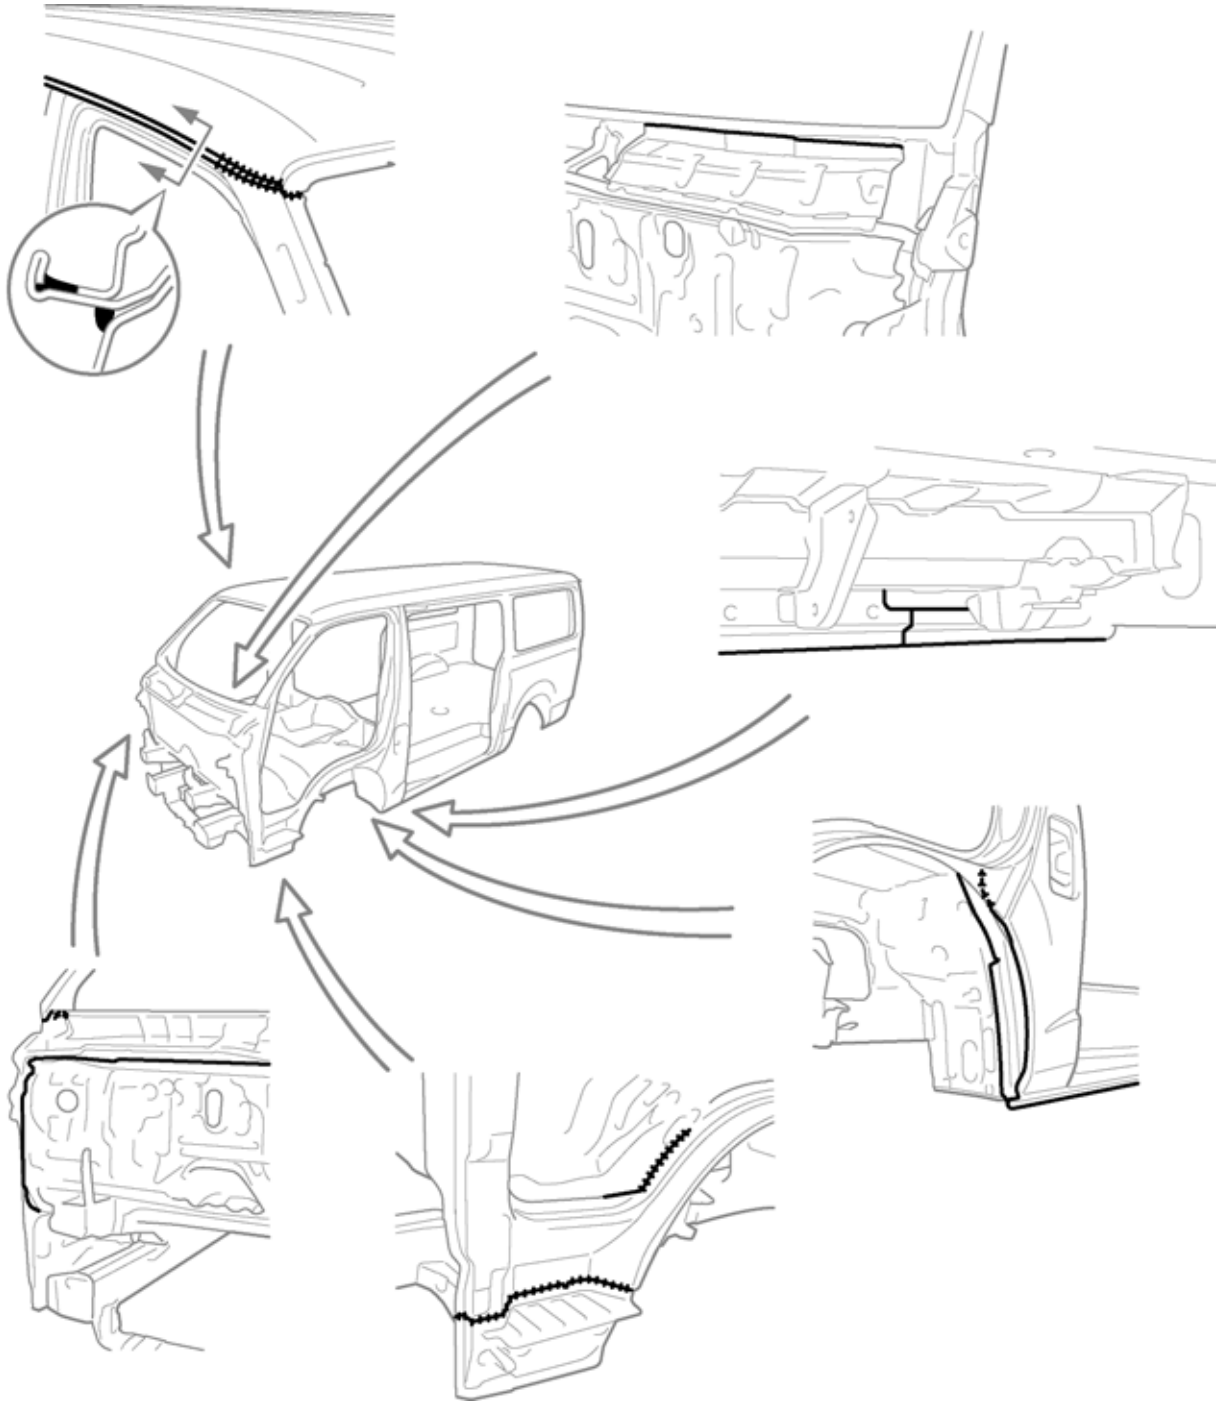

F20501


[Super long body]

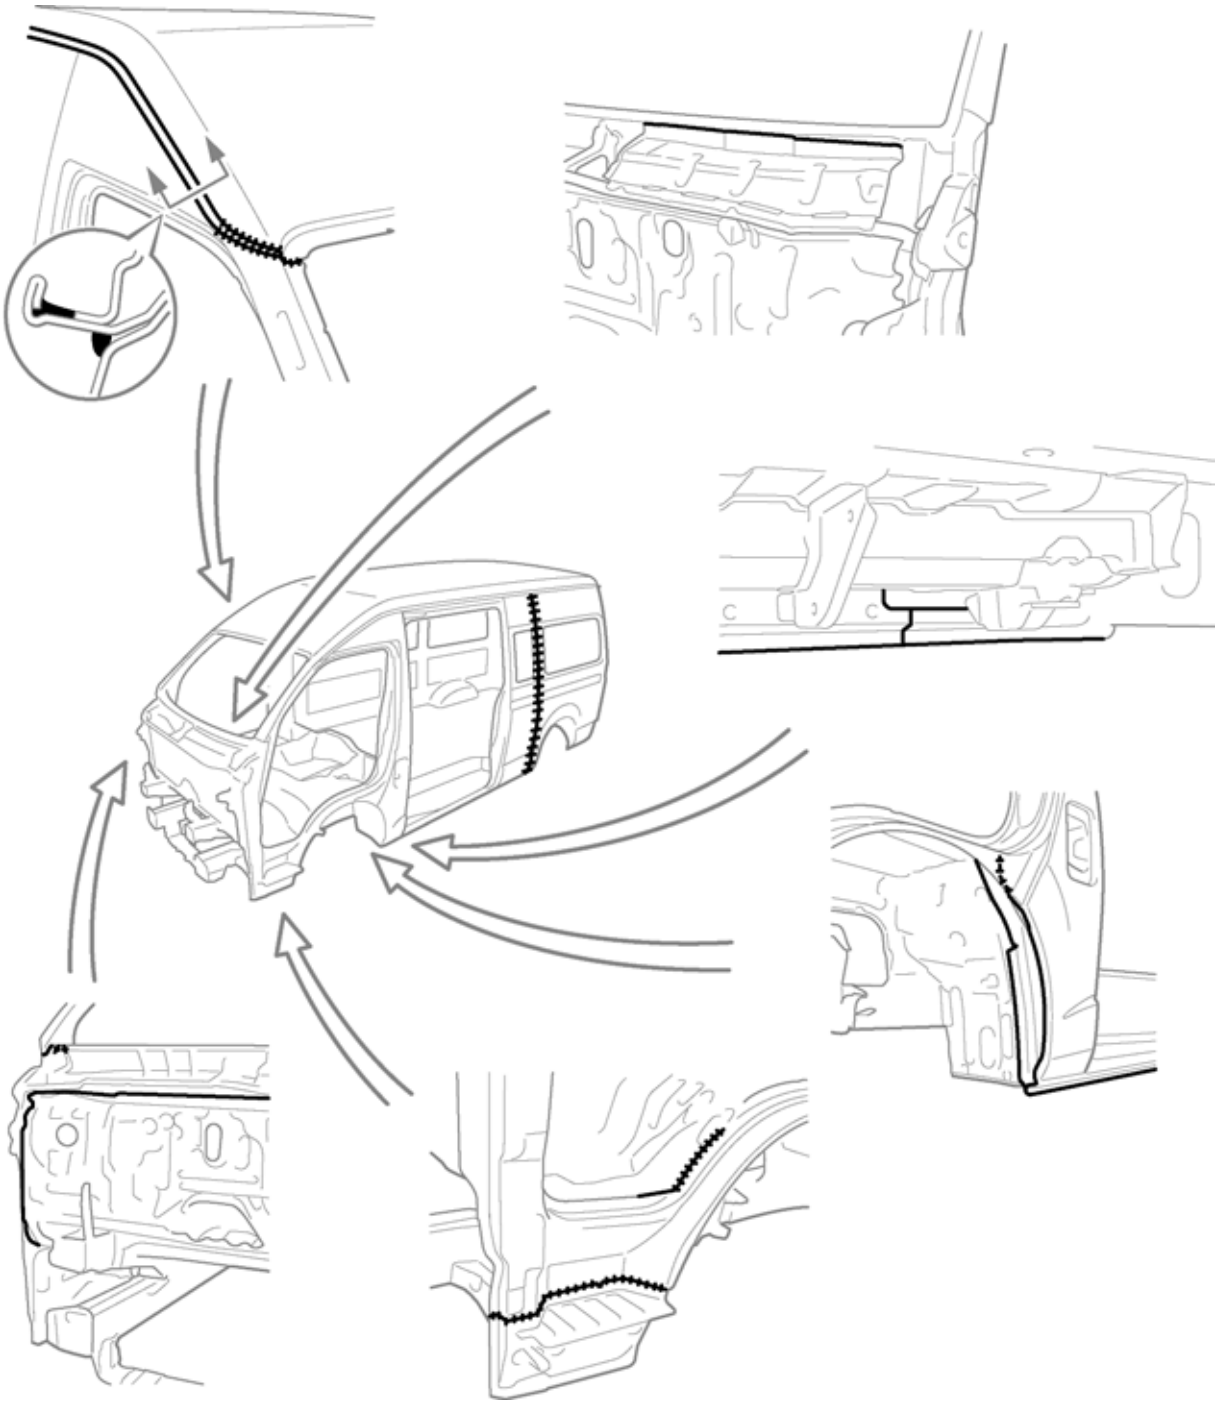

F22651


2. INSIDE

[Standard body]

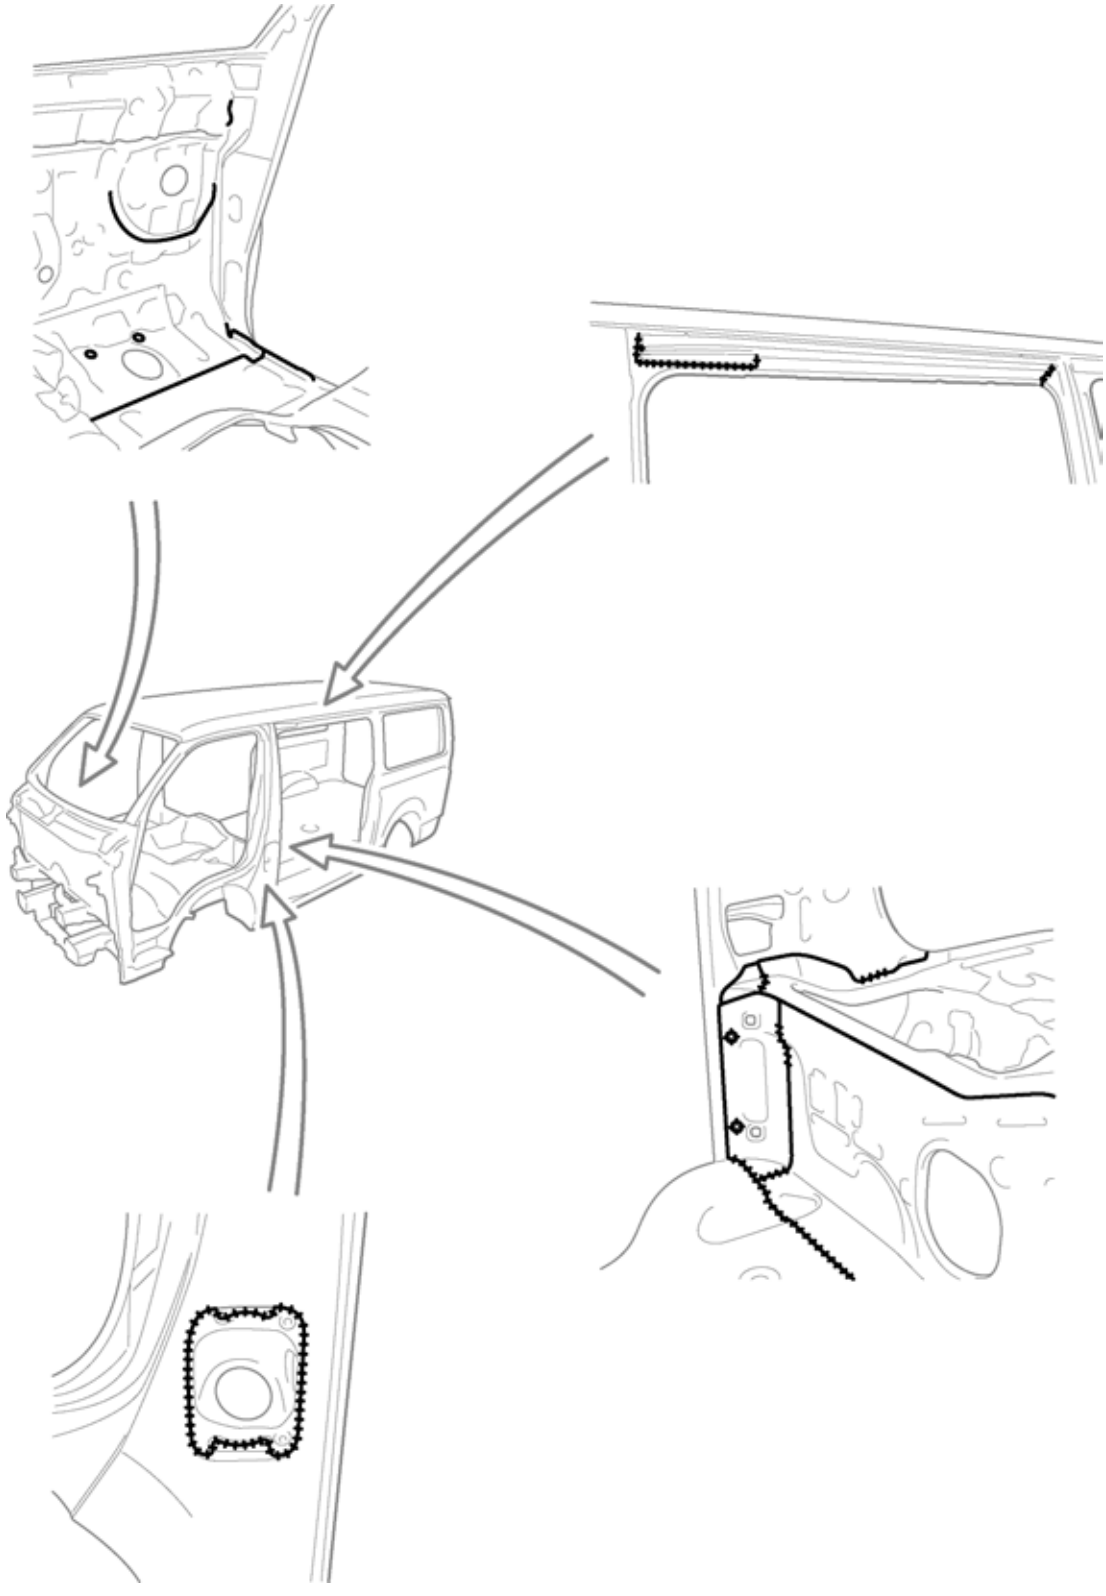


F20502

[Super long body]

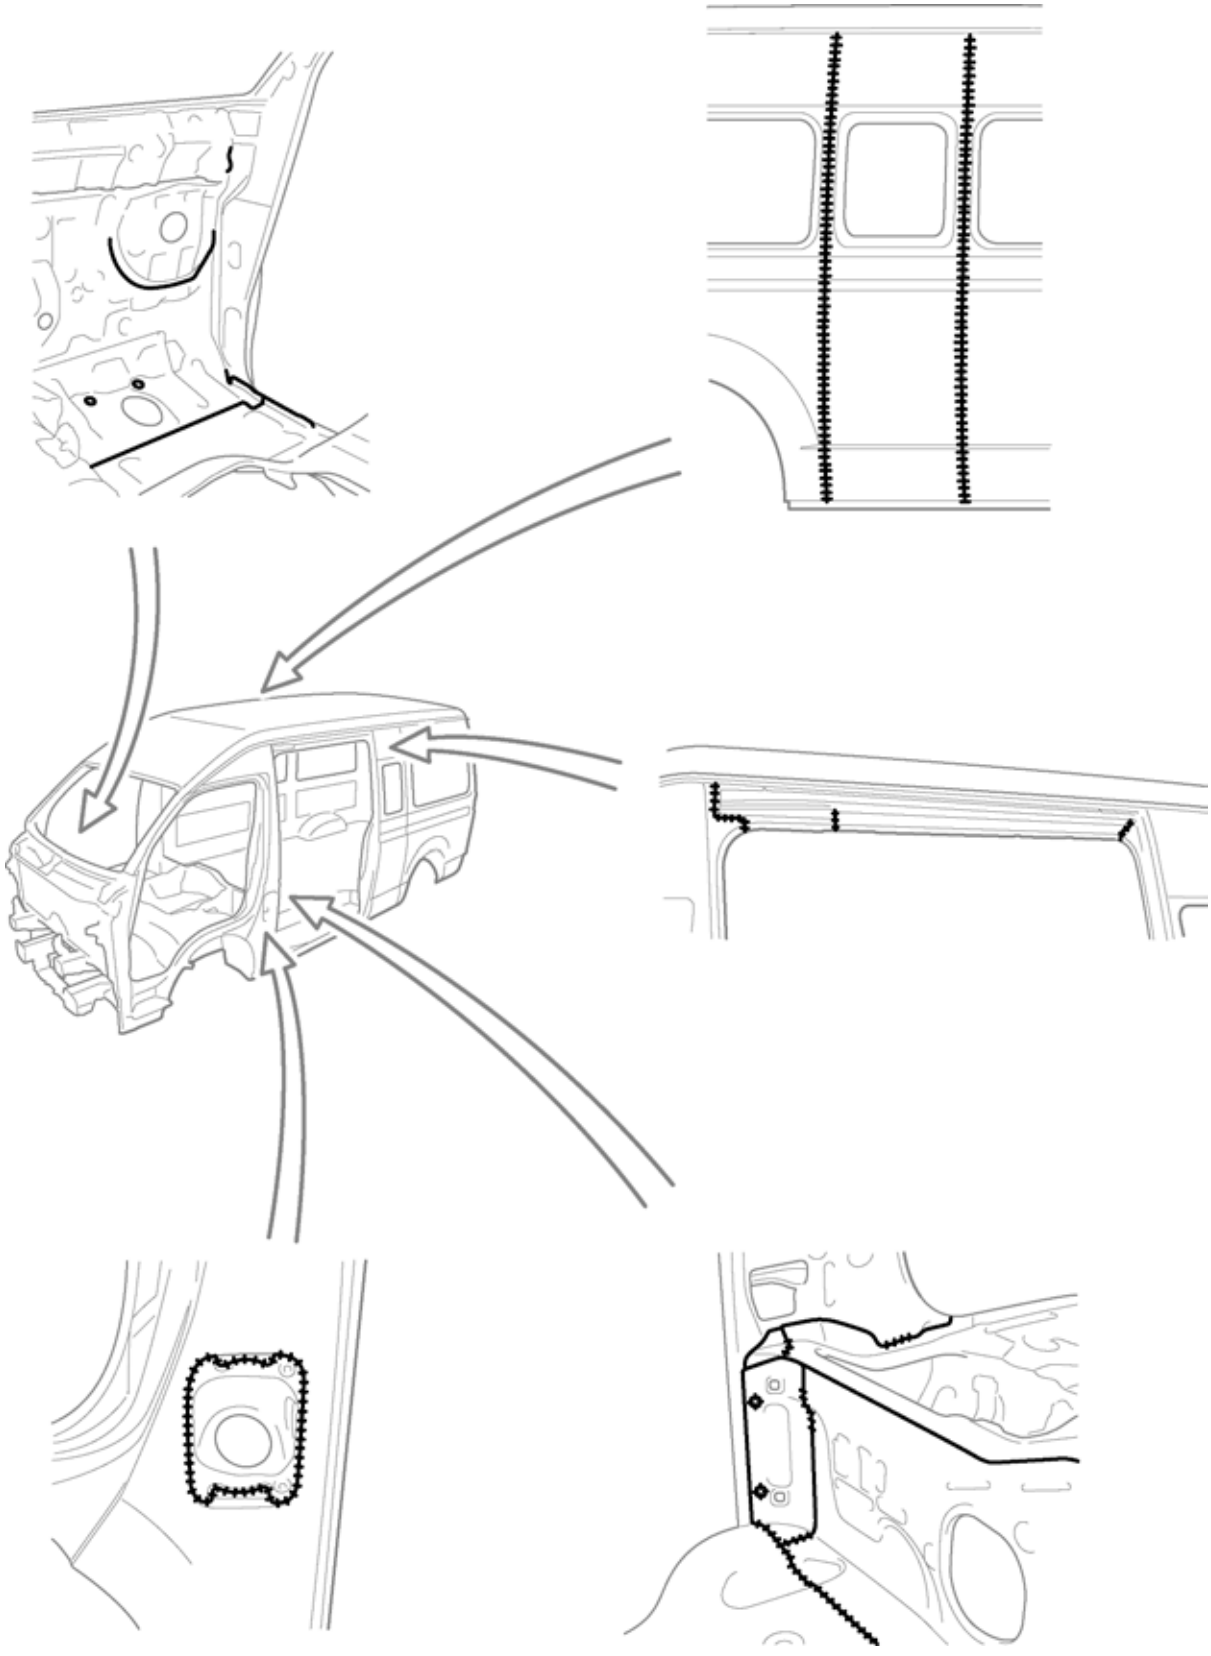


F22652

[Standard body (5-Door)]

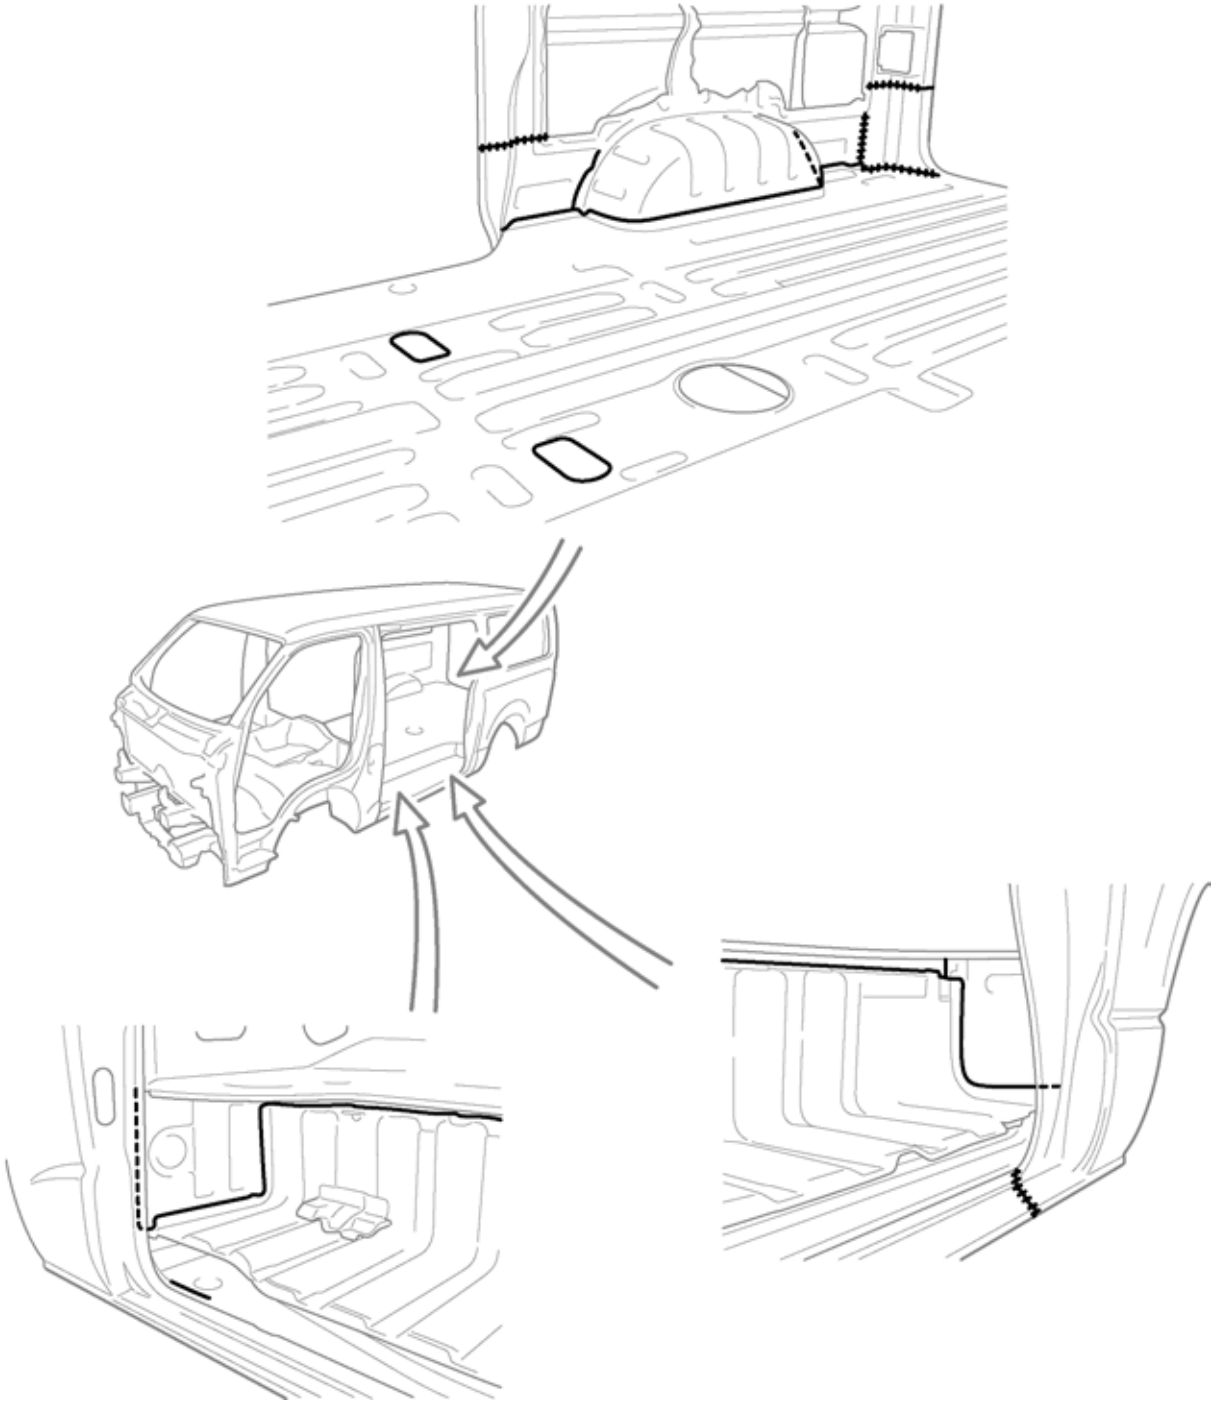


F20503


[Standard body (4-Door)]

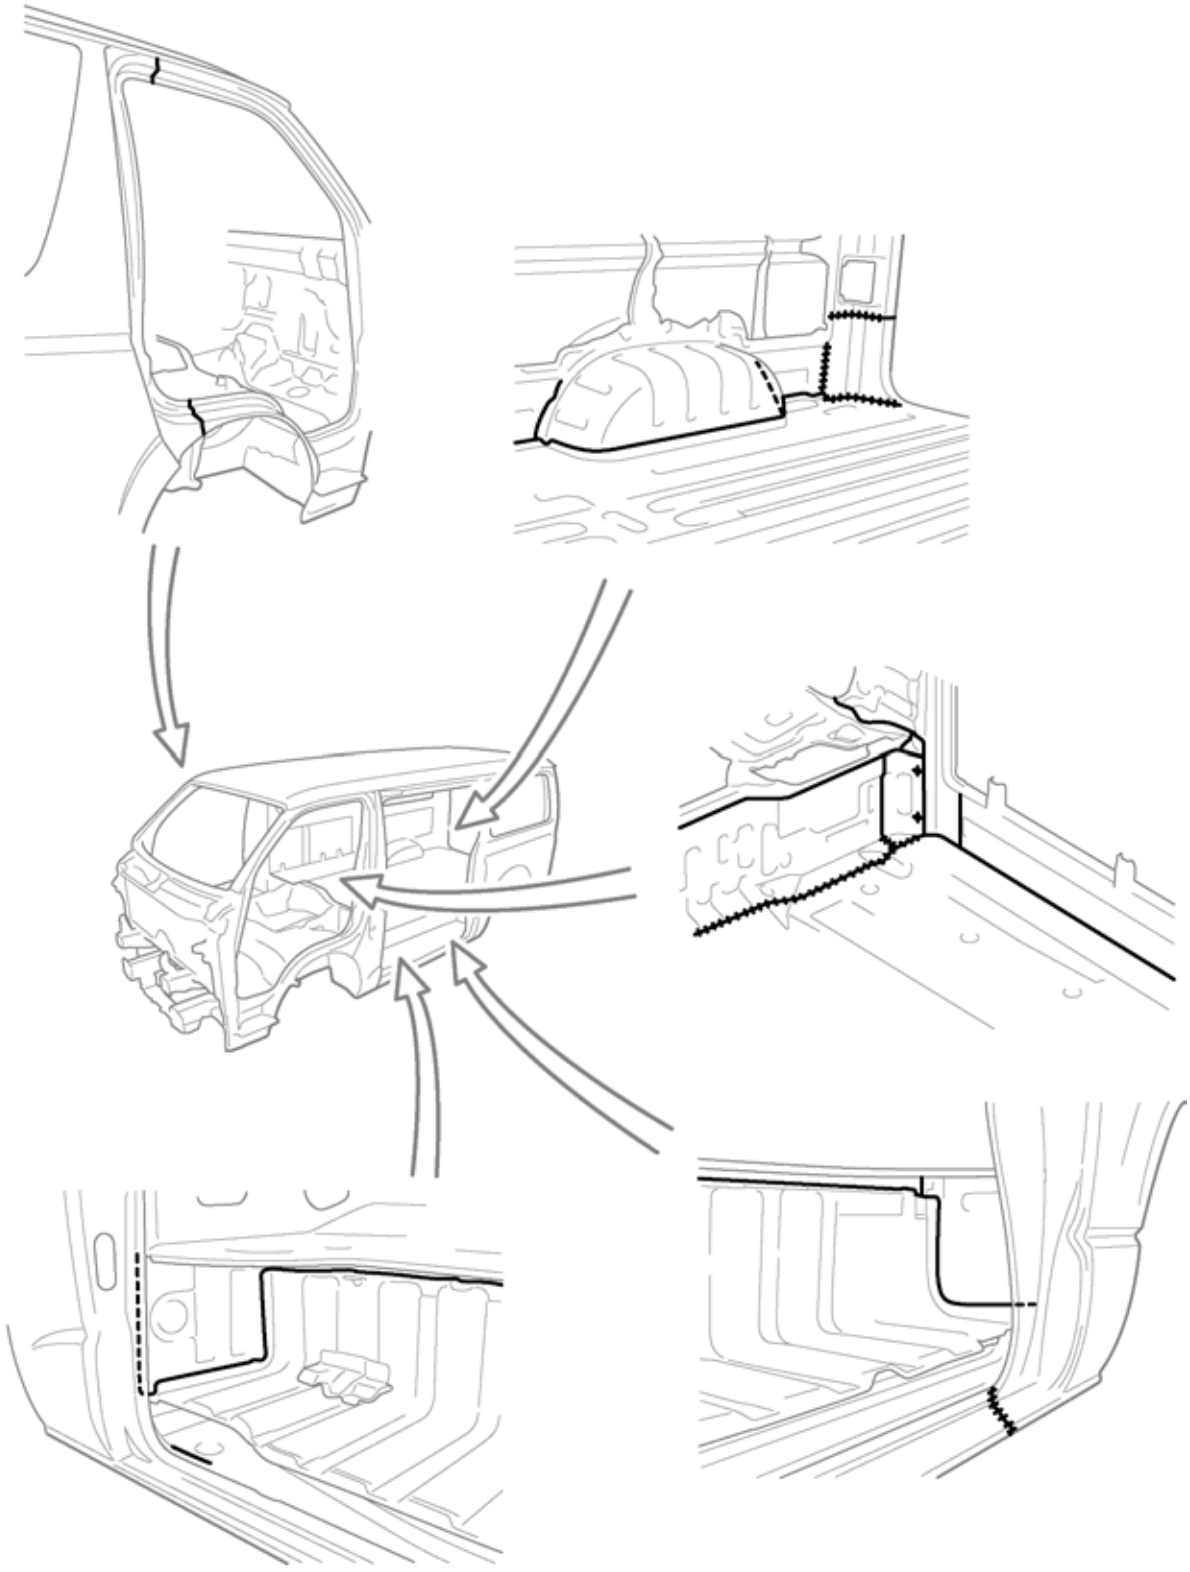


F20504

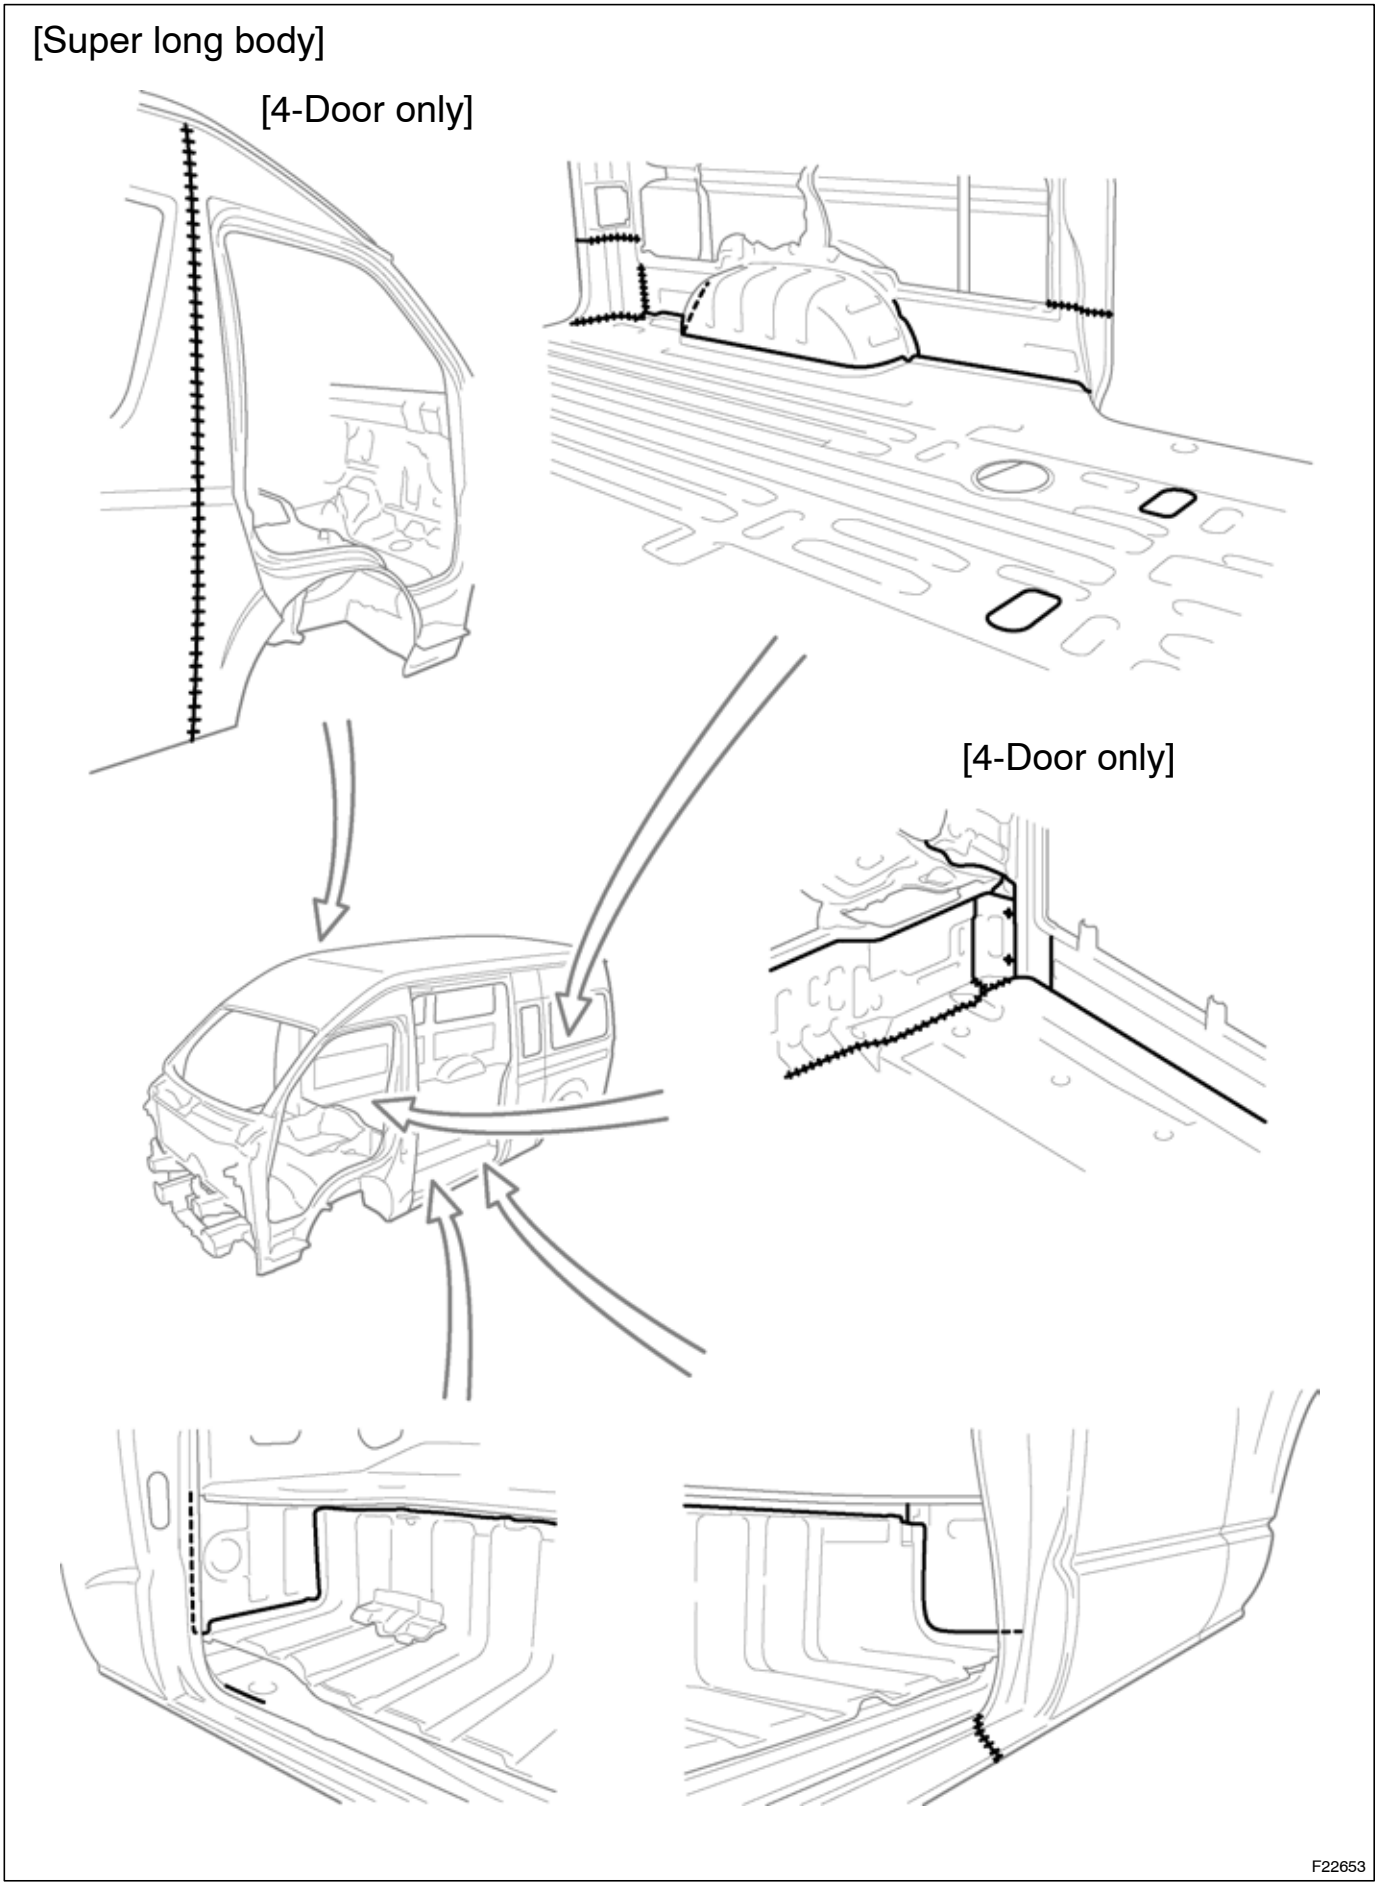
[Super long body]
[4-Door only]
[4-Door only]
F22653

3. OUTSIDE

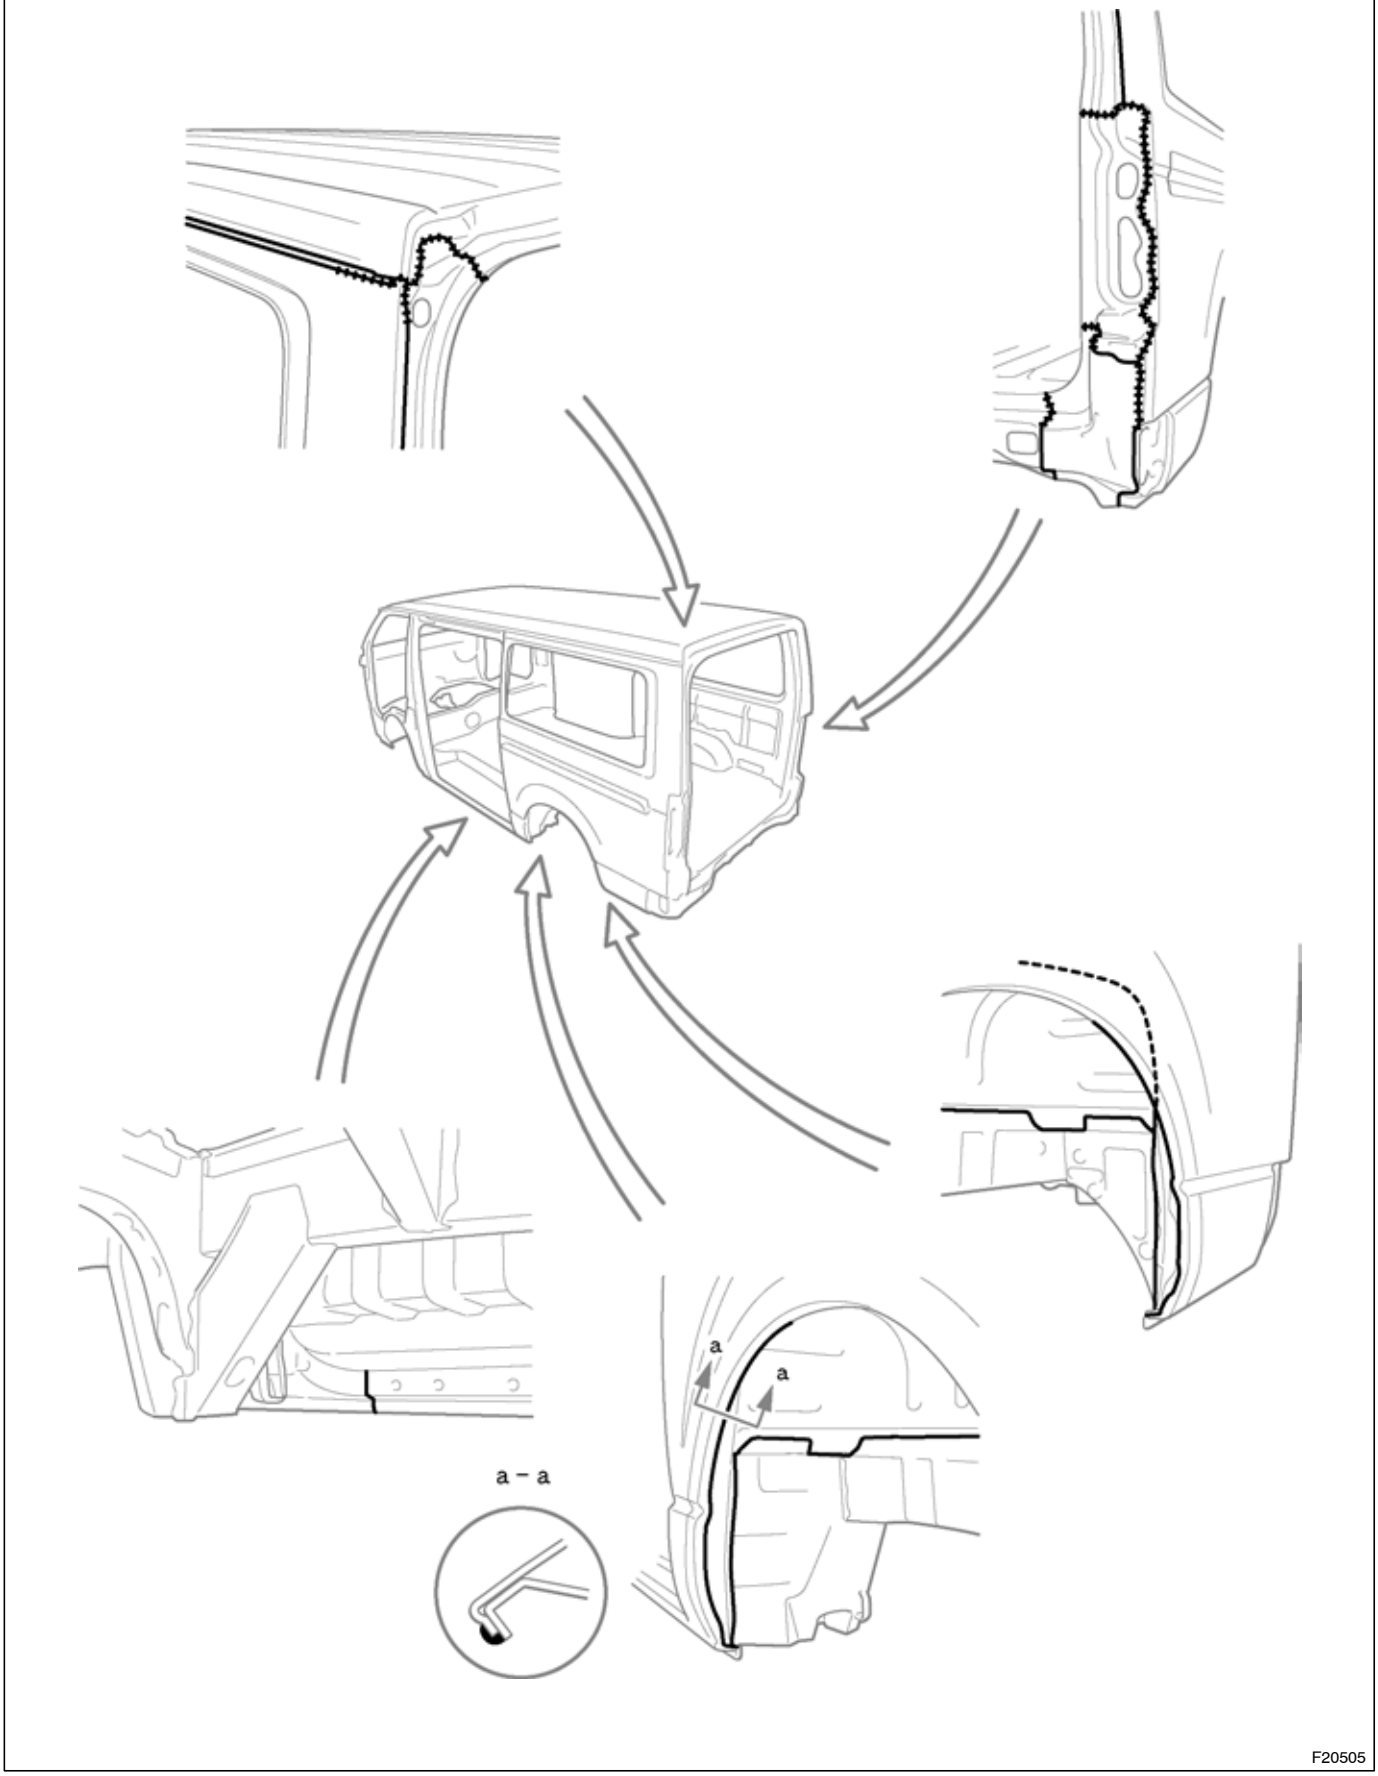


4. DOOR PARTS

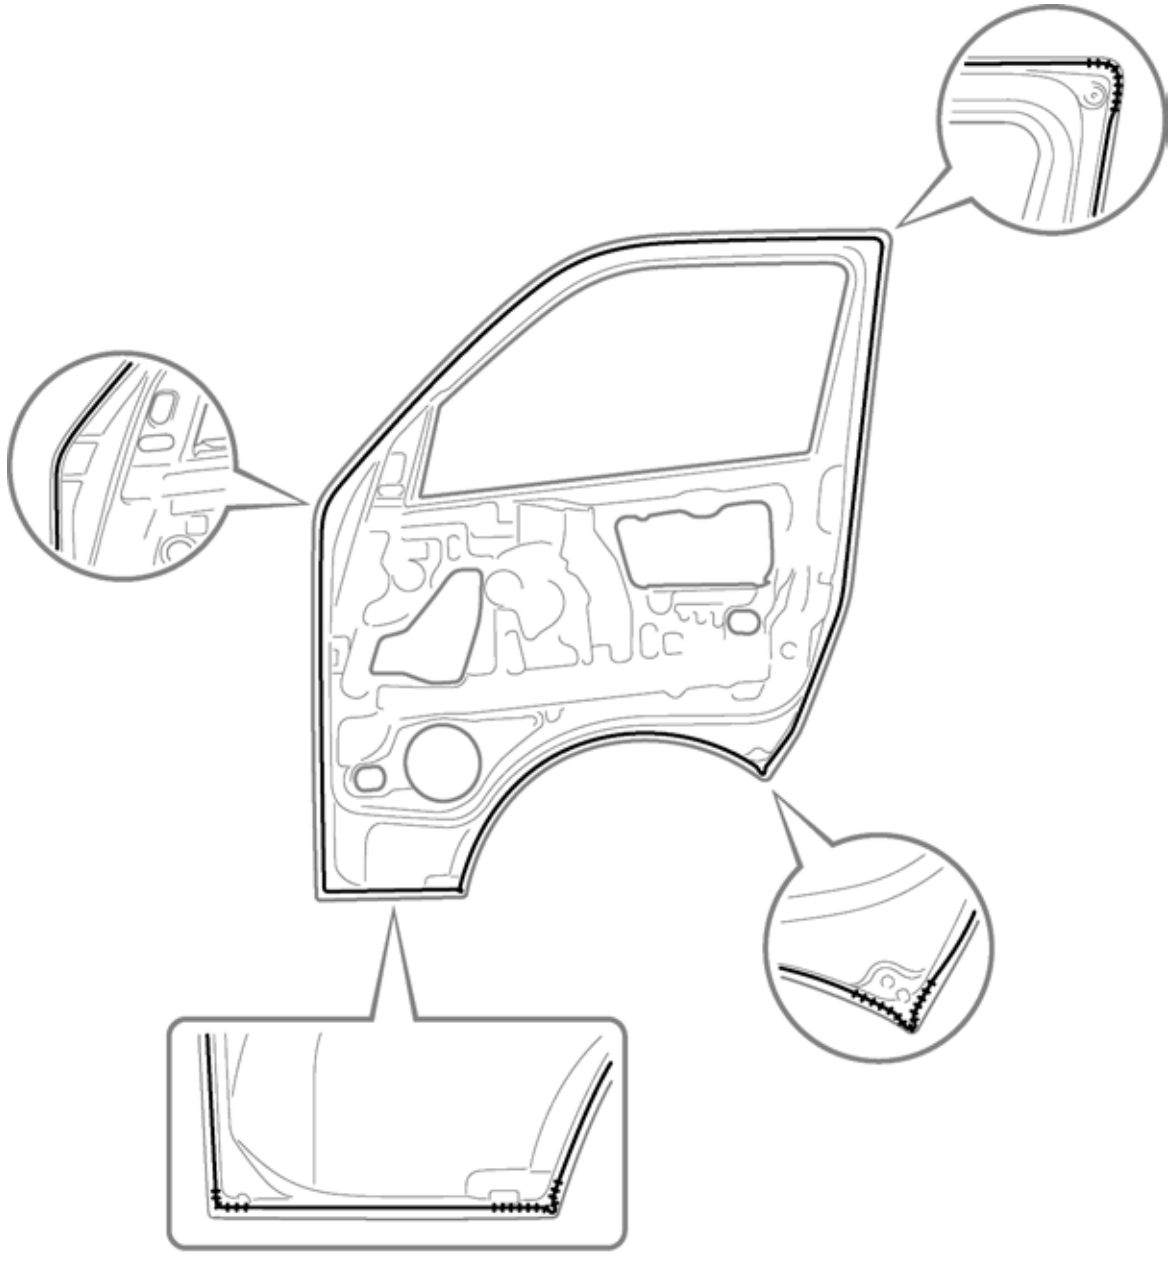


F20506

[Standard body]

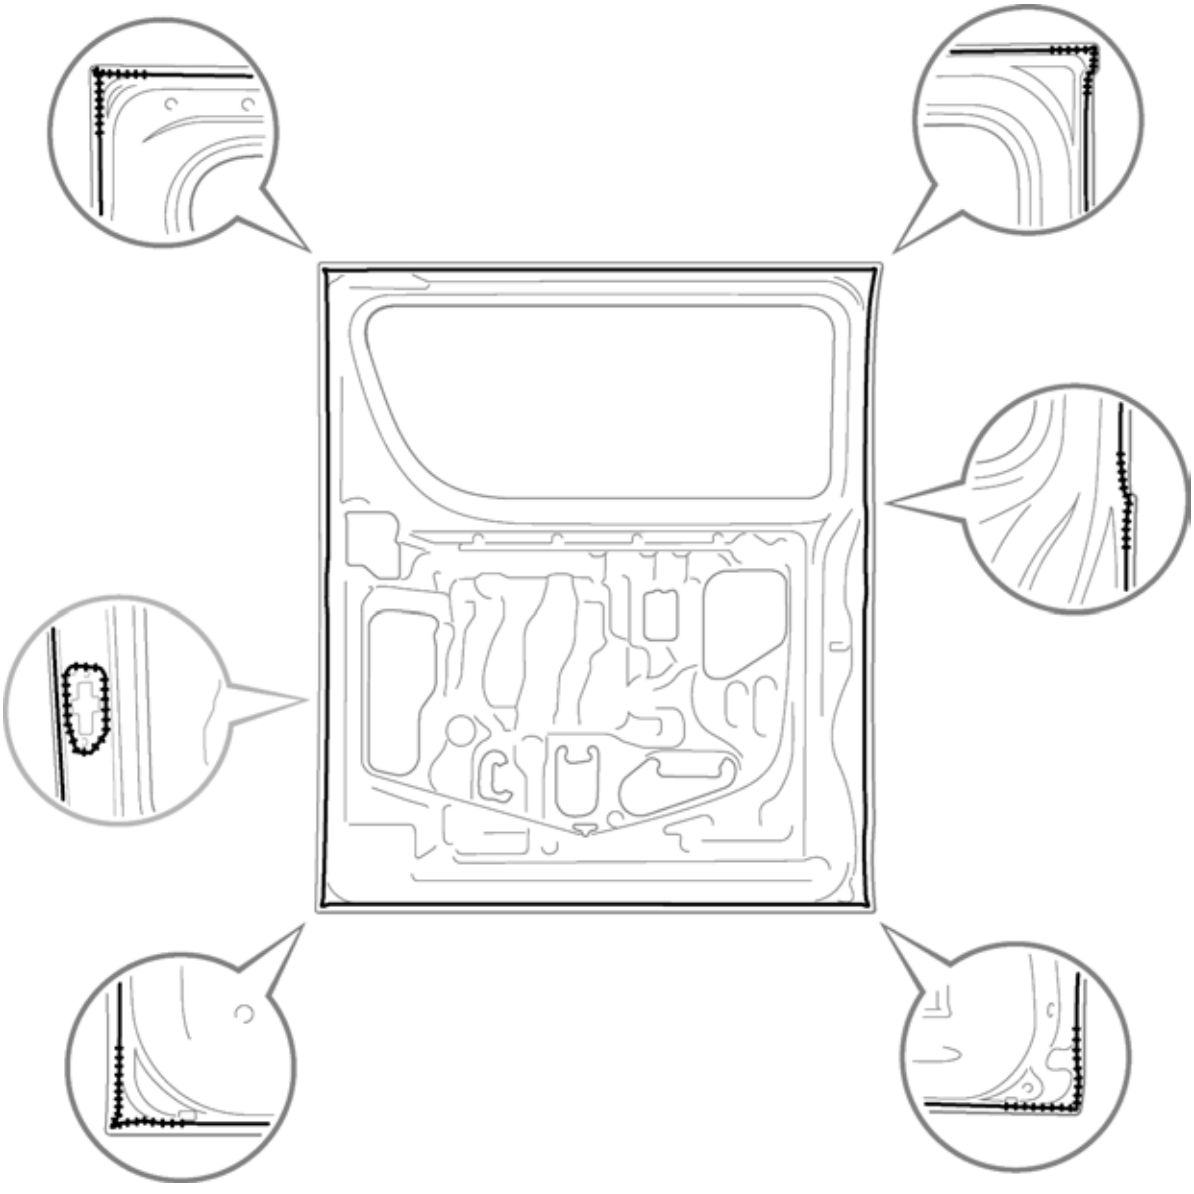


F20507

[Super long body]

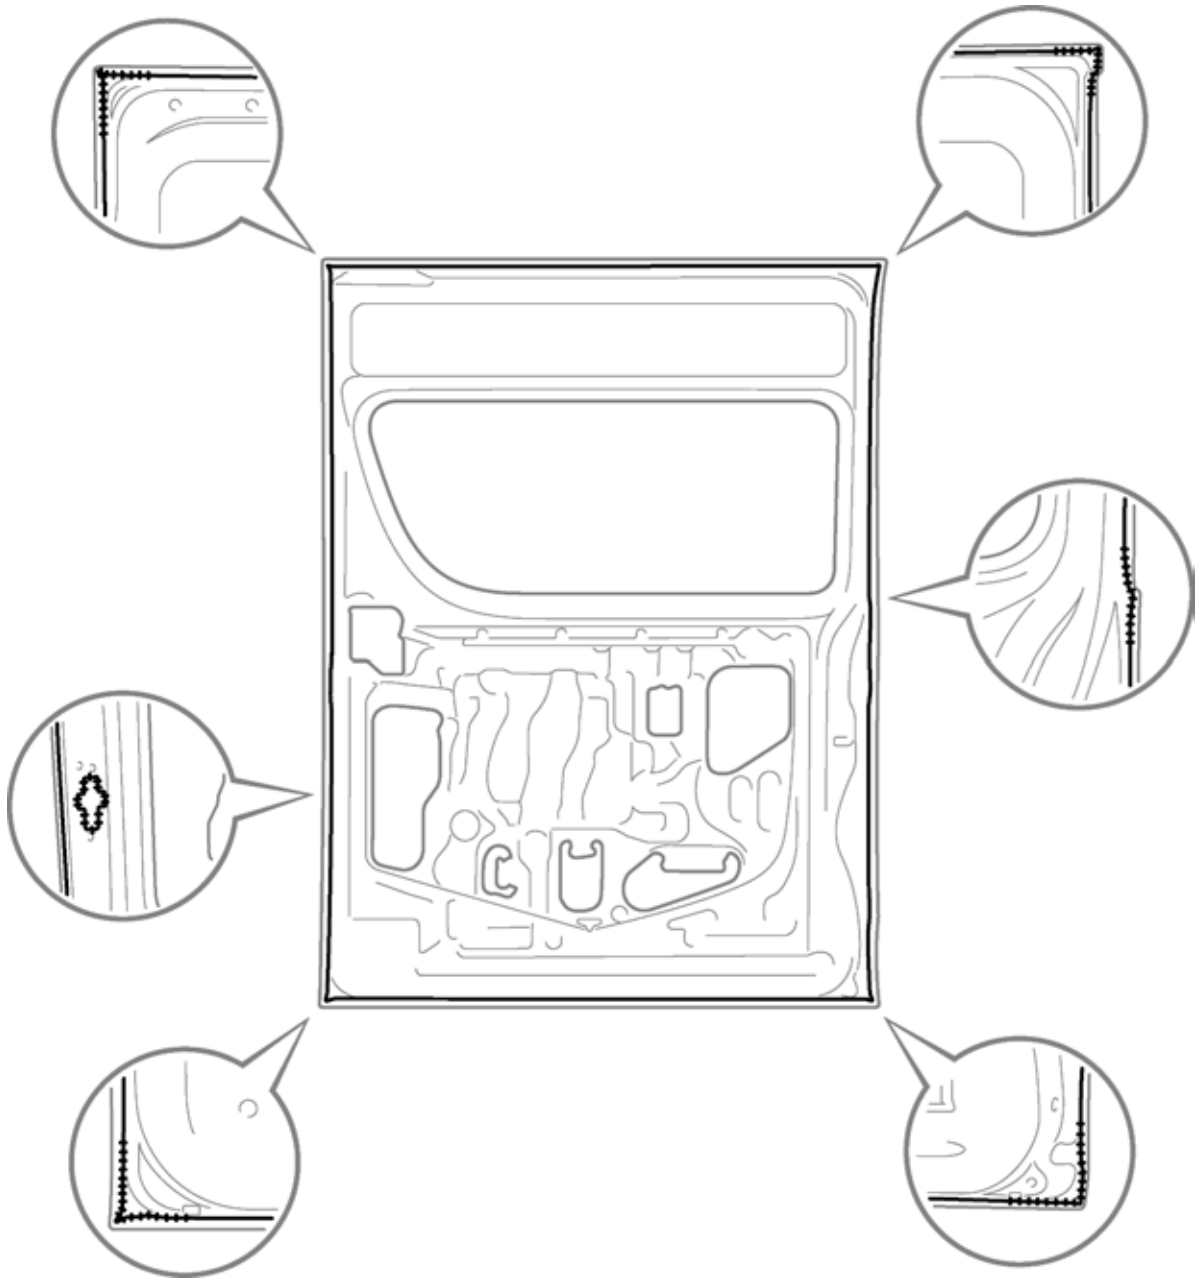

F22655

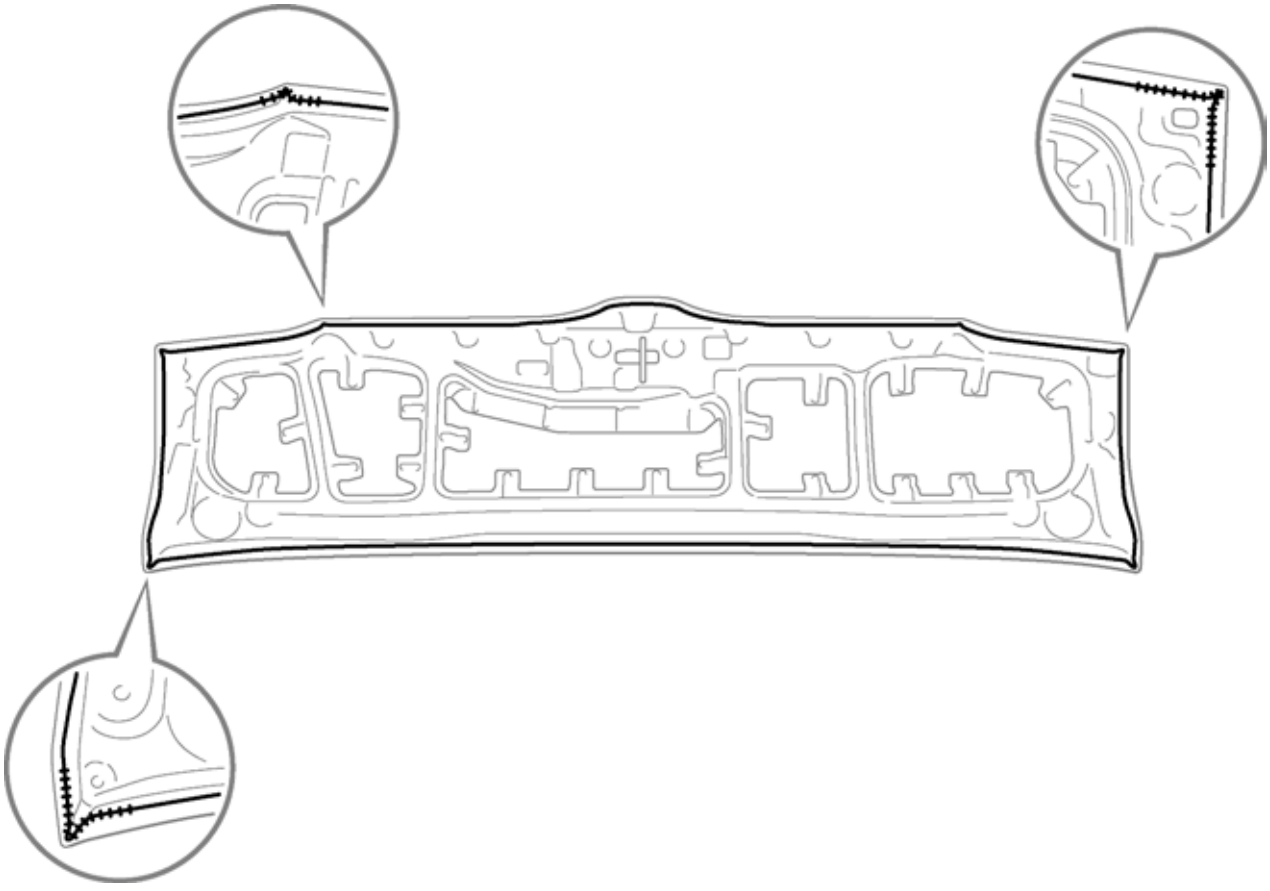

F20508


〔Standard Roof〕



〔Middle Roof〕



〔High Roof〕

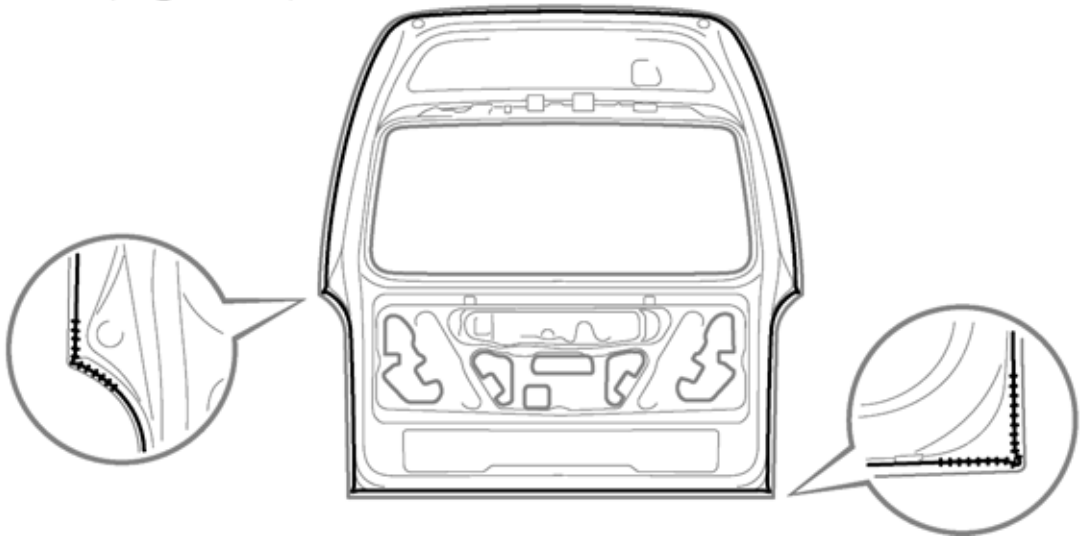

F20509