
BODY PANEL UNDERCOATING AREAS

HINT:
1) *First wipe off any dirt, grease or oil with a rag soaked in silicone remover.*
2) *Cover the surrounding areas with masking paper to avoid coating unnecessary areas. If other areas are accidently coated, wipe off the coating immediately.*
3) *Apply the first coating of undercoat to all welded areas and panel joints, then apply a second coat over the entire area.*
4) *Do not coat parts which become hot, such as the tailpipe, or moving parts, such as the propeller shaft.*
5) *Besides the locations described below, apply undercoating to all weld points under the body to insure corrosion prevention.*
6) *Be sure to seal the edge of the flange of the member and bracket with undercoating.*
7) *If undercoat is damaged by peeling, cracks, etc., be sure to repair as necessary.*
8) *Before the undercoat apply sealer allowing rust prevention to be attained.*


[Standard body]

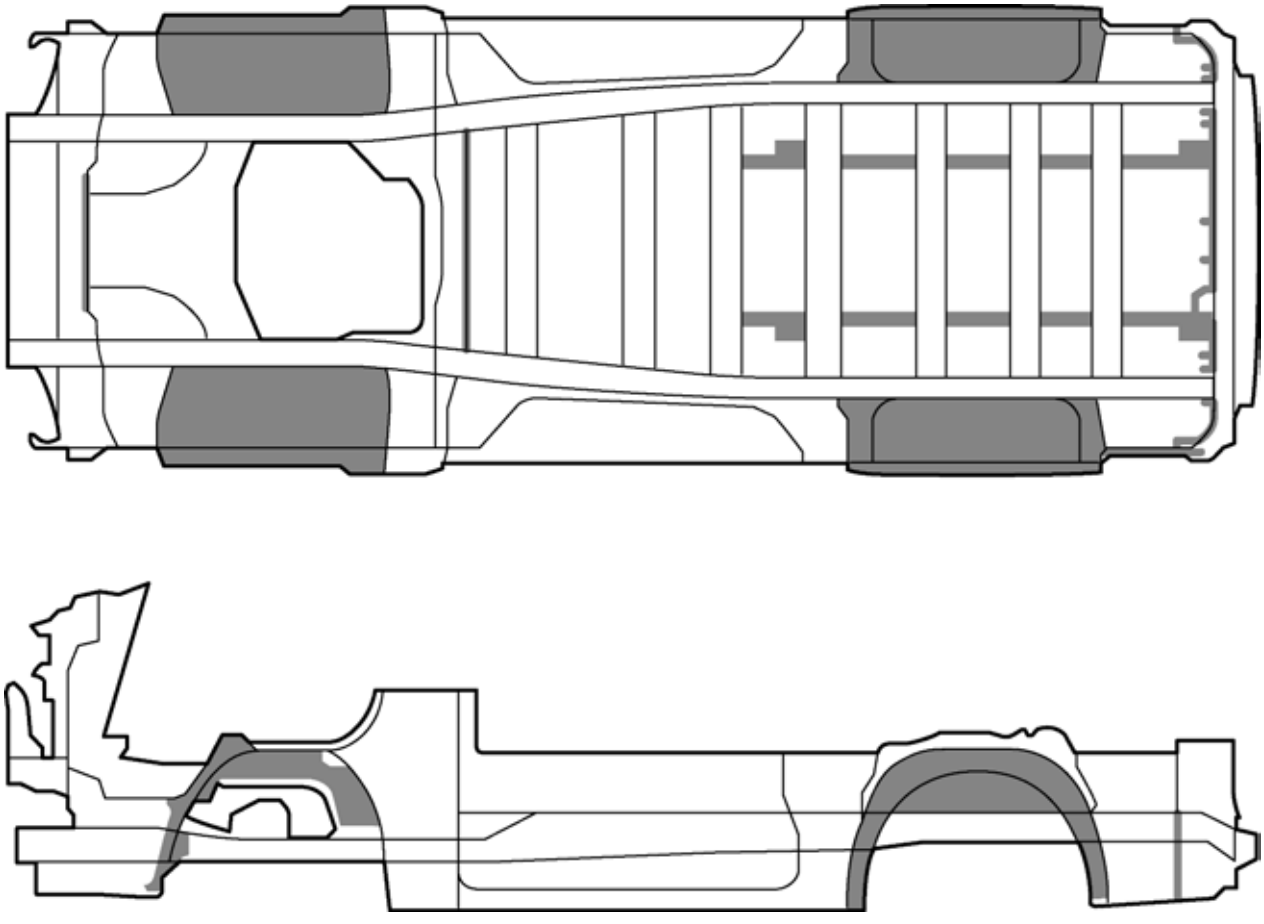

F20511

REFERENCE
Referring to the notes above, undercoating should be applied according to the specifications for your country.

[Super long body]

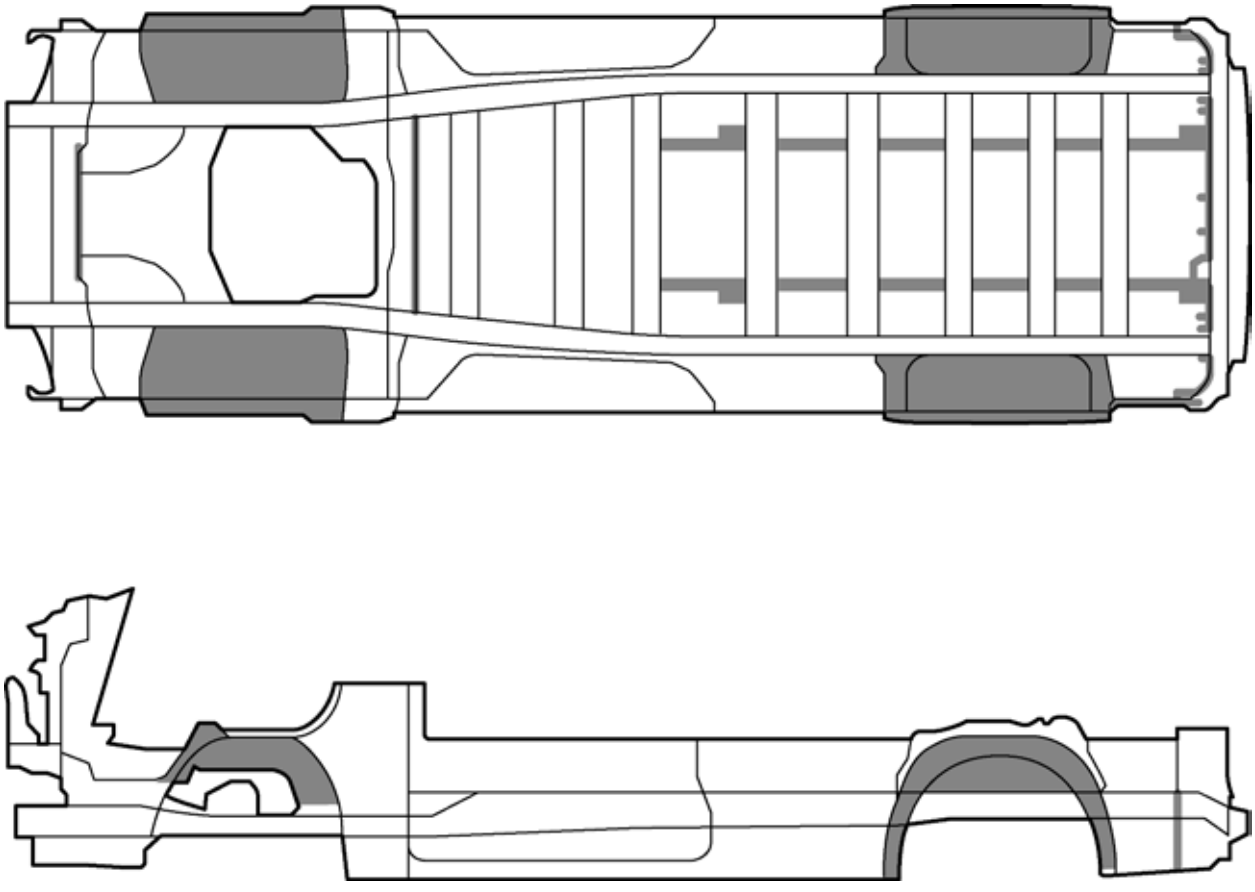

F22657