
■LIGHT REMINDER SYSTEM

- This system is used as standard equipment on the all model.
- This system sounds the multi buzzer in the combination meter to warn the driver that the lights remain ON if the driver's door is opened with the ignition key turned from the ON to ACC or LOCK positions and the headlights or taillights ON. The multi buzzer is located inside the combination meter.
- This system is controlled by the meter ECU.


▶ System Diagram ◀

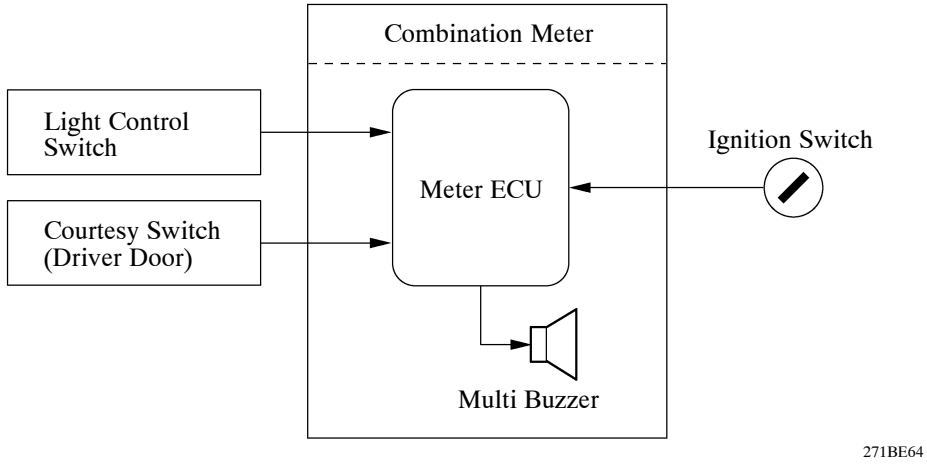

■AUTOMATIC LIGHT CONTROL SYSTEM

- The automatic light control system has been provided for the super wagon for Thailand as standard equipment.
- When the light control switch at the AUTO position, the automatic light control sensor detects the ambient light and automatically turns the headlights and taillights ON or OFF accordingly.
- The automatic light control sensor is integrated with the solar sensor that is used in the automatic air conditioning system.
- This system is controlled by the Body ECU.

▶ System Diagram ◀

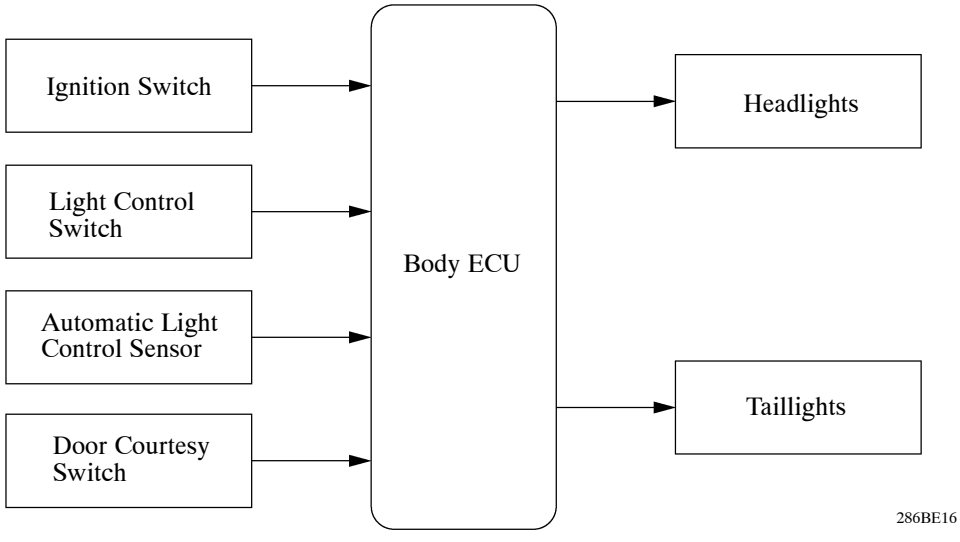

BE