POWER WINDOW SYSTEM

■ DESCRIPTION

- The power window system is used for the driver and passenger seats on the new model.
- A power window system has the following function.

Destinations	Australia	G. C. C. Countries		Russia & Ukraine	General Countries			
Vehicle Type	—	—	—	—	Van		Commuter	
Grade	—	GL	DX	GL	GL	DX	GL	DX
Seating Capacity and Rear Side Window	—	—	—	—	6, Half-Panel		—	—
Jam Protection	Option	Standard	Option	Standard	Standard or Option*1		Standard	Standard or Option*2


*1: Set as optional equipment other than on the 6, half-panel model

*2: Set as standard equipment only on the 4-door high roof wide body commuter model with the 2KD-FTV engine

- This system has the following functions:

Function	Outline
Manual Up-and-down	This function causes the window to open or close while the power window switch is being pulled halfway up or pushed halfway down. The window stops as soon as the switch is released.
Driver's Door One-touch Auto Up-and-down	The one-touch auto up-and-down function enables the window of driver's door to be fully opened or closed at a touch of the power window switch.
Key-off Operation	The driver's door key-off operation function makes it possible to operate the power window for approximately 45 seconds after the ignition switch is turned to the ACC or LOCK position, if the driver's door is not opened.
Jam Protection	A jam protection function automatically stops the power window and moves it downward if a foreign object gets jammed in the driver's door window during one-touch auto-up operation.
Remote Control	The up-and-down operations of the front passenger door window can be controlled by the power window master switch.

▶ System Diagram ◀

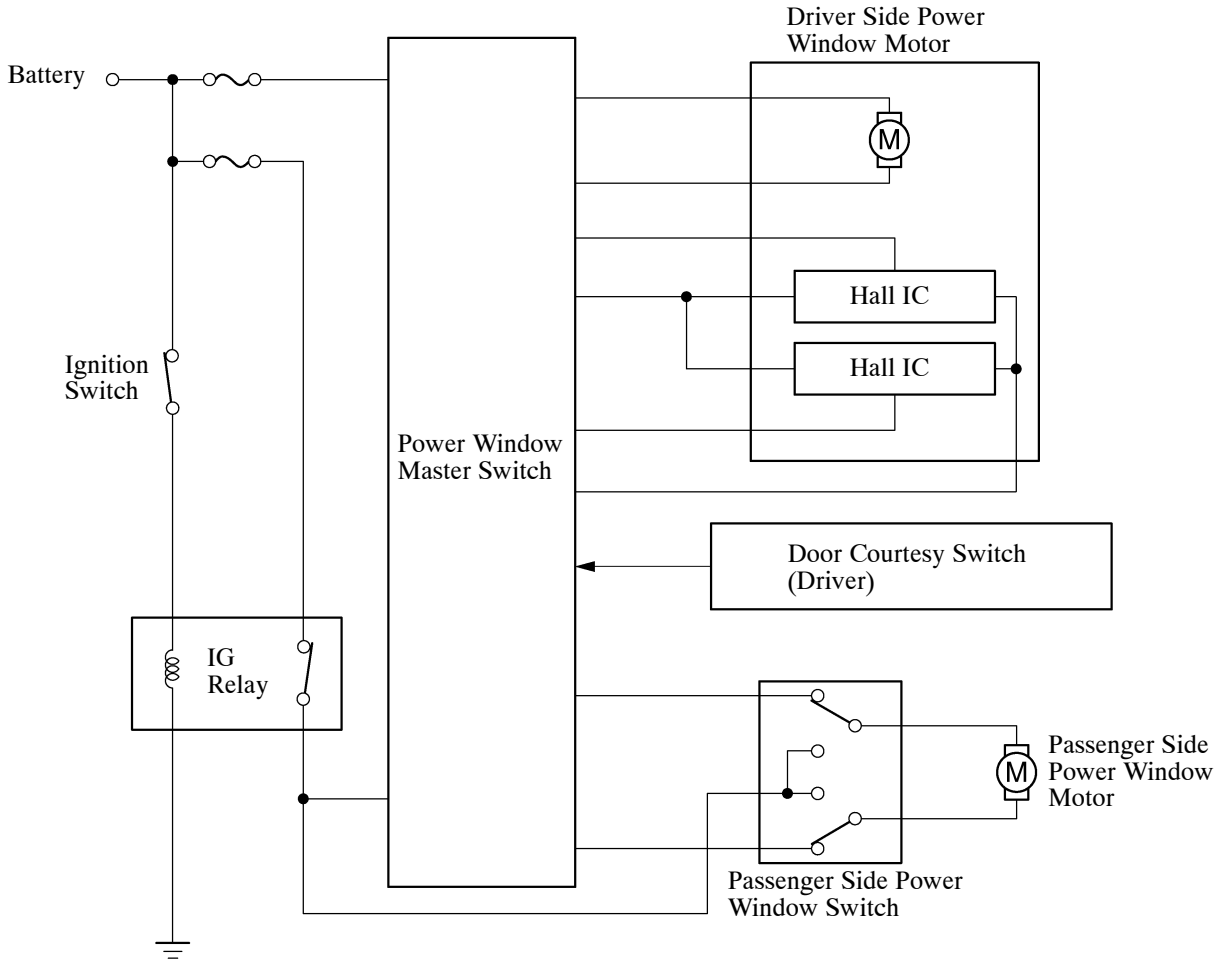

286BE18