
SRS AIRBAG SYSTEM

■ DESCRIPTION


- The new model uses a driver SRS (Supplementary Restraint System) airbag, and driver and front passenger SRS airbags. For the settings, refer to page MO-40. The provision of these airbags varies by destination and grade.
- The SRS airbag helps reduce the impact to the heads and chests of the driver and front passenger*1 in the event of a severe front collision, as supplements to the seat belts.
- On the gasoline engine model, the airbag sensor assembly performs a fuel cut control that stops the fuel pump when an airbag is deployed.

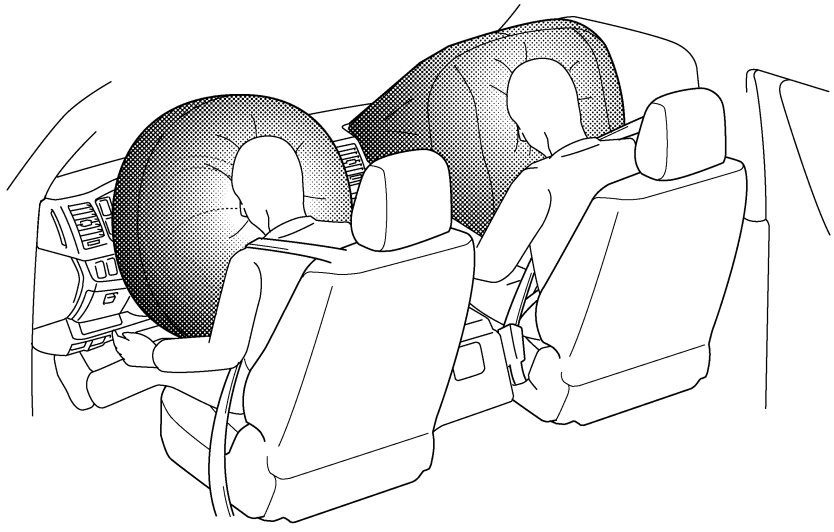

286BE33

BE

▶ Wiring Diagram ◀

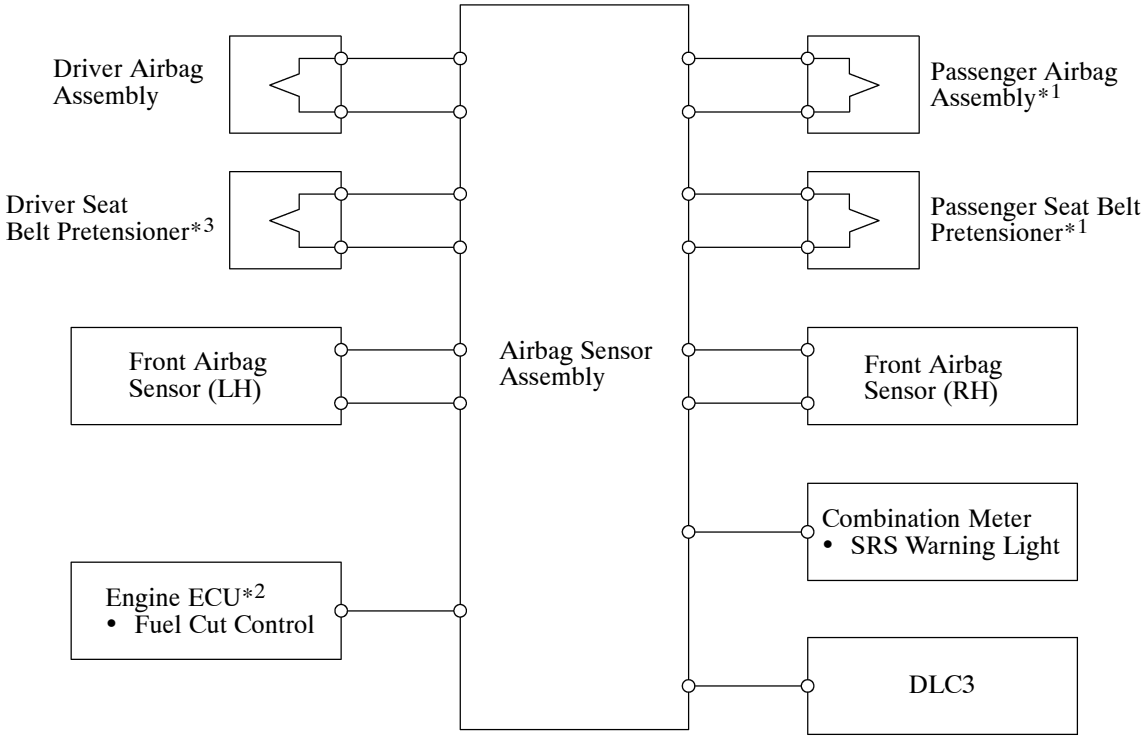

*1: Only for models with driver and passenger SRS airbags
*2: Except diesel engine models
*3: Models with driver SRS airbag

271BE52