
Air Conditioner System


- A heater and a cooler are provided in both the front and rear. The provision of an air conditioner system varies by destination. For details, see page MO-40 in Equipment List.
- A rear blower main switch is provided on the models equipped with a rear heater or cooler. When the rear blower is turned ON, this enables the rear heater or rear cooler to be turned ON and OFF from the front seats.
- A blower switch for the rear cooler is located behind the headlining.

▶ Front Control Panel ◀

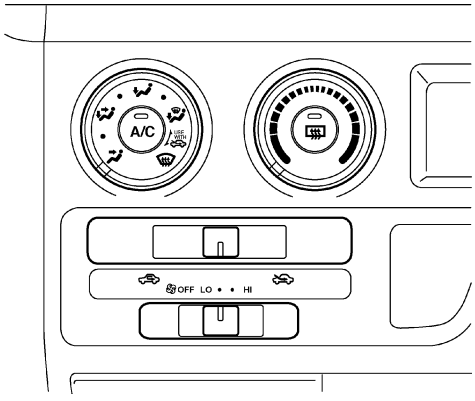

286MO49


RHD Model with Heater and Cooler

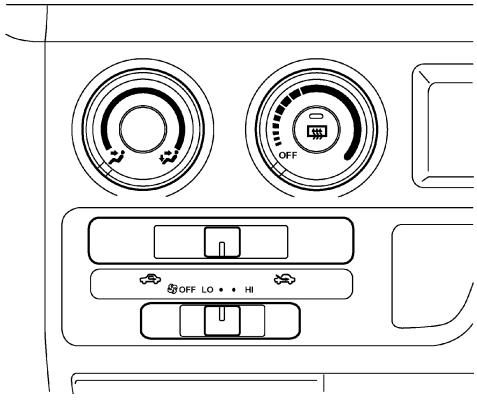

286MO50


RHD Model with Cooler

▶ Rear Control ◀

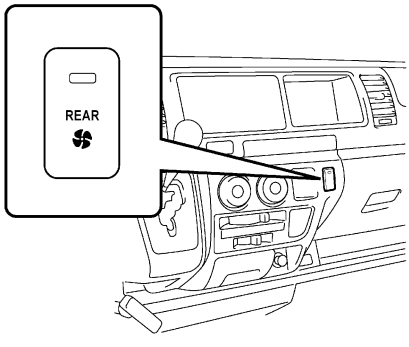


286MO51

Rear Blower Main Switch

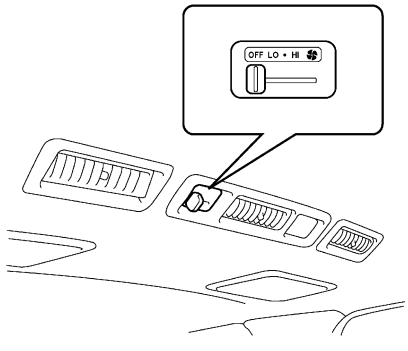

286MO52

Rear Cooler Blower Switch

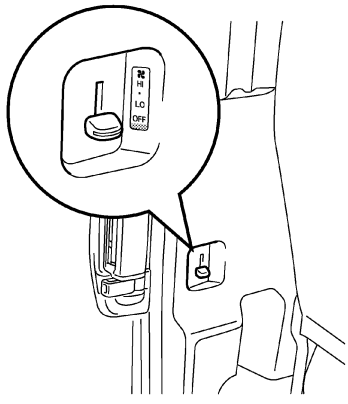

286BE54

Rear Heater Blower Switch