
4. Air Conditioner Unit

General


The heater door as a recirculation intake port has been repositioned due to the newly introduced clean air filter.

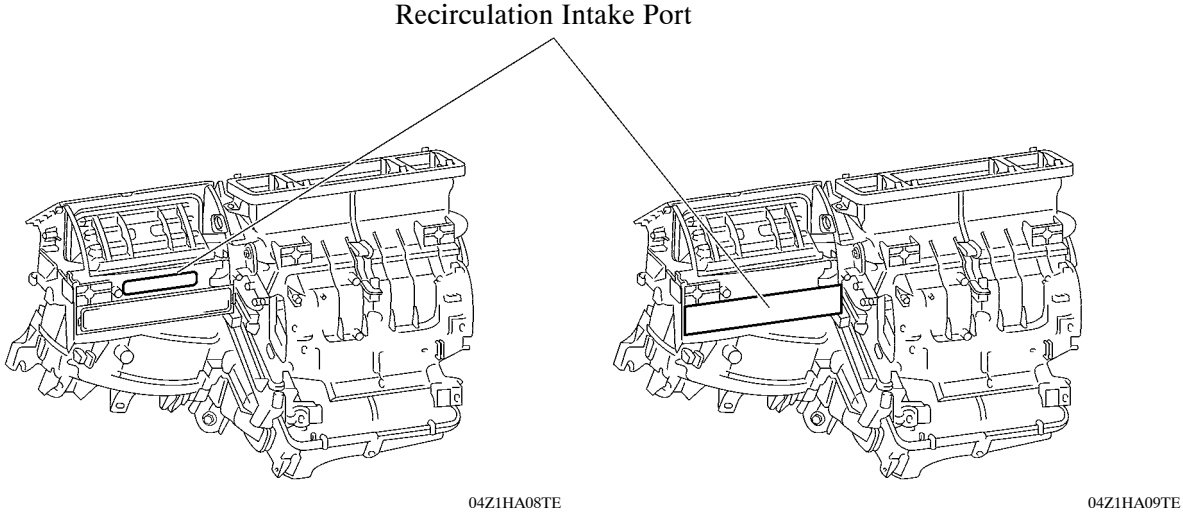

New **Previous**

Clean Air Filter

A clean air filter (semi-standard type particle filter) is used to remove dust, pollen, and other micron particles from air entering from outside the vehicle to provide a comfortable cabin of clean air. The clean air filter is installed in the upper section of the blower fan for easy replacement of the clean air filter without the need for tools by removing the one-touch clip in the glove box, making this easy to service.

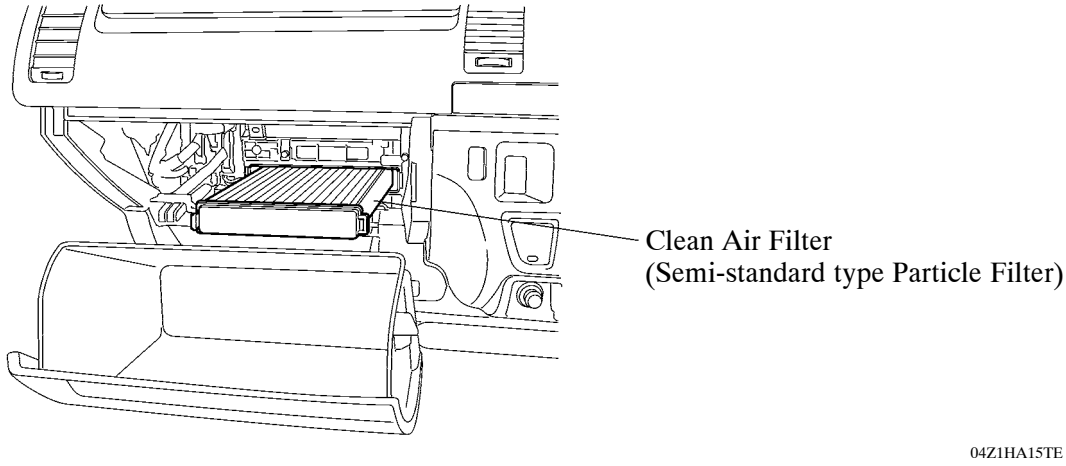

Service Tip

A clean air filter should be replaced every 30,000 km (16,200 miles). However, observation of these guidelines should depend on the usage conditions (or environment).