REAR VIEW MONITOR SYSTEM


■ DESCRIPTION

- To assist the driver in parking the vehicle by providing a view of the area behind the vehicle, the rear view monitor system has a television camera assembly mounted on the back door.
- A view of the area behind the vehicle is displayed on the inner rear view mirror assembly.
- This system consists of the television camera assembly and inner rear view mirror assembly.
- This system operates when both the conditions given below have been met.
  - The ignition switch is ON.
  - The shift lever is moved to R.

CAUTION

- Do not rely entirely on the rear view monitor system. Use caution, just as you would when backing up any vehicle.
- Do not use the system if the back door is not completely closed.
- Never back up while looking only at the screen. The image on the screen may differ from the actual conditions. If you back up while looking only at the screen, you may hit an object or have an accident. When backing up, be sure to check by looking behind and all around the vehicle, both directly and using the mirrors, before proceeding.

■ SYSTEM DIAGRAM

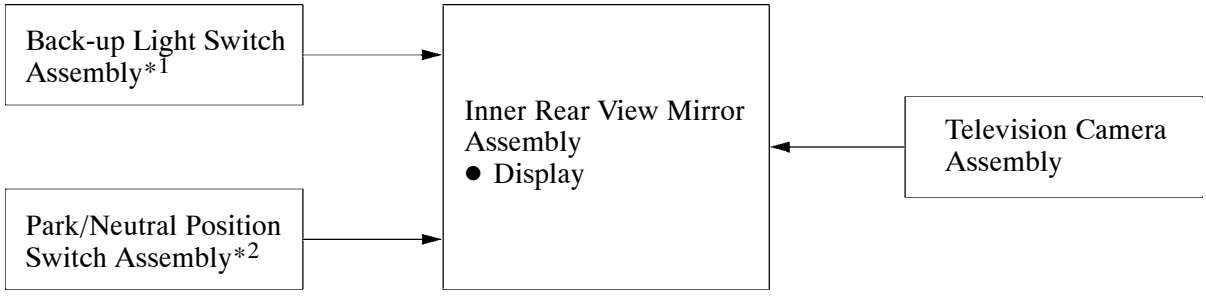

05N1NF18C

*1: Models with M/T
*2: Models with A/T