
# ESCAPE HAMMER AND BUZZER

## ■ GENERAL

- The shape of the back window glass hammer assembly has been changed for the China package. A switch for activating the escape hammer buzzer has also been installed in the back window glass hammer assembly.
- The set number of back window glass hammer assemblies has been changed from one to three for the China package.
- An escape hammer buzzer has been adopted for the China package. If even one of the three back window glass hammer assemblies is removed, the switch installed in the back window glass hammer assembly will turn on, and the escape hammer buzzer installed in the roof side part will sound.
- Labels that read “Emergency Exit” and indicate the hammer attack point have been affixed to the emergency escape window for the China package. A label that instructs how to operate the back window glass hammer assembly has also been affixed to the roof near the location of the back window glass hammer assembly.

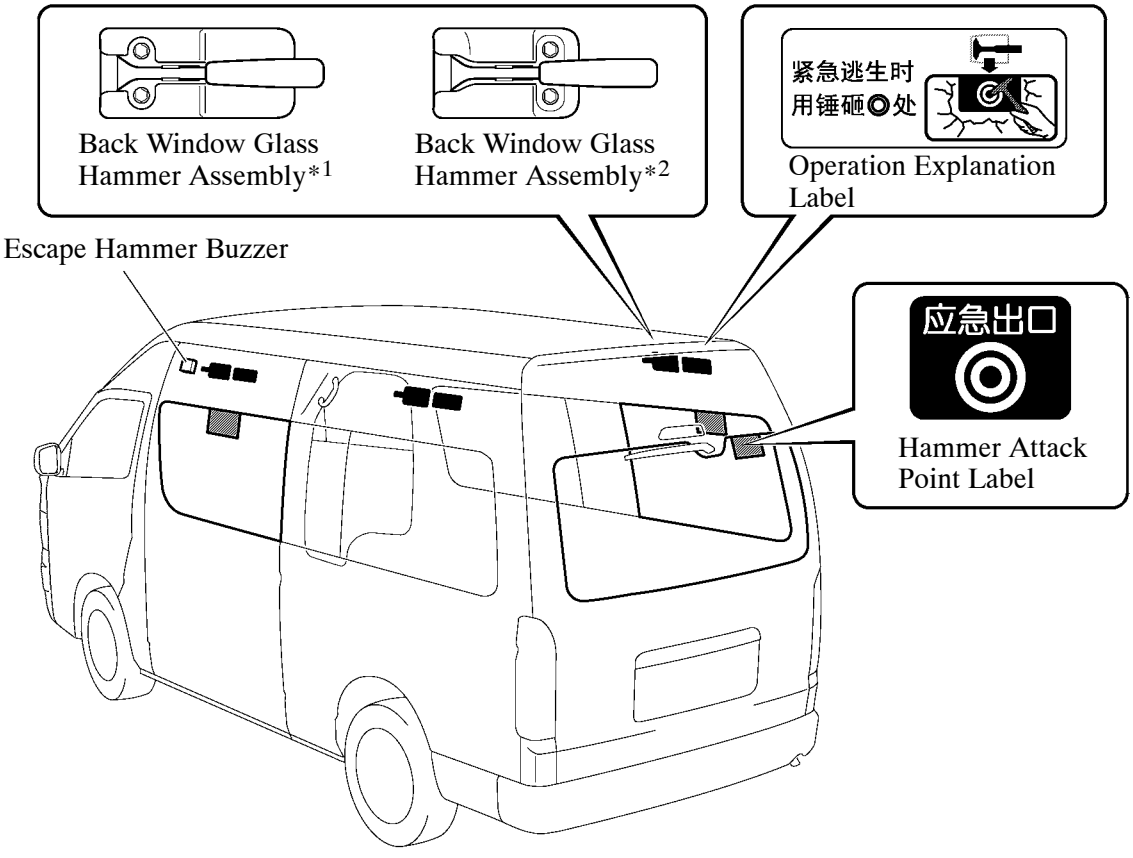


: Installation Position of Back Window Glass Hammer Assembly
: Label Attachment Positions
: Hammer Attack Point Label Attachment Positions

04Z6BO04Z

*1: Models for standard wheelbase
*2: Models for super long wheelbase