
■PARTS LOCATION

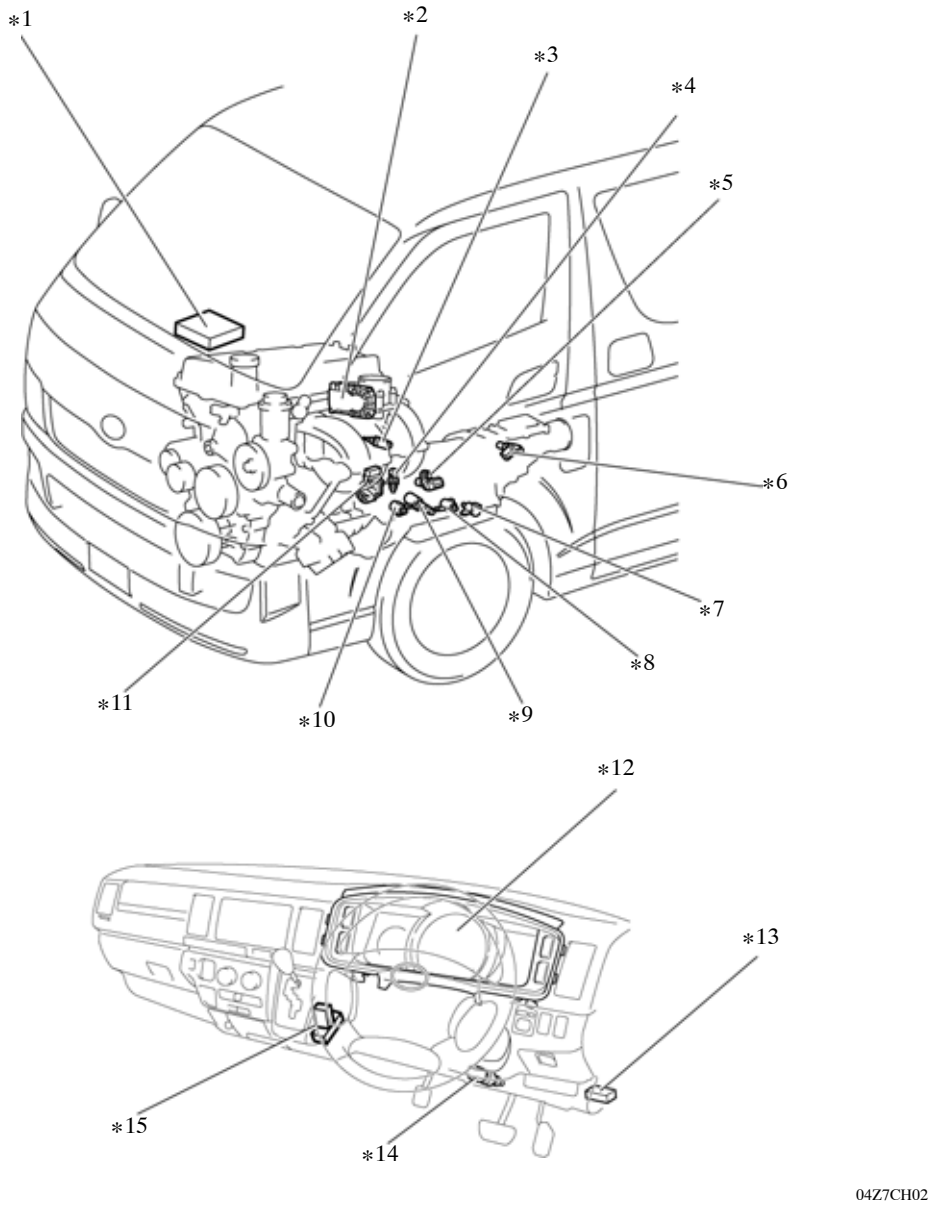

▶ Text in Illustration ◀

∗1	ECM	∗2	Throttle Body with Motor Assembly – Throttle Position Sensor
∗3	E.F.I. Engine Coolant Temperature Sensor	∗4	Temperature Sensor
∗5	Speed Sensor (NC0)	∗6	Transmission Revolution Sensor (SP2)
∗7	Shift Solenoid Valve S2	∗8	Shift Solenoid Valve S1
∗9	Shift Solenoid Valve SLT	∗10	Shift Solenoid Valve SL
∗11	Park/Neutral Position Switch Assembly	∗12	Combination Meter Assembly
∗13	DLC3	∗14	Stop Light Switch Assembly
∗15	Shift Lock Control Unit Assembly	—	—