
METER

■ COMBINATION METER

Eco Driving Indicator Light

When the ECM determines that Eco driving (Eco-friendly acceleration operation) is being performed, the ECM outputs Eco Driving Indicator Light illumination request to the combination meter assembly and illuminates Eco Driving Indicator Light.

▶ System Diagram ◀

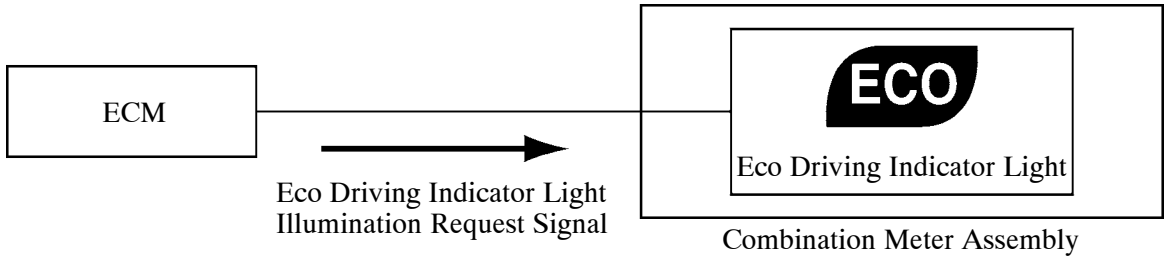

04Z7BE01

▶ Operating Condition ◀

- Eco Driving Indicator Light starts to operate when all of the following conditions are met:

Condition	Ignition switch is ON.
	Engine is running.
	Shift lever is in D.
	When the vehicle is at a speed of about 100 km/h (62 mph) or below.

- Eco Driving Indicator Light stops operation when any of the following conditions is met:

Condition	Ignition switch is off.
	Engine is stopping.
	Shift lever is in any position other than D.
	When the vehicle is at a speed of about 100 km/h (62 mph) or over.