
■ LED DRIVER MODULE

The LED driver modules (light control LED computer) are placed beneath the headlights, and this supplies a constant voltage to the low beams and reduces the changes in the energization current.

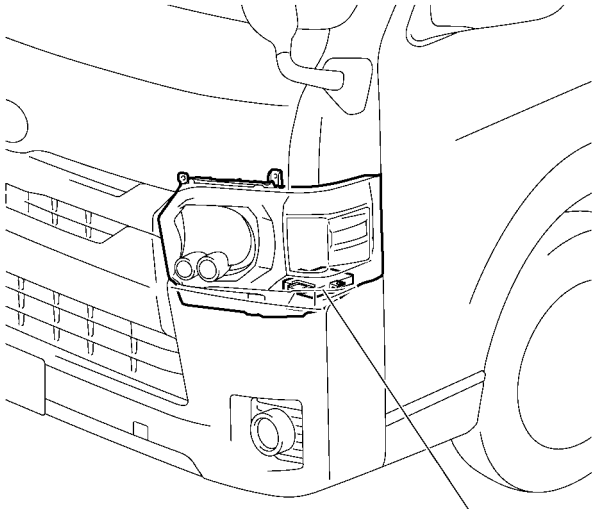

04Z8BE114

LED Driver Module LH (Light Control LED Computer)