
■ OPERATING CONDITION

- The entry and start system is activated only when the key is within the actuation area formed by the 4 indoor electrical key antenna assemblies and electrical key antenna located within the vehicle.
- Each antenna attempts to detect whether the key is within the actuation area and responds with the following action.

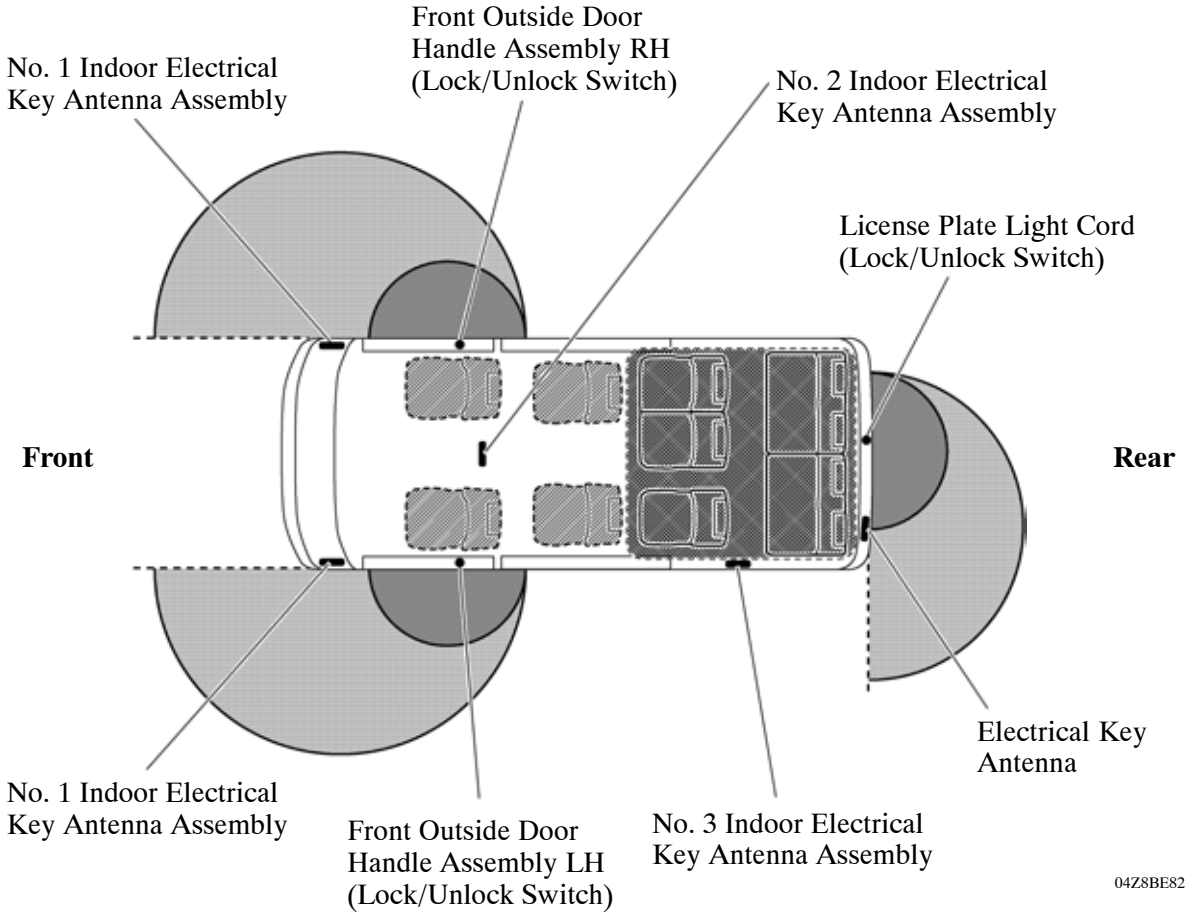

: Exterior Actuation Area or Detection Area Outside the Vehicle around the Back Door

: Radio Wave Formation Area Outside the Vehicle

: Interior Actuation Area (Engine Start Possible Area)

: Interior Actuation Area (Area to Detect if the Key is Left in the Vehicle)

04Z8BE87

EACH ACTUATION AREA

Actuation Area		Details
Interior		This actuation area becomes active and the system will attempt to detect the key when any one of the following situation occurs: ● Driver door is opened or closed ● Engine switch is pressed while the brake pedal is depressed ● Warning for the entry and start system occurs ● Lock/unlock switch is pressed
Exterior	Around Front Door	The range of the actuation area is approximately 0.7 m (27.6 in.) radius of the outside handle of the front door. When the lock/unlock switch provided on the front outside door handle RH/LH is pressed, the actuation area becomes active and the system will attempt to detect key.
	Around Back Door	The range of the actuation area is approximately 0.7 m (27.6 in.) radius of the center of the back door. When the back door lock/unlock switch is pressed, the actuation area becomes active and the system will attempt to detect key.