
■ ENGINE SWITCH

Construction

a. The engine switch consists of a momentary type switch, illumination, antenna coil and transponder key amplifier.

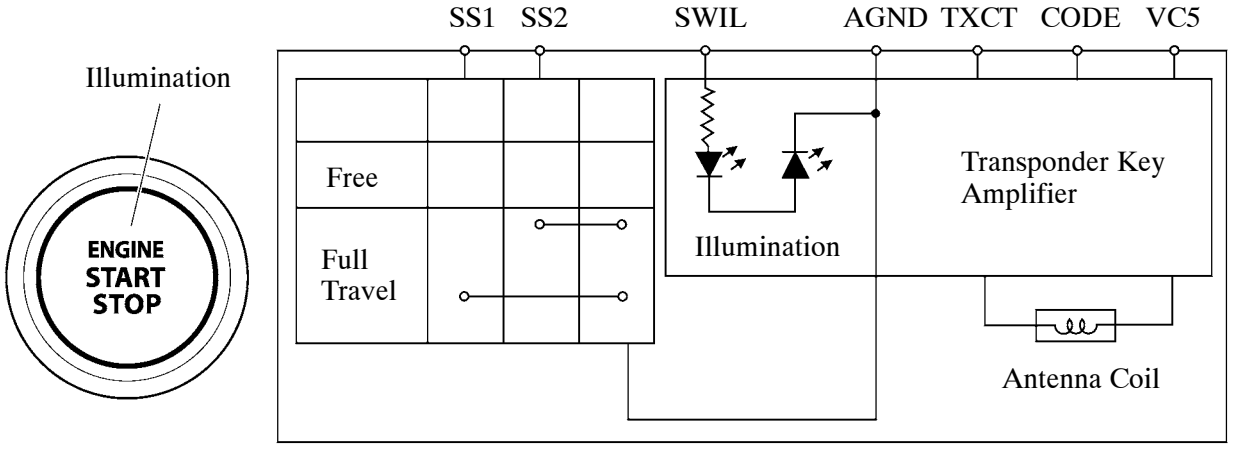


04Z8BE83

■ INDICATOR LIGHT/WARNING LIGHT/MULTI DISPLAY

Construction

a. Key Operation/Warning Light
The key operation/warning light located in the combination meter assembly helps the driver in checking the current status of the power source.

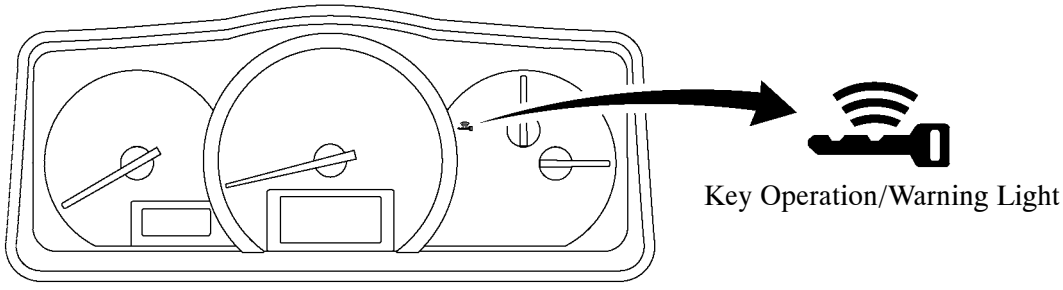

04Z8BE84

Key Operation/Warning Light Condition	Power Source Mode/Condition
Turned off.	When any of the following condition is met: ● The engine is started. ● The power is turned off.*1
Turned on (Green).	The state that the engine is possible to start.*2
Blinks slowly (Green).	On (ACC), On (IG)
Blinks (Green) for 15 seconds.	Steering wheel lock not unlocked.
Blinks (Amber) for 15 seconds.	Entry and start system malfunction.

*1: The brake pedal is not depressed (the stop light switch is turned off).
*2: The shift lever is moved in the P position (only the steering lock is unlocked), the key is verified, and the brake pedal is depressed (the stop light switch is turned on).