
CRUISE CONTROL SYSTEM

■ DESCRIPTION

- Once the system is set to a desired vehicle speed, the throttle valve position or injection volume is adjusted automatically to maintain the vehicle speed without depressing the accelerator pedal.
- On the models with the gasoline engine, this system effects control through the ETCS-i.
- On the models with the diesel engine, this system effects control through the diesel EFI system.
- The cruise control system is controlled by the ECM.

▶ System Diagram ◀

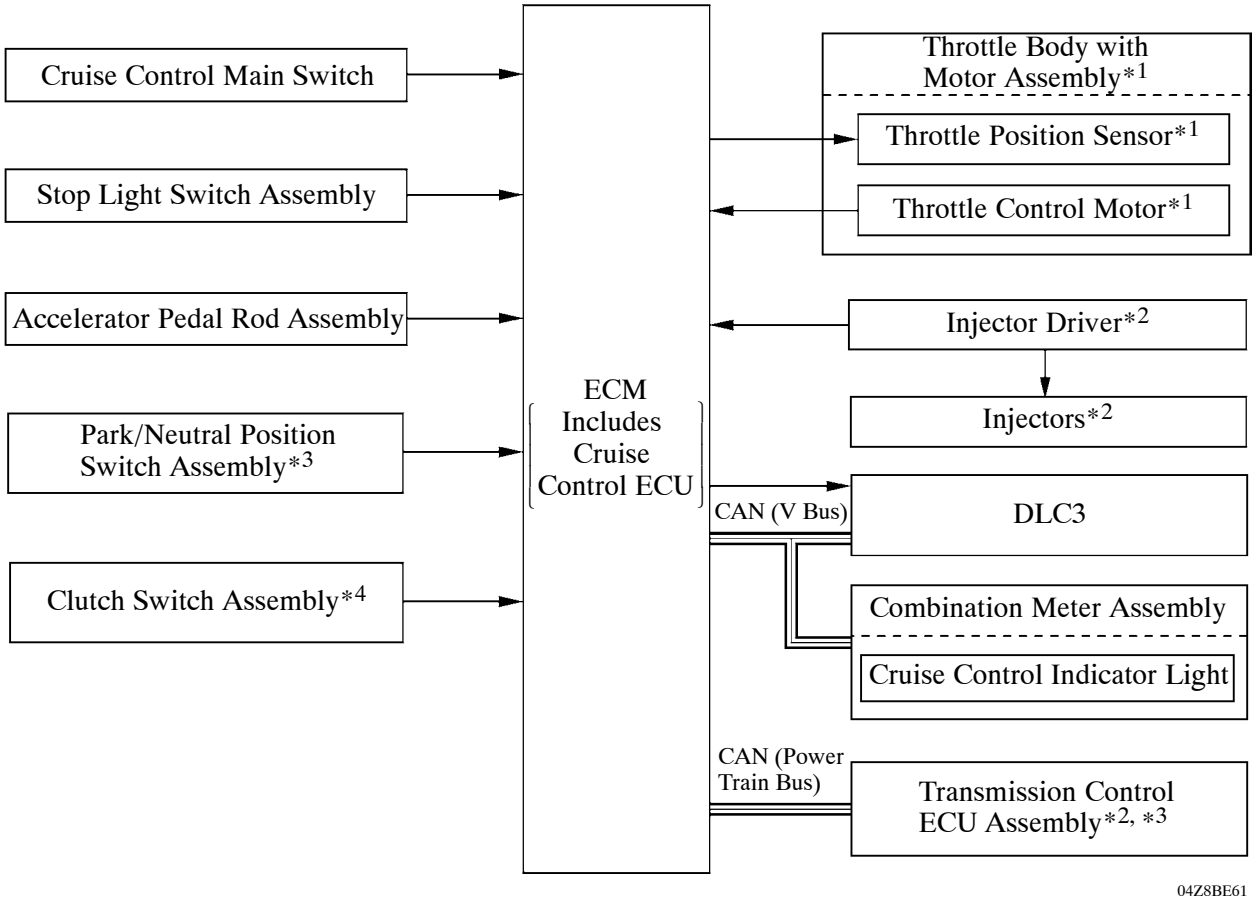

*1: Models with Gasoline Engine
*2: Models with Diesel Engine
*3: Models with Automatic Transmission
*4: Models with Manual Transmission