
■PARTS LOCATION

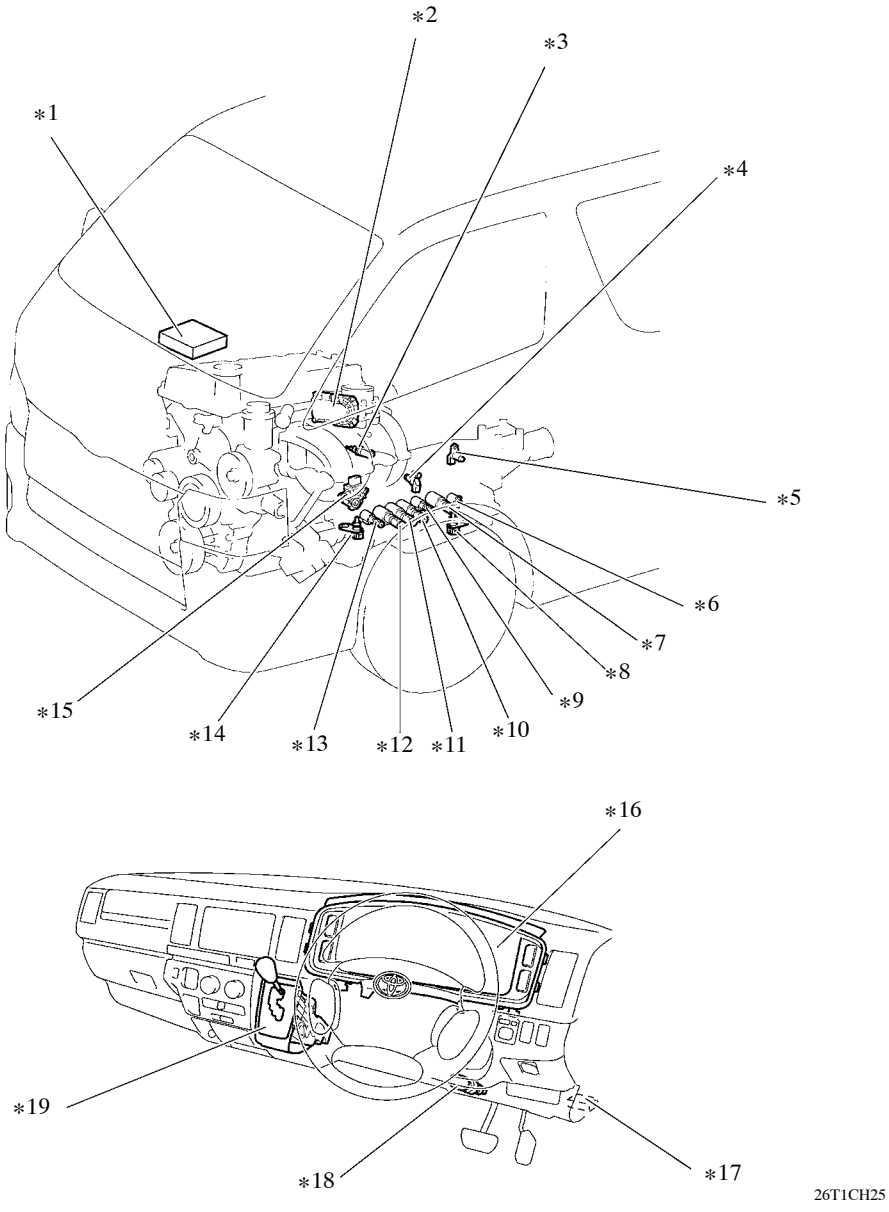

▶ Text in Illustration ◀

*1	ECM	*2	Throttle Body with Motor Assembly – Throttle Position Sensor
*3	E.F.I. Engine Coolant Temperature Sensor	*4	Transmission Revolution Sensor (NT)
*5	Transmission Revolution Sensor (SP2)	*6	Shift Solenoid Valve DSL (SL)
*7	Shift Solenoid Valve SL1 (SL4)	*8	No. 1 ATF Temperature Sensor
*9	Shift Solenoid Valve (SLU) (Lock Up Control Solenoid Assembly)	*10	Shift Solenoid Valve SL1 (SL3)
*11	Shift Solenoid Valve SL1 (SL1)	*12	Shift Solenoid Valve SL1 (SL2)
*13	Shift Solenoid Valve (SLT) (Line Pressure Control Solenoid Assembly)	*14	No. 2 ATF Temperature Sensor
*15	Park/Neutral Position Switch Assembly	*16	Combination Meter Assembly
*17	DLC3	*18	Stop Light Switch Assembly
*19	Shift Lock Control Unit Assembly	—	—