

■ SYSTEM DIAGRAM

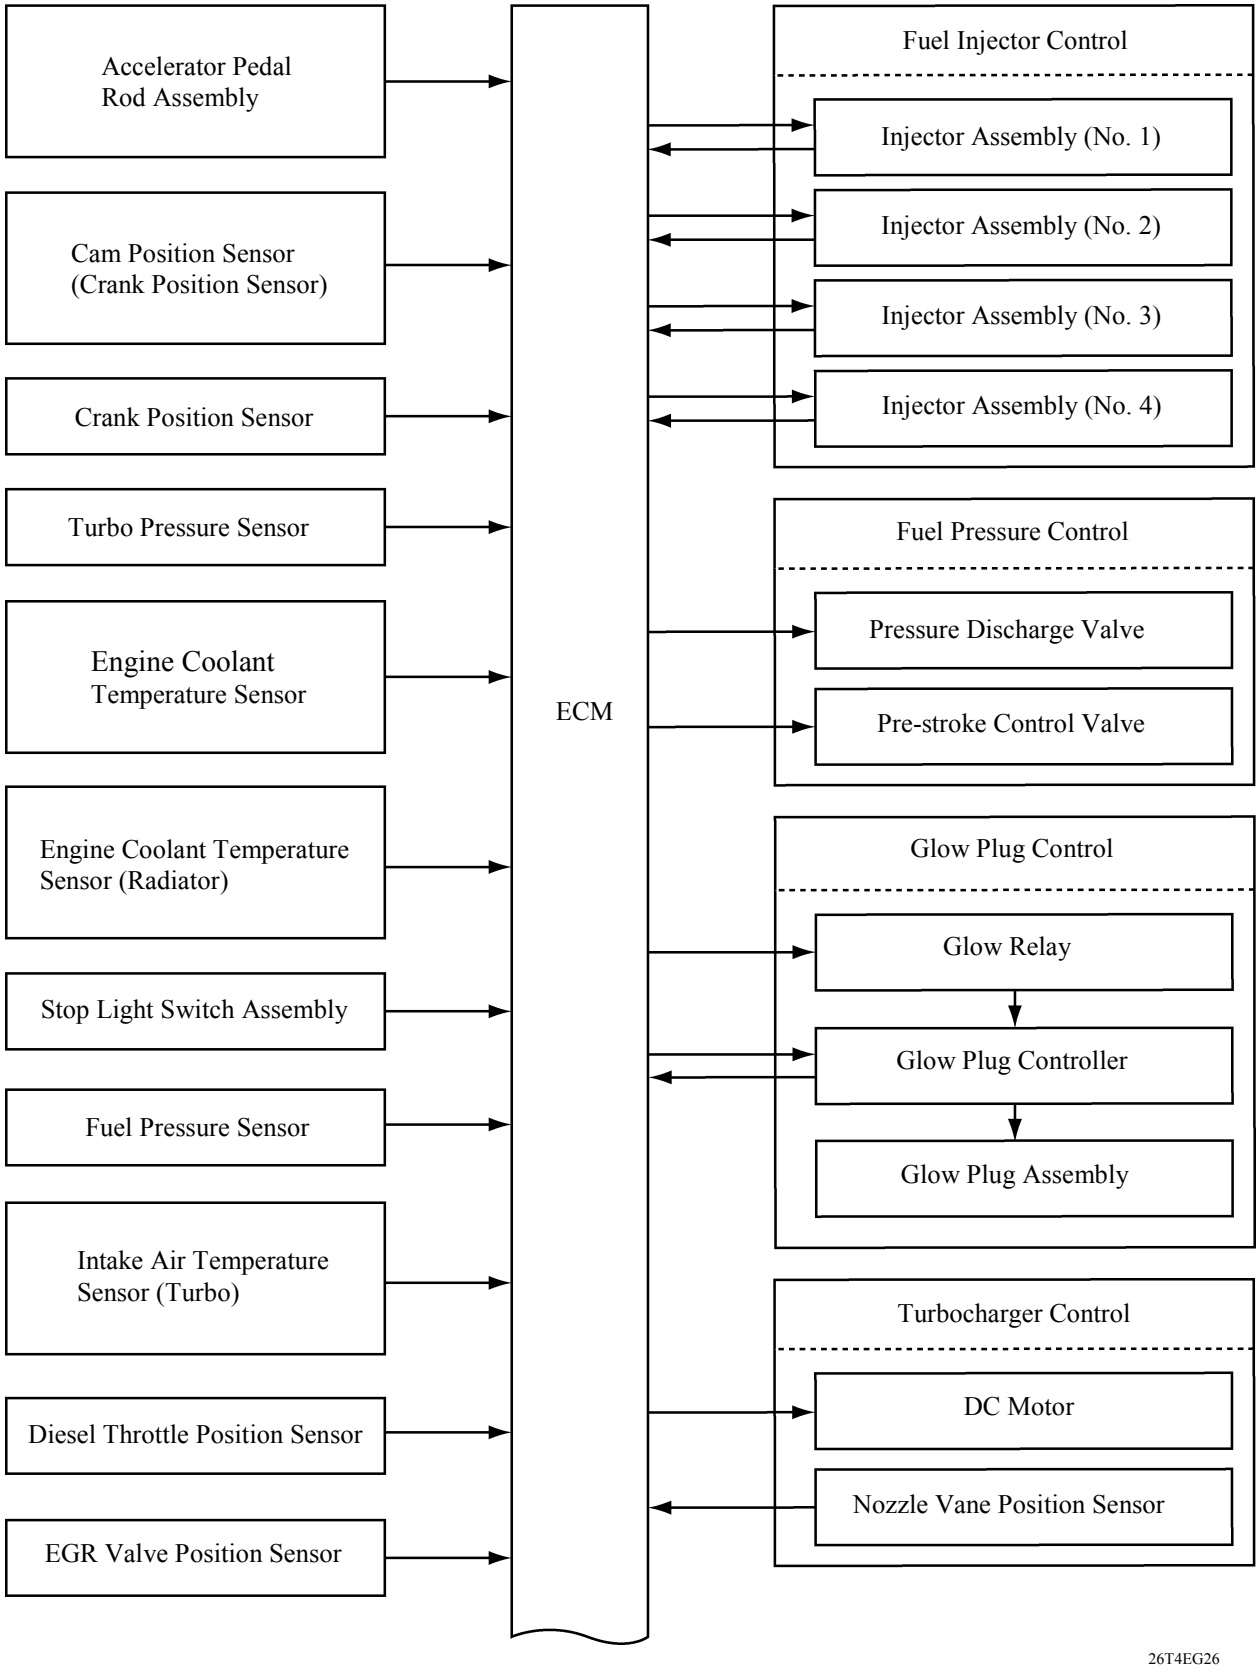


(Continued)

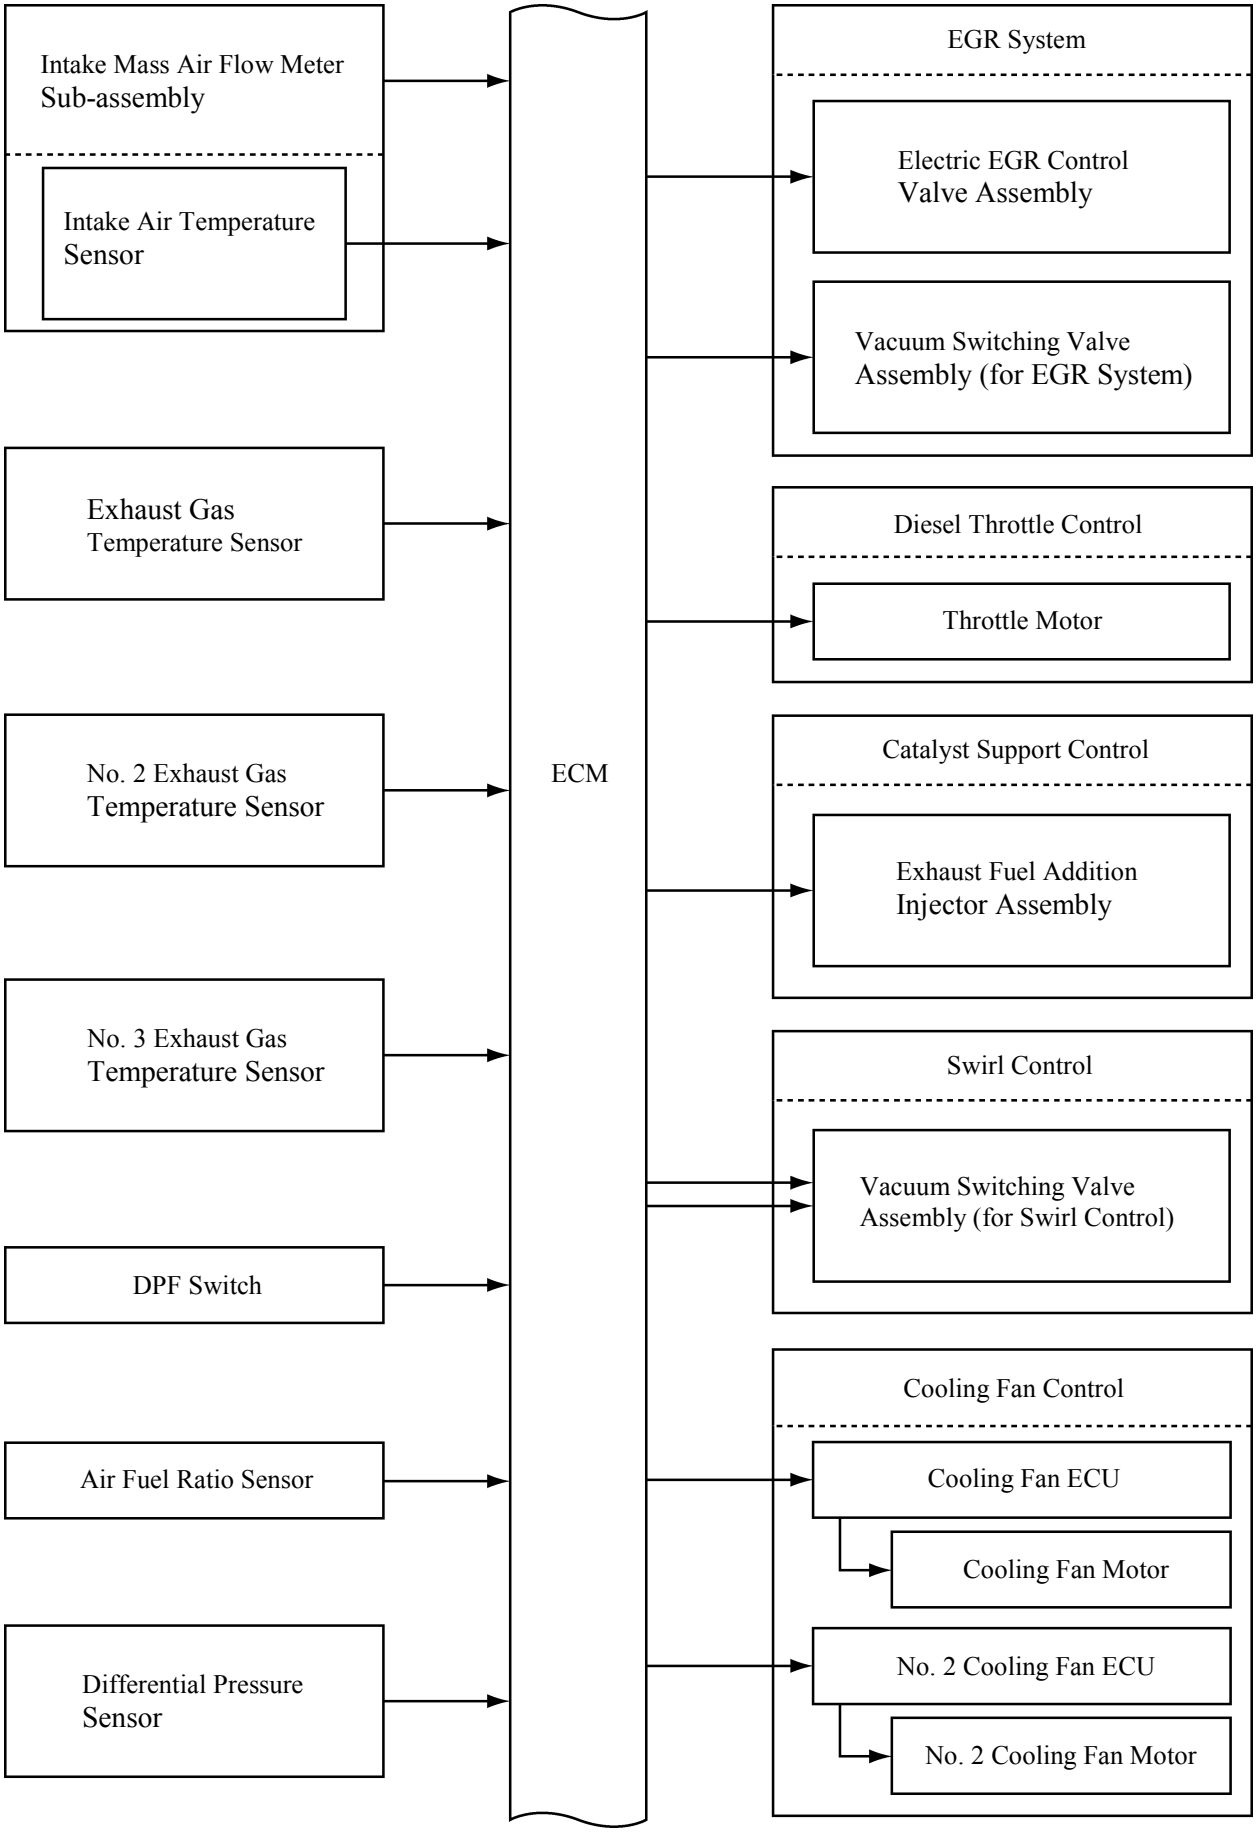

26T4EG27

(Continued)

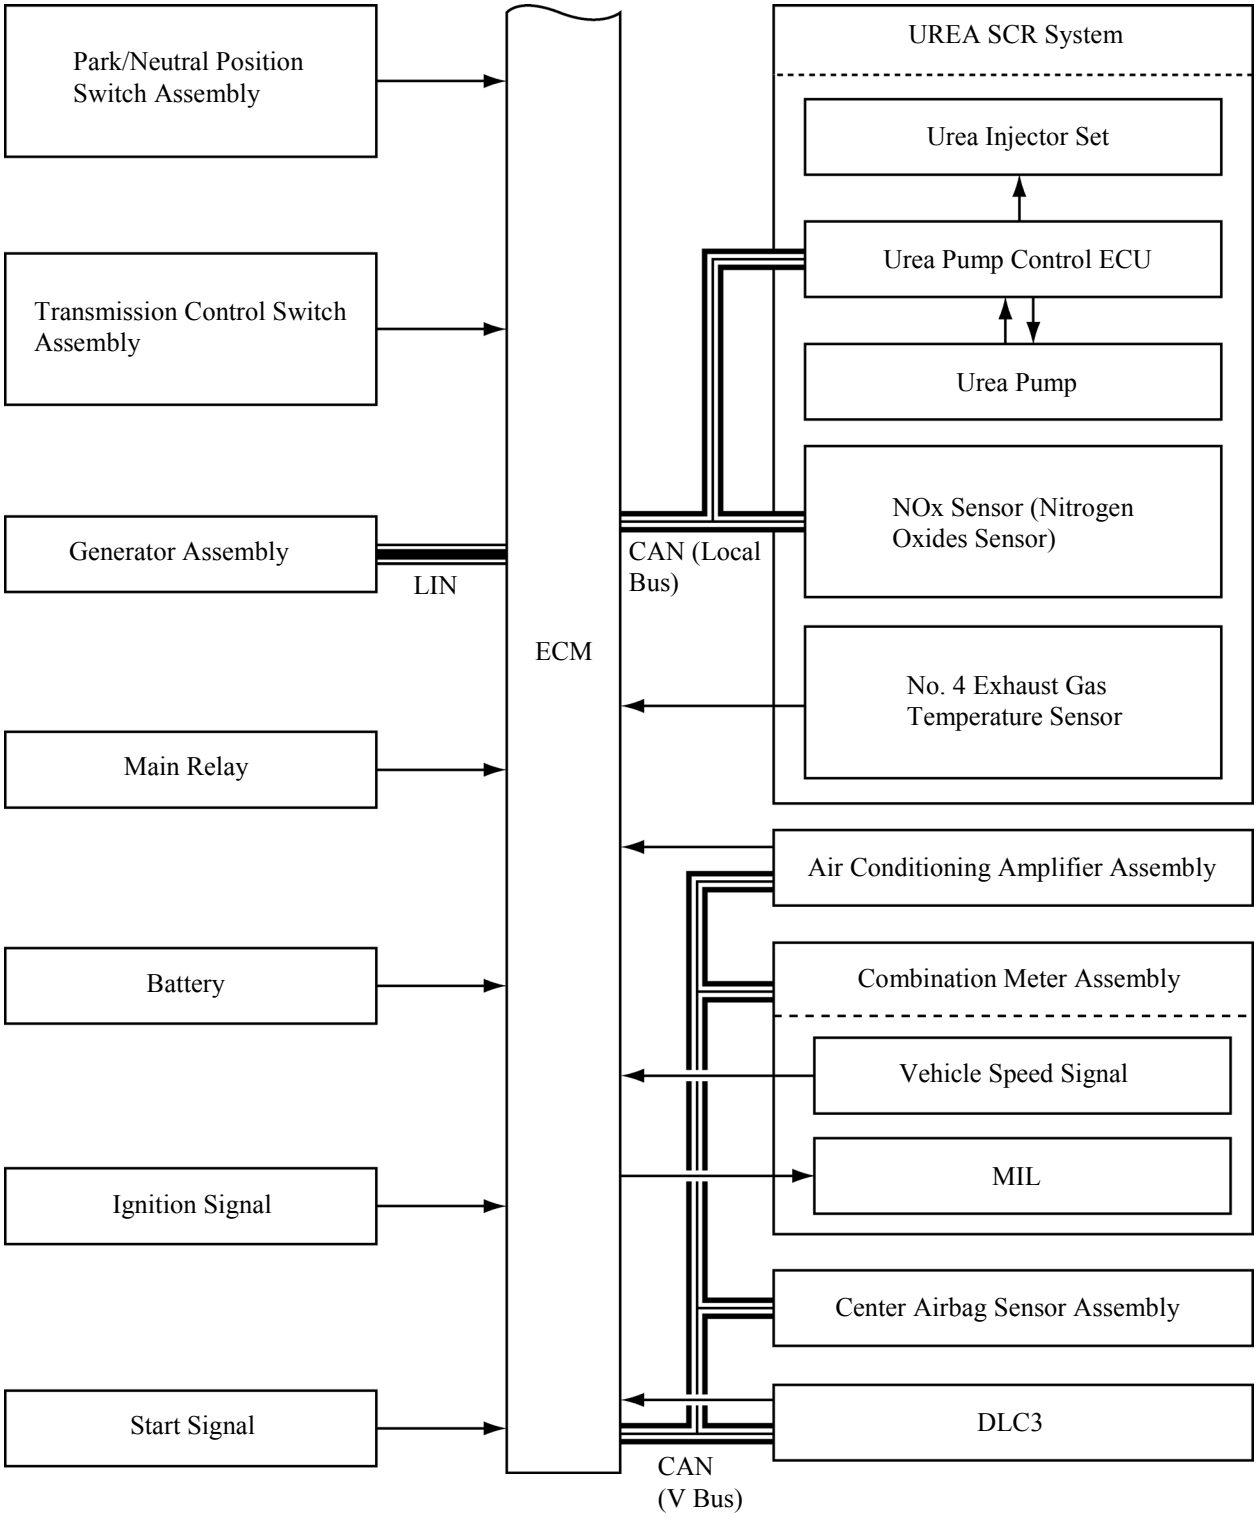
Park/Neutral Position Switch Assembly
Transmission Control Switch Assembly
Generator Assembly
LIN
Main Relay
Battery
Ignition Signal
Start Signal
ECM
CAN (Local Bus)
CAN (V Bus)
UREA SCR System
Urea Injector Set
Urea Pump Control ECU
Urea Pump
NOx Sensor (Nitrogen Oxides Sensor)
No. 4 Exhaust Gas Temperature Sensor
Air Conditioning Amplifier Assembly
Combination Meter Assembly
Vehicle Speed Signal
MIL
Center Airbag Sensor Assembly
DLC3

26T4EG28