

■ PARTS LOCATION

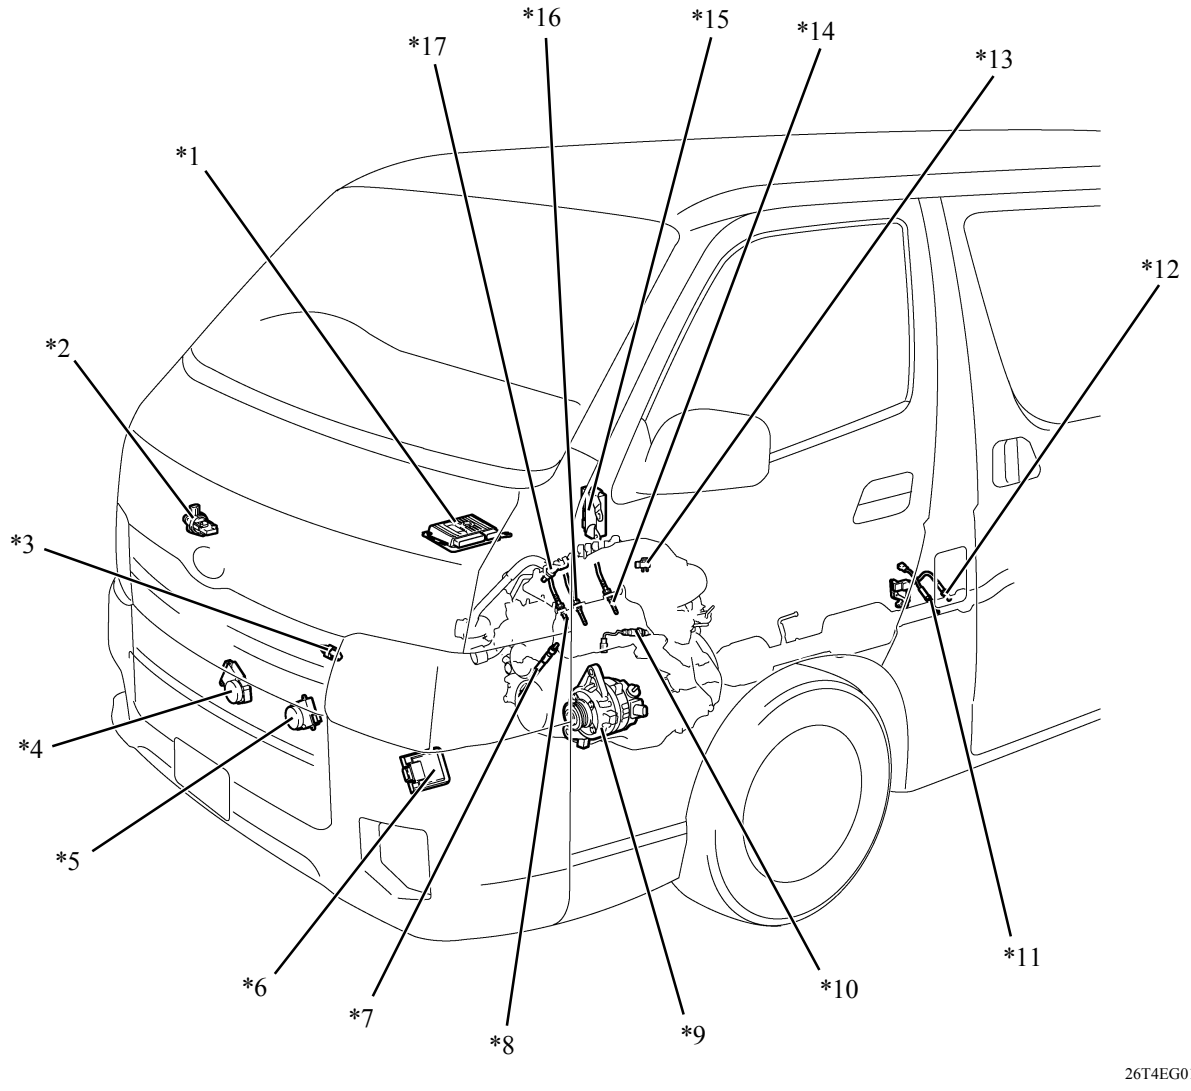

Text in Illustration


*1	ECM	*2	Intake Mass Air Flow Meter Sub-assembly
*3	Engine Coolant Temperature Sensor (Radiator)	*4	Cooling Fan ECU
*5	No. 2 Cooling Fan ECU	*6	Urea Pump Control ECU
*7	Glow Plug Assembly	*8	Exhaust Gas Temperature Sensor
*9	Generator Assembly	*10	Air Fuel Ratio Sensor
*11	No. 4 Exhaust Gas Temperature Sensor	*12	NOx Sensor (Nitrogen Oxides Sensor)
*13	Differential Pressure Sensor	*14	No. 3 Exhaust Gas Temperature Sensor
*15	Glow Plug Controller	*16	No. 2 Exhaust Gas Temperature Sensor
*17	Exhaust Fuel Addition Injector Assembly	-	-

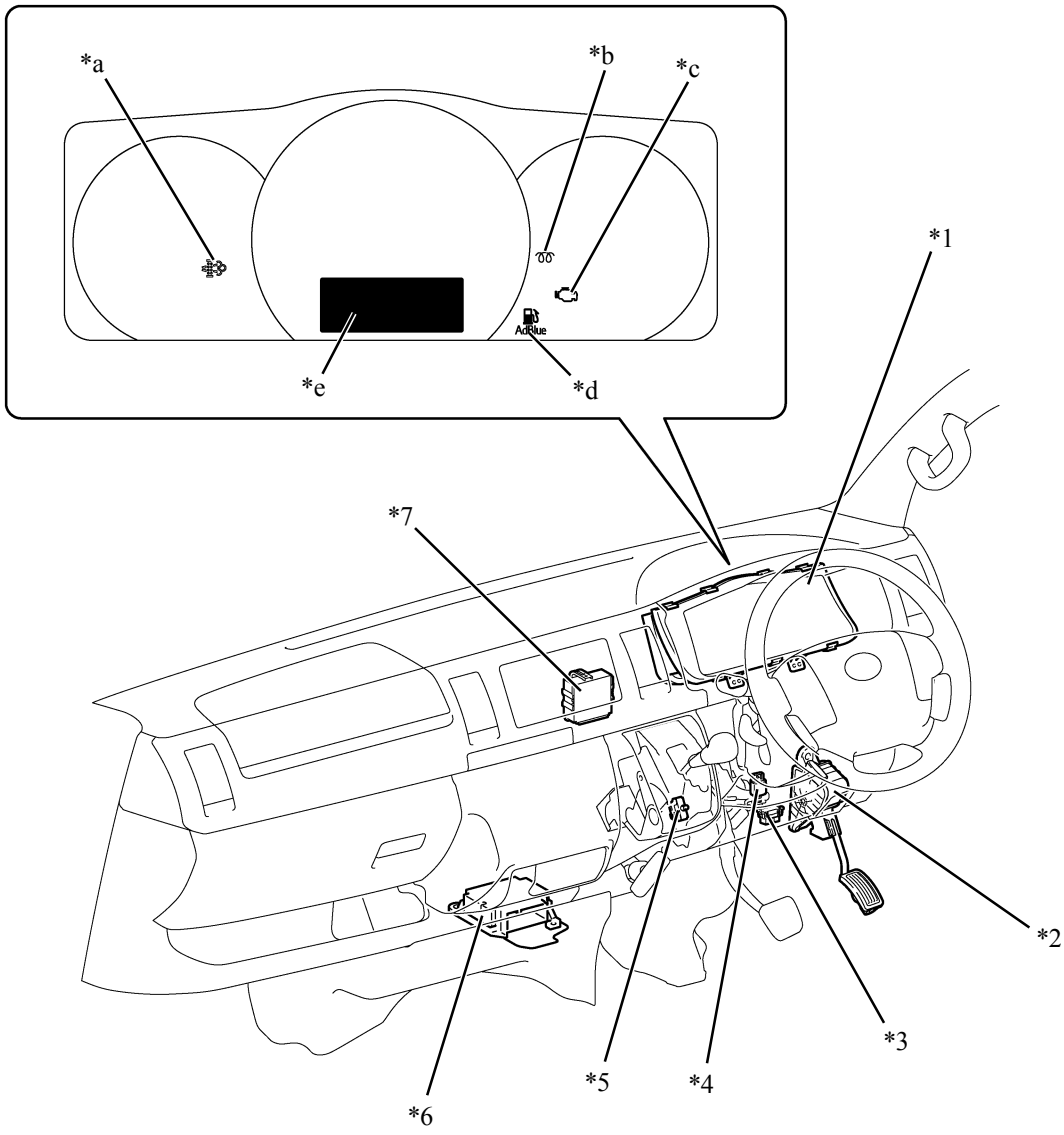

26T4EG02

Text in Illustration

*1	Combination Meter Assembly	*2	Accelerator Pedal Rod Assembly
*3	DLC3	*4	Stop Light Switch Assembly
*5	Transmission Control Switch Assembly	*6	Center Airbag Sensor Assembly
*7	Air Conditioning Amplifier Assembly	-	-
*a	DPF Warning Light	*b	Glow Indicator light
*c	MIL	*d	AdBlue Warning Light
*e	Multi-information Display	-	-

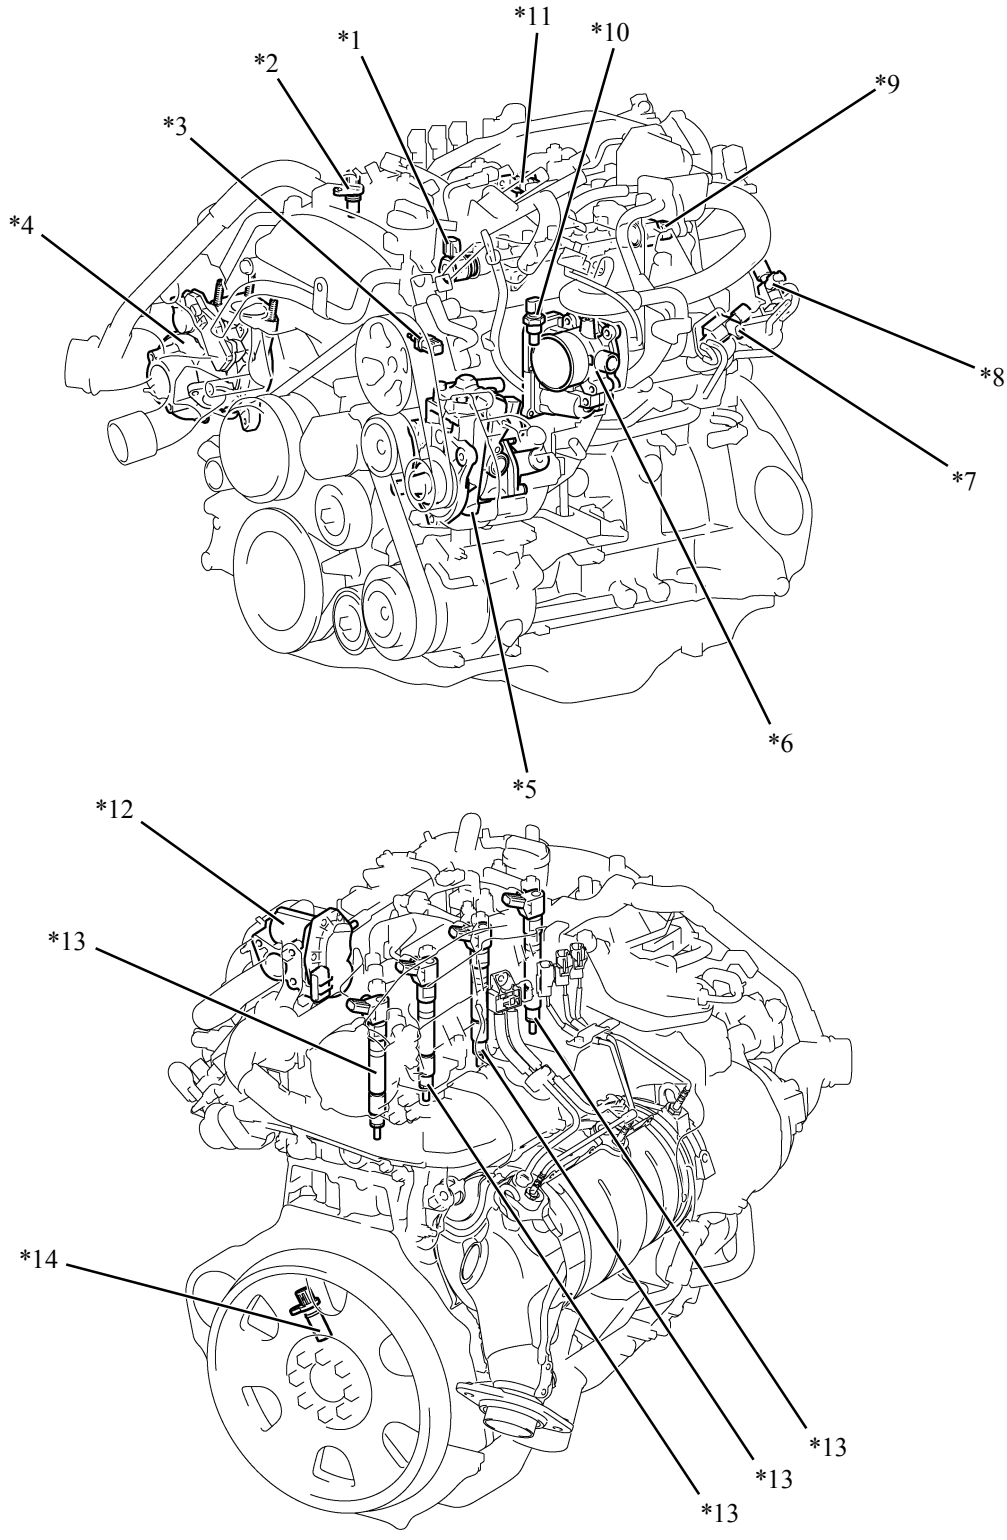

26T4EG03D

Text in Illustration

*1	Pressure Discharge Valve	*2	Cam Position Sensor (Crank Position Sensor)
*3	Engine Coolant Temperature Sensor	*4	Turbocharger Sub-assembly · DC Motor · Nozzle Vane Position Sensor
*5	Injection or Supply Pump Assembly	*6	Diesel Throttle Body Assembly

(Continued)

*7	Vacuum Switching Valve Assembly (for EGR System)	*8	Vacuum Switching Valve Assembly (for Swirl Control)
*9	Fuel Pressure Sensor	*10	Intake Air Temperature Sensor (Turbo)
*11	Turbo Pressure Sensor	*12	Electric EGR Control Valve Assembly
*13	Injector Assembly	*14	Crank Position Sensor