
■ PRESSURE DISCHARGE VALVE

1. Construction

The pressure discharge valve regulates the fuel pressure. In the pressure discharge valve, the plunger opens and closes in accordance with the actuation signals from the ECM. Thus, it regulates pressure by releasing excess pressure from the common-rail. In addition, it has a pressure reduction function in case of emergency.

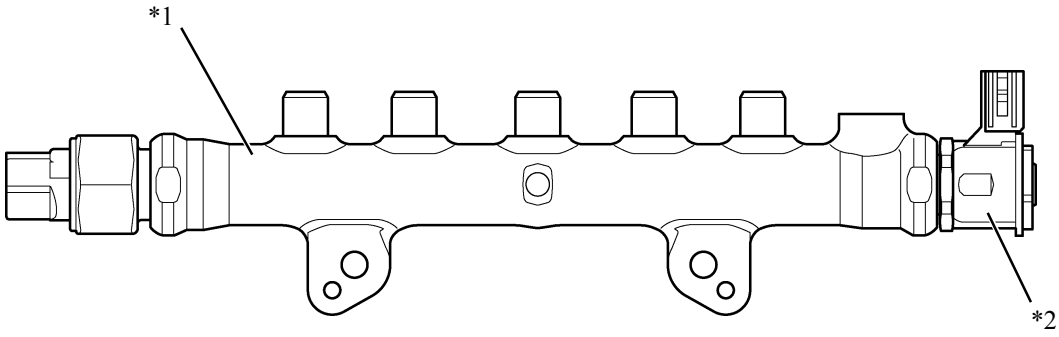

26T4EG52

Text in Illustration

*1	Common-rail Assembly	*2	Pressure Discharge Valve