
■ THROTTLE POSITION SENSOR

1. Construction

The diesel throttle position sensor is mounted on the diesel throttle body assembly. To detect the opening angle of the diesel throttle valve, the diesel throttle position sensor converts the magnetic flux density, which changes when the magnetic yoke (located on the same axis as the diesel throttle valve shaft) rotates around the Hall IC, into electric signals to operate the throttle control motor.

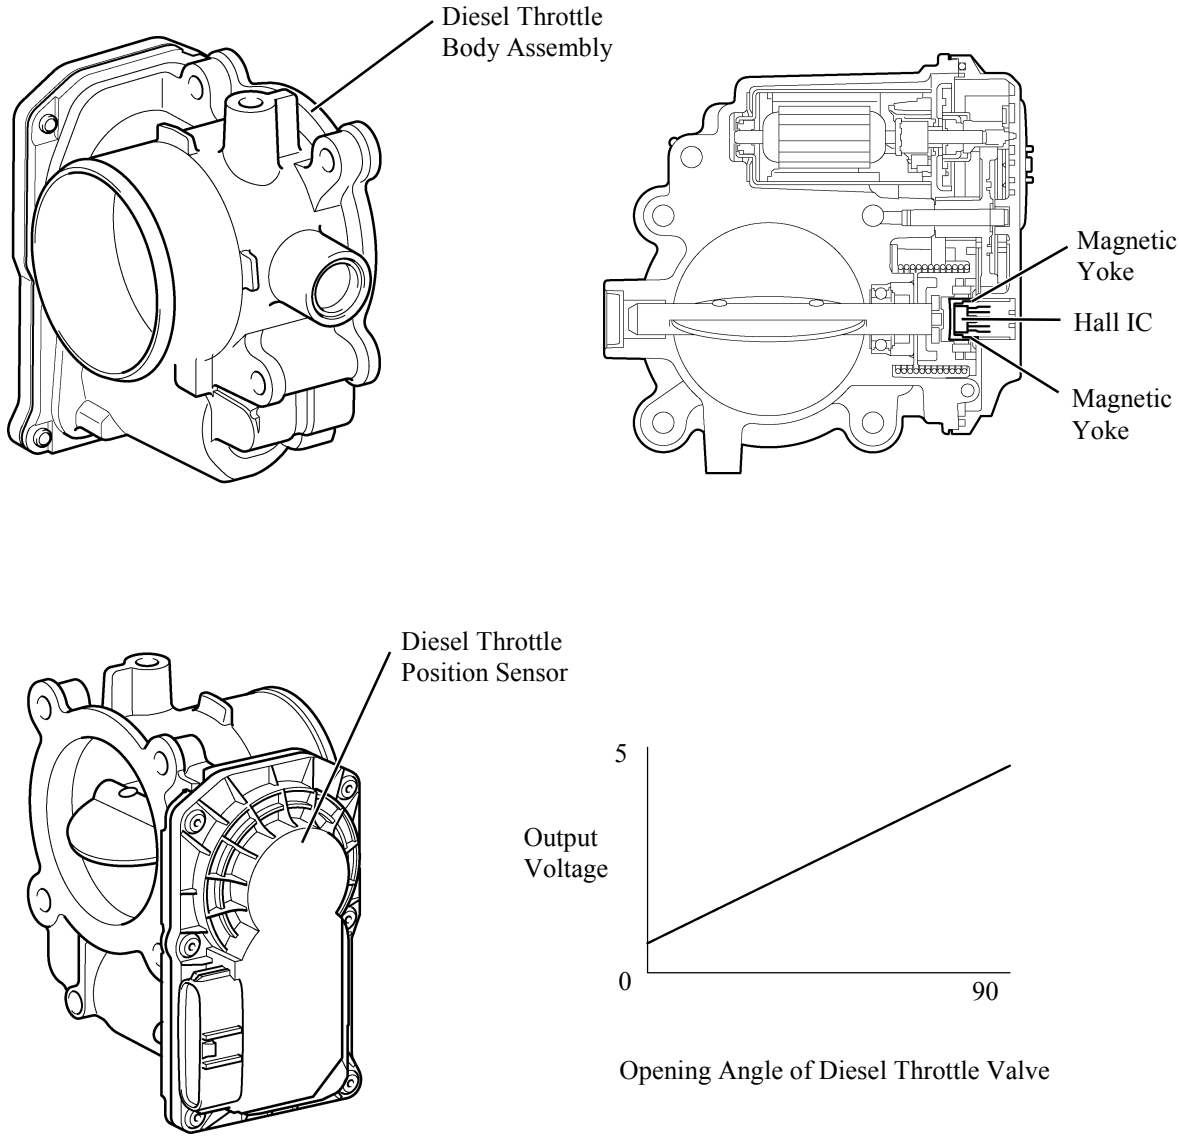

26T4EG56