

■ PARTS LOCATION

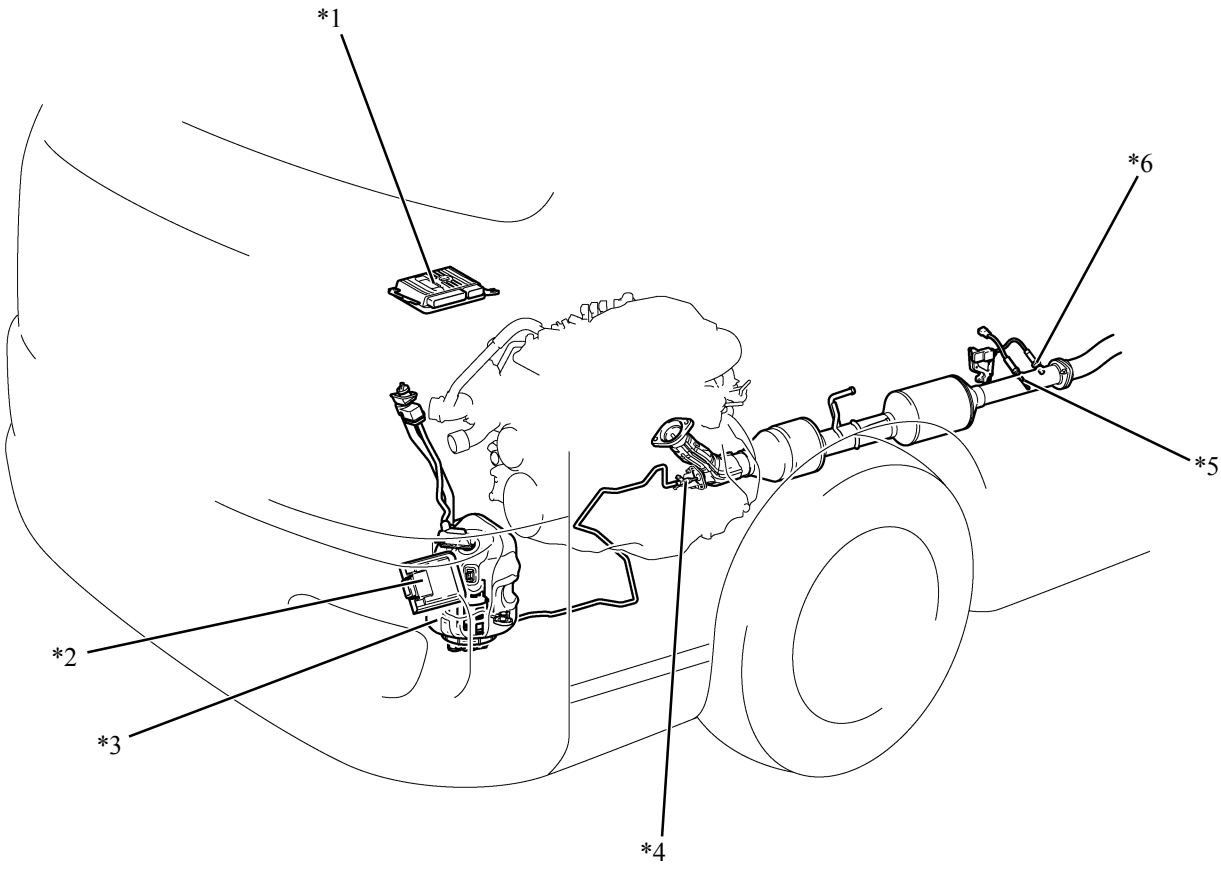

Text in Illustration

*1	ECM	*2	Urea Pump Control ECU
*3	Urea Tank Sub-assembly · Urea Pump	*4	Urea Injector Set
*5	No. 4 Exhaust Gas Temperature Sensor	*6	NOx Sensor (Nitrogen Oxides Sensor)

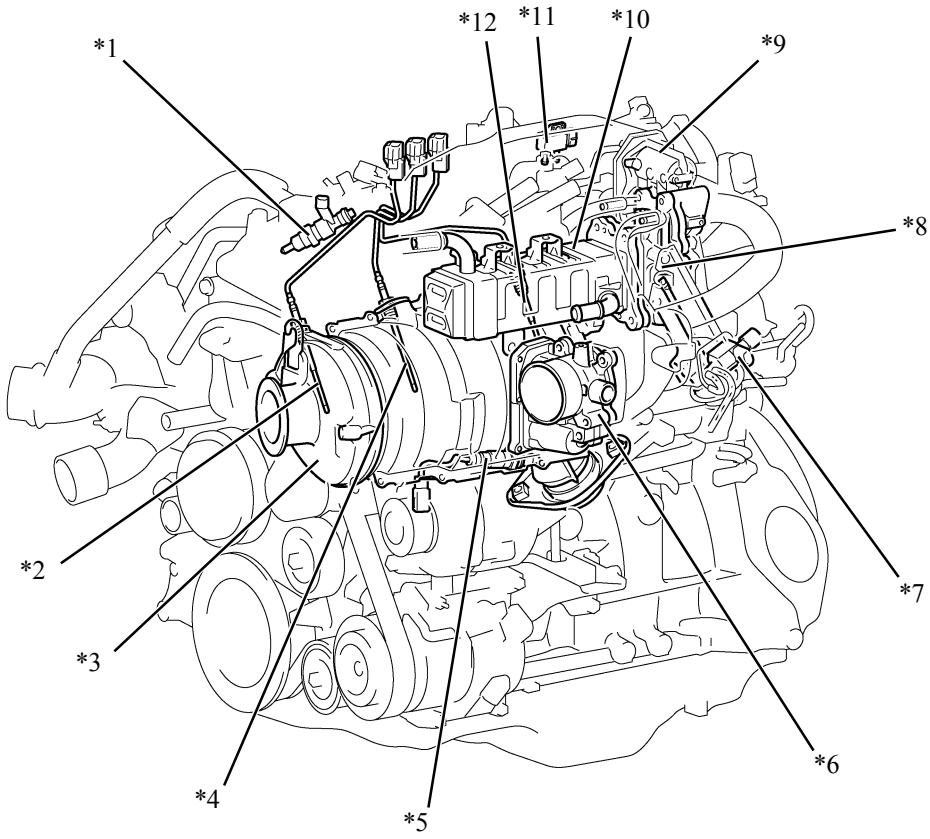

26T4EG09D

Text in Illustration

*1	Exhaust Fuel Addition Injector Assembly	*2	Exhaust Gas Temperature Sensor
*3	Exhaust Manifold Converter Sub-assembly · Oxidation Catalyst · DPF	*4	No. 2 Exhaust Gas Temperature Sensor
*5	Air Fuel Ratio Sensor	*6	Diesel Throttle Body Assembly
*7	Vacuum Switching Valve Assembly	*8	No. 2 EGR Valve Assembly
*9	Electric EGR Control Valve Assembly	*10	No. 1 EGR Cooler
*11	Differential Pressure Sensor	*12	No. 3 Exhaust Gas Temperature Sensor