
■ PARTS LOCATION

►Models with 1GD-FTV Engine◄

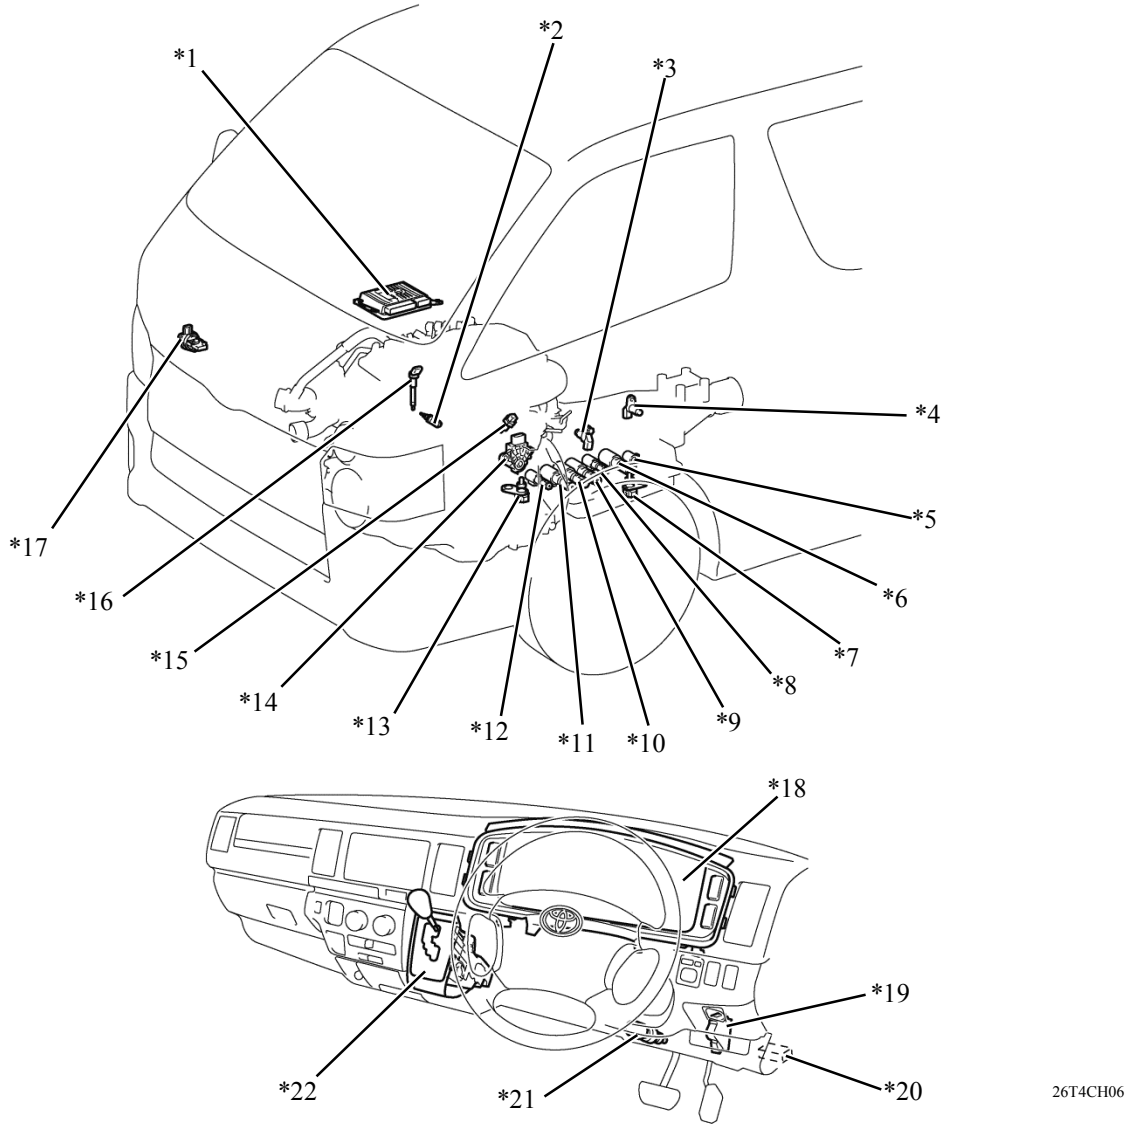

Text in Illustration

*1	ECM	*2	E.F.I. Engine Coolant Temperature Sensor
*3	Transmission Revolution Sensor (NT)	*4	Transmission Revolution Sensor (SP2)
*5	Shift Solenoid Valve DSL (SL)	*6	Shift Solenoid Valve SL1 (SL4)
*7	No. 1 ATF Temperature Sensor	*8	Shift Solenoid Valve (SLU) (Lock Up Control Solenoid Assembly)
*9	Shift Solenoid Valve SL1 (SL3)	*10	Shift Solenoid Valve SL1 (SL1)
*11	Shift Solenoid Valve SL1 (SL2)	*12	Shift Solenoid Valve (SLT) (Line Pressure Control Solenoid Assembly)
*13	No. 2 ATF Temperature Sensor	*14	Park/Neutral Position Switch Assembly
*15	Crank Position Sensor	*16	Injector Assembly
*17	Intake Mass Air Flow Meter Sub-assembly · Intake Air Temperature Sensor	*18	Combination Meter Assembly
*19	Accelerator Pedal Position Sensor	*20	DLC3
*21	Stop Light Switch Assembly	*22	Shift Lock Control Unit Assembly · Transmission Control Switch