

■ PARTS LOCATION

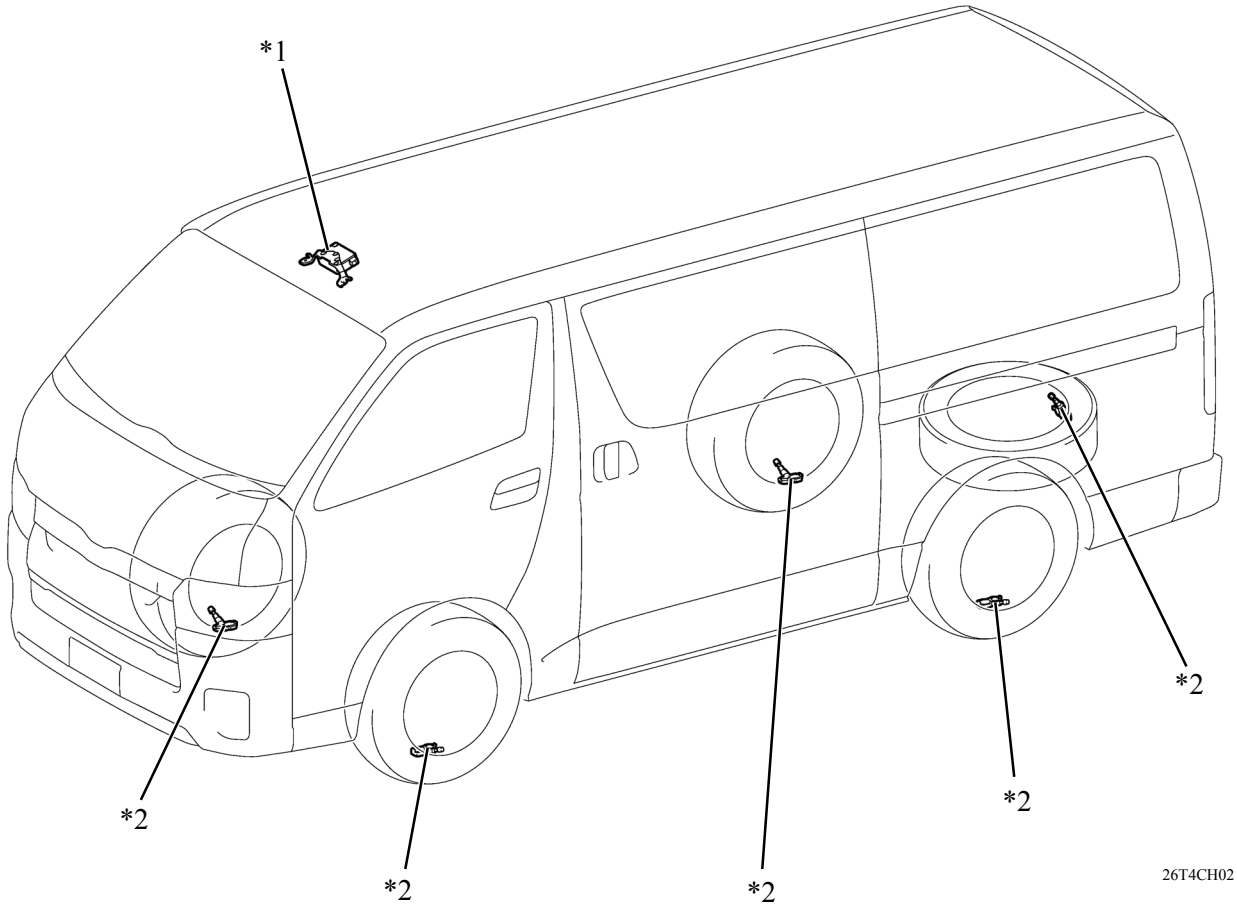

► Text in Illustration ◄

*1	Tire Pressure Monitor Receiver Assembly	*2	Tire Pressure Monitor Valve Sub-assembly

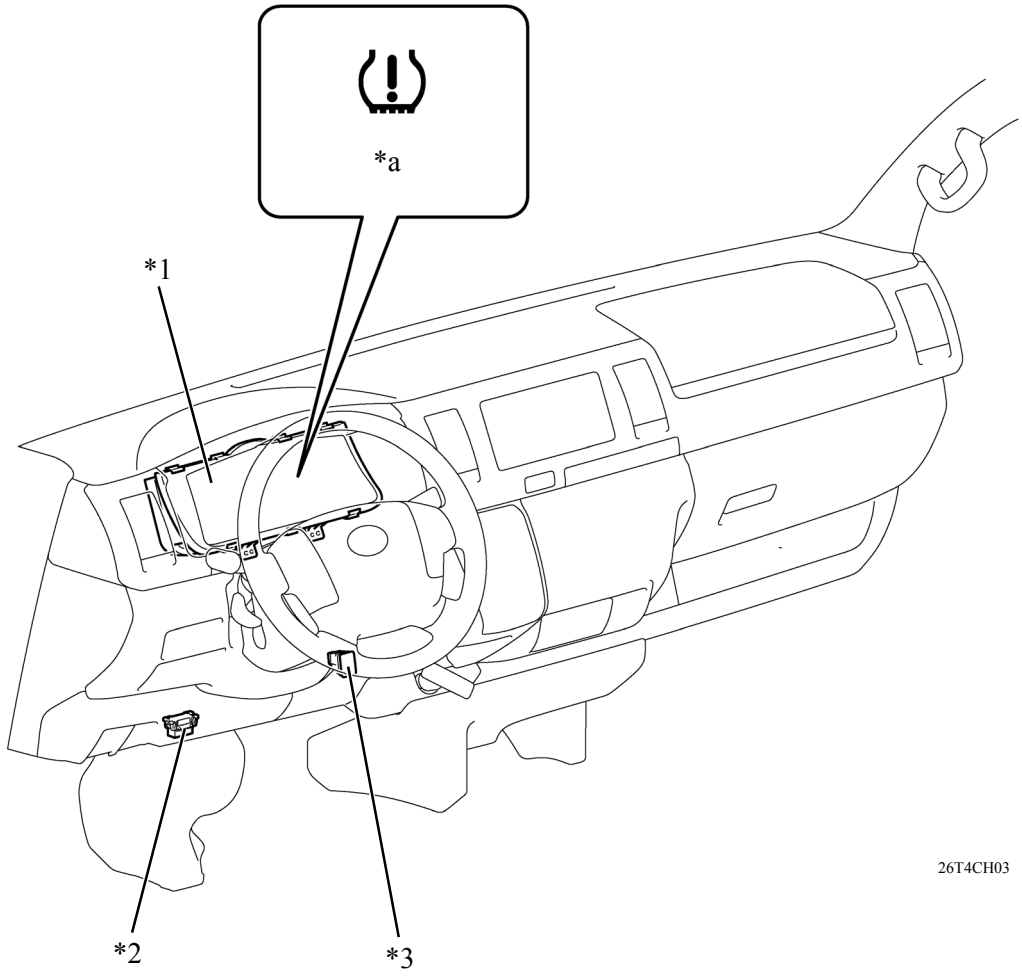

► Text in Illustration ◄

*1	Combination Meter Assembly - Speedometer	*2	DLC3
*3	Tire Pressure Warning Switch	-	-
*a	Tire Pressure Warning Light	-	-