
Position of Parts in Engine Compartment

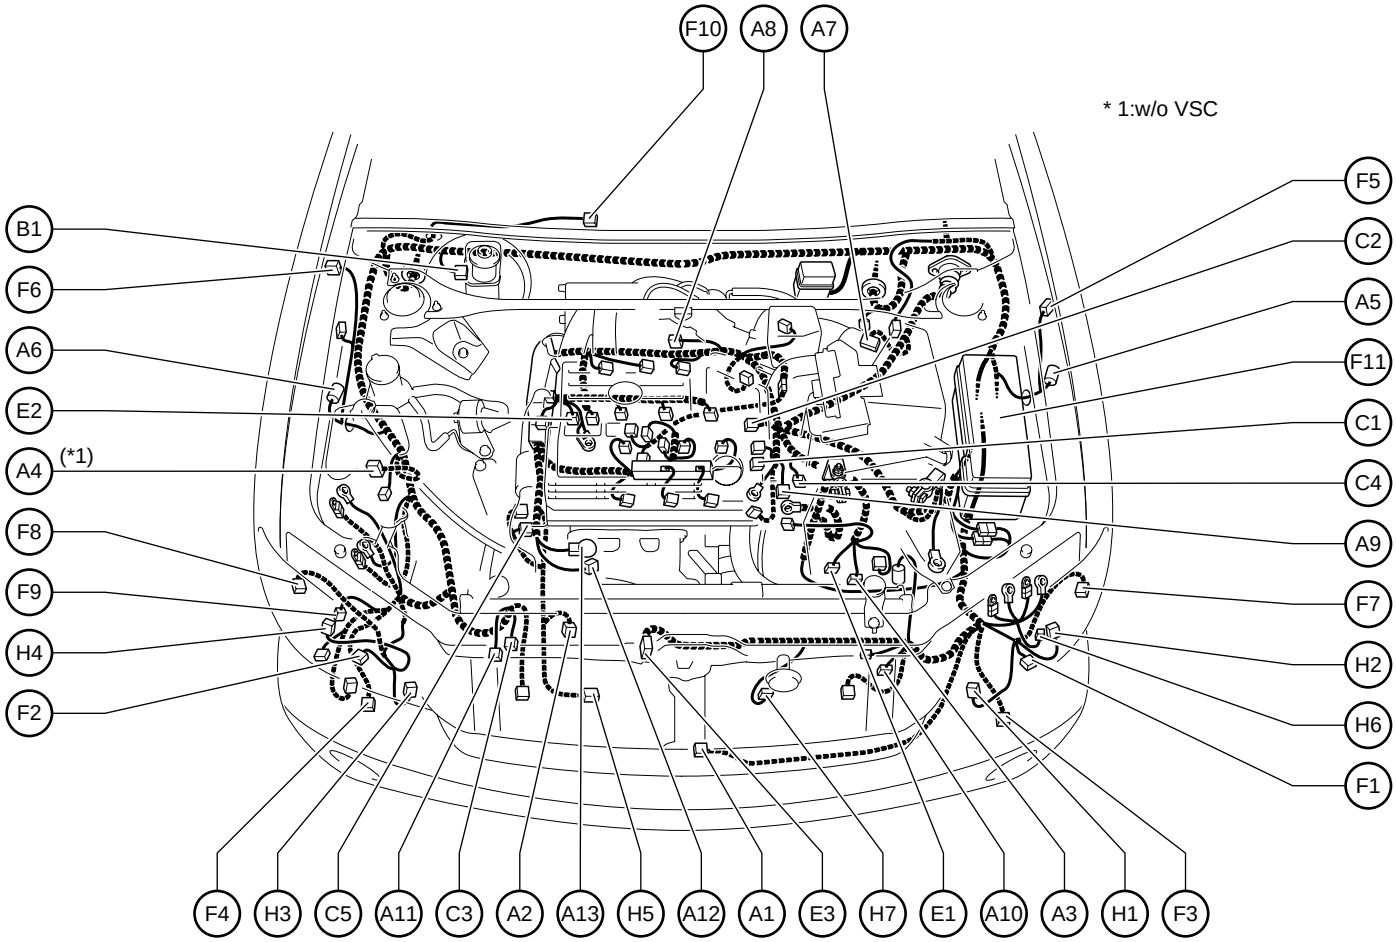

A 1 A/C Ambient Temp. Sensor
A 2 A/C Lock Sensor
A/C Magnetic Clutch
A 3 A/T Indicator SW
Back–Up Light SW
Neutral Start SW
A 4 ABS Actuator
A 5 ABS Speed Sensor Front LH
A 6 ABS Speed Sensor Front RH
A 7 Air Flow Meter
A 8 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
A 9 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
A 10 Airbag Sensor Front LH
A 11 Airbag Sensor Front RH
A 12 Alternator
A 13 Alternator

B 1 Brake Warning SW

C 1 Camshaft Timing Control Valve LH
C 2 Camshaft Timing Control Valve RH
C 3 Condenser Fan Motor
C 4 Counter Gear Speed Sensor
C 5 Crankshaft Position Sensor

E 1 ECT Solenoid
E 2 EFI Water Temp. Sensor
E 3 Engine Hood Courtesy SW

F 1 Front Clearance Light LH
F 2 Front Clearance Light RH
F 3 Front Fog Light LH
F 4 Front Fog Light RH
F 5 Front Side Turn Signal Light LH
F 6 Front Side Turn Signal Light RH
F 7 Front Turn Signal Light LH
F 8 Front Turn Signal Light RH
F 9 Front Washer Motor
F 10 Front Wiper Motor
F 11 Fusible Link Block

H 1 Headlight LH (High)
H 2 Headlight LH (Low)
H 3 Headlight RH (High)
H 4 Headlight RH (Low)
H 5 Heated Oxygen Sensor (Bank 2 Sensor 2)
H 6 Horn LH
H 7 Horn RH