
Position of Parts in Engine Compartment

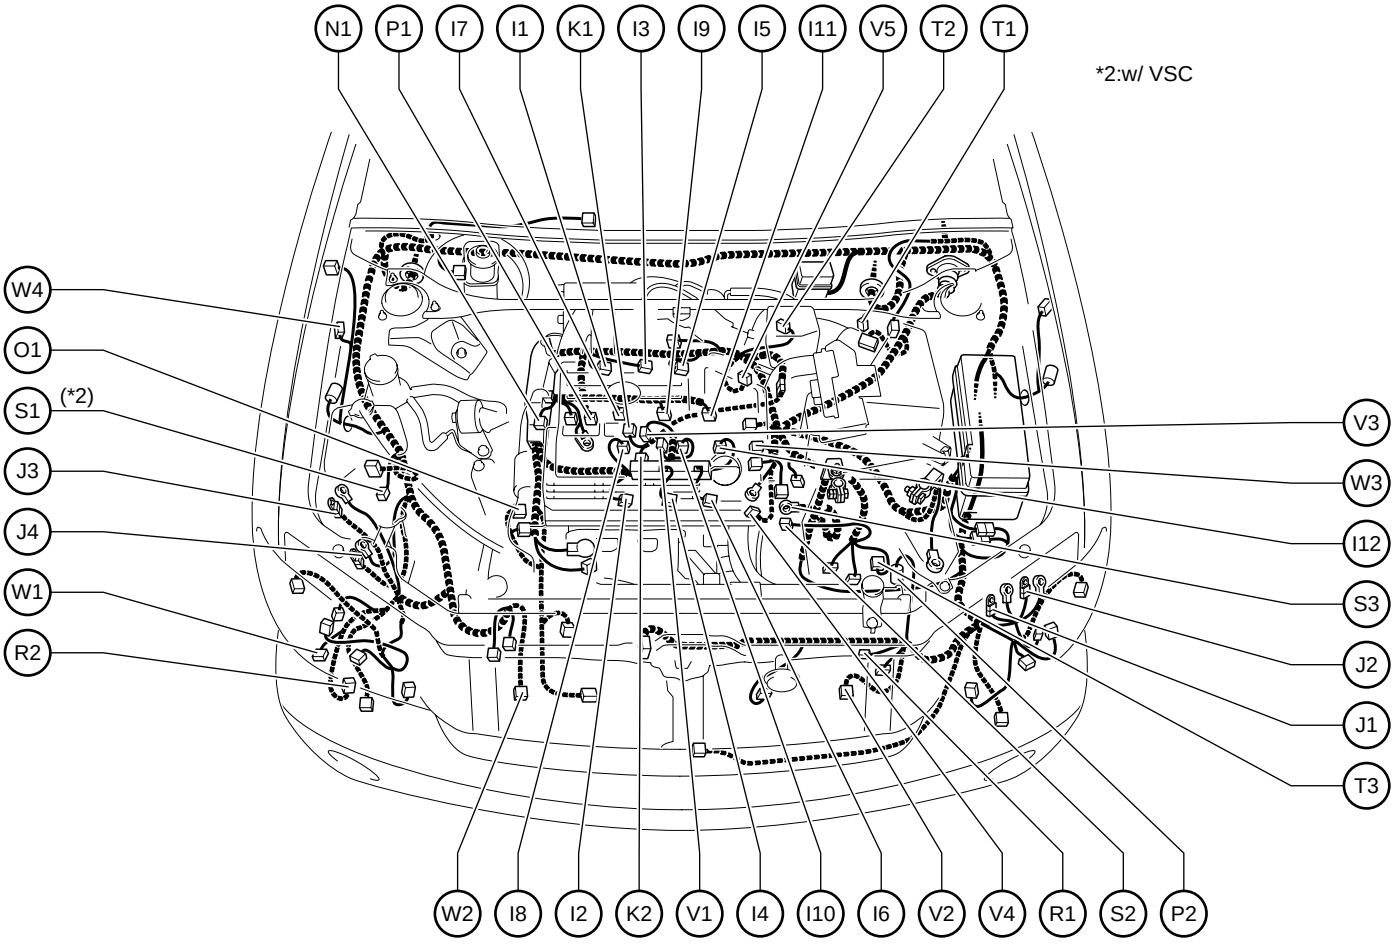

I 1 Ignition Coil and Igniter No.1
I 2 Ignition Coil and Igniter No.2
I 3 Ignition Coil and Igniter No.3
I 4 Ignition Coil and Igniter No.4
I 5 Ignition Coil and Igniter No.5
I 6 Ignition Coil and Igniter No.6
I 7 Injector No.1
I 8 Injector No.2
I 9 Injector No.3
I 10 Injector No.4
I 11 Injector No.5
I 12 Injector No.6

J 1 Junction Connector
J 2 Junction Connector
J 3 Junction Connector
J 4 Junction Connector

K 1 Knock Sensor 1
K 2 Knock Sensor 2

N 1 Noise Filter (Ignition System)

O 1 Oil Pressure SW

P 1 Power Steering Oil Pressure SW
P 2 Pressure SW

R 1 Radiator Fan Motor
R 2 Rear Washer Motor

S 1 Skid Control ECU with Actuator
S 2 Starter
S 3 Starter

T 1 Theft Deterrent Horn
T 2 Throttle Control Motor and Sensor
T 3 Turbine Speed Sensor

V 1 VSV (ACIS No.2)
V 2 VSV (ACM)
V 3 VSV (EVAP)
V 4 VVT Sensor LH
V 5 VVT Sensor RH

W 1 Washer Level Sensor
W 2 Water Temp. SW No.1
W 3 Water Temp. SW No.2
W 4 Wireless Door Lock Buzzer