
Position of Parts in Instrument Panel

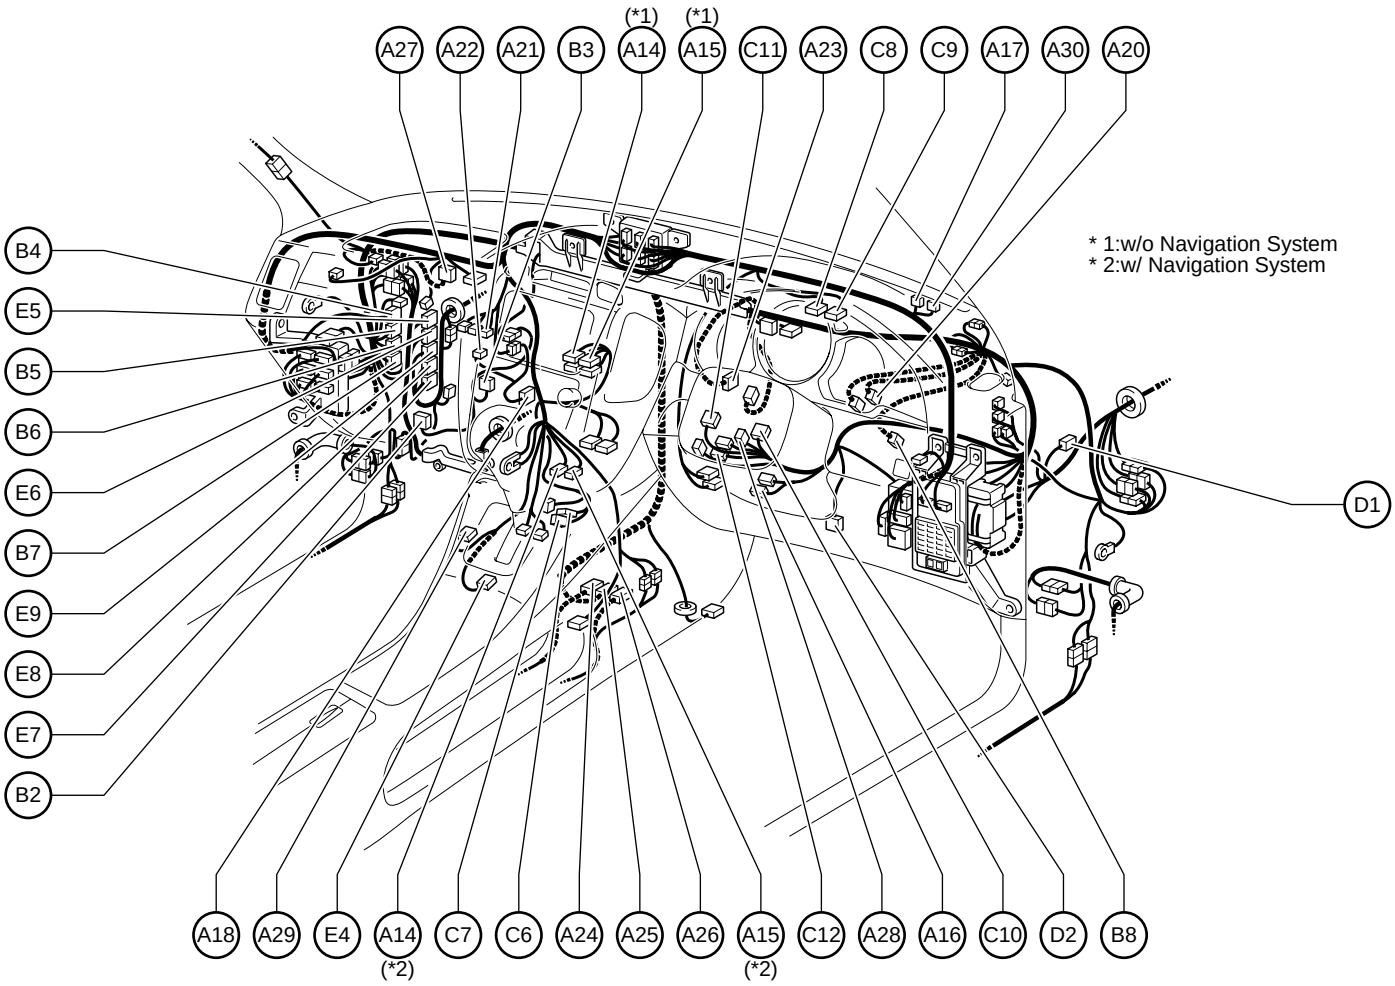

A14 A/C Control Assembly
A15 A/C Control Assembly
A16 A/C Room Temp. Sensor
A17 A/C Solar Sensor
A18 A/C Thermistor
A20 Accelerator Pedal Position Sensor
A21 Air Inlet Control Servo Motor
A22 Air Mix Control Servo Motor
A23 Air Vent Mode Control Servo Motor
A24 Airbag Sensor Assembly
A25 Airbag Sensor Assembly
A26 Airbag Sensor Assembly
A27 Airbag Squib (Front Passenger Airbag Assembly)
A28 Airbag Squib (Steering Wheel Pad)
A29 Ashtray Illumination
A30 Automatic Light Control Sensor

B 2 Blower Motor
B 3 Blower Motor Controller
B 4 Body ECU
B 5 Body ECU
B 6 Body ECU
B 7 Body ECU
B 8 Brake Pedal Load Sensing SW

C 6 Cigarette Lighter
C 7 Cigarette Lighter Illumination
C 8 Combination Meter
C 9 Combination Meter
C10 Combination SW
C11 Combination SW
C12 Combination SW

D 1 Diode (Cooling Fan)
D 2 DLC3

E 4 ECT Pattern Select SW
E 5 Engine and ECT ECU
E 6 Engine and ECT ECU
E 7 Engine and ECT ECU
E 8 Engine and ECT ECU
E 9 Engine and ECT ECU