
Position of Parts in Instrument Panel

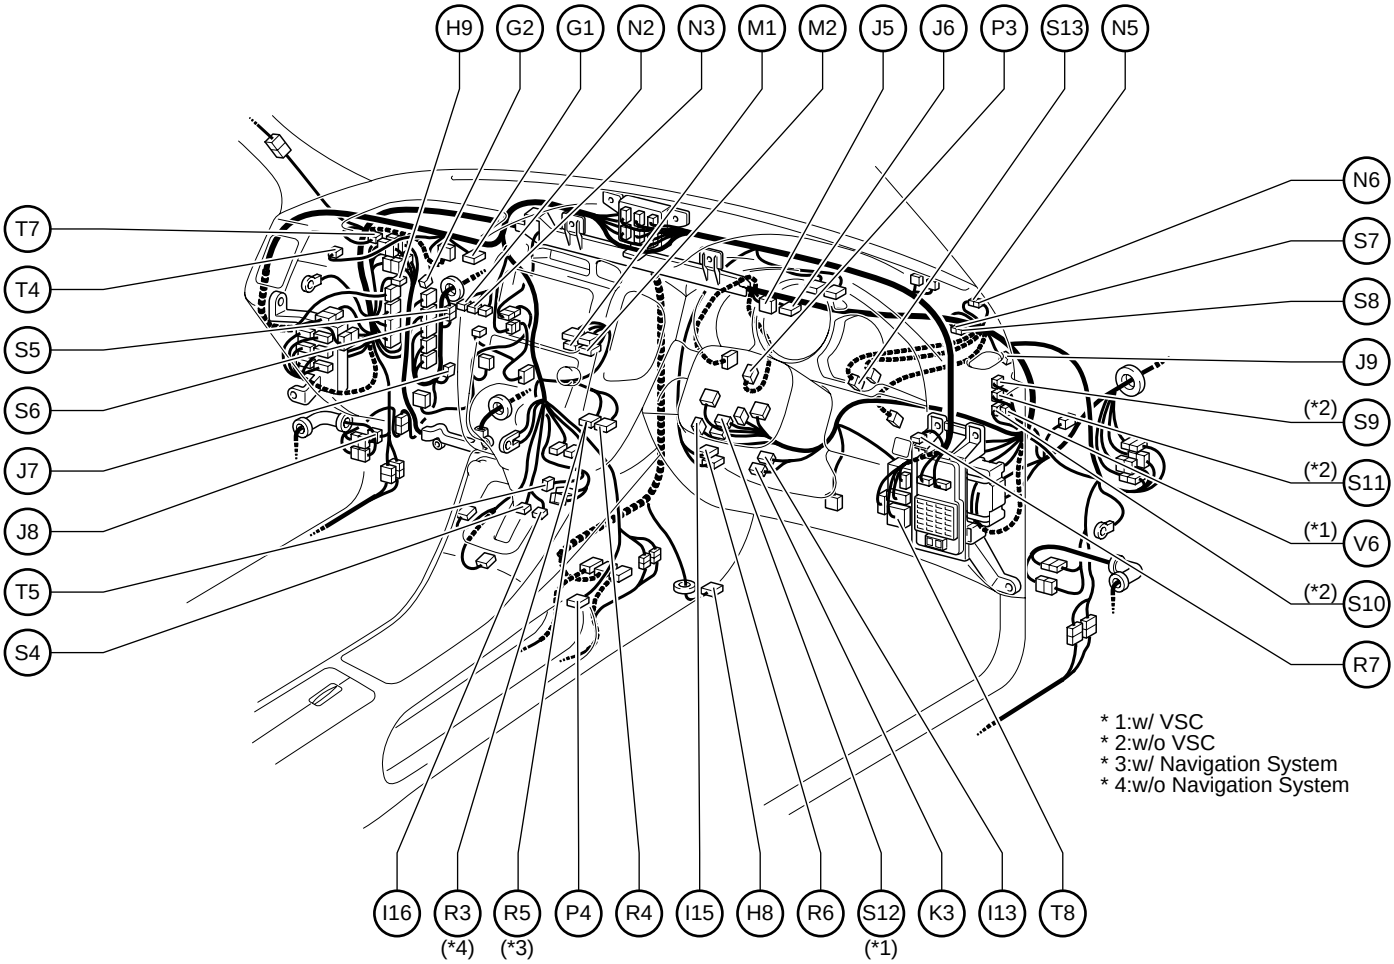

G 1 Gateway ECU
G 2 Glove Box Light

H 8 Heated Oxygen Sensor (Bank 1 Sensor 2)
H 9 Heater Relay

I 13 Ignition SW
I 15 Ignition Key Cylinder Light
Transponder Key Amplifier
I 16 Indicator Light Wire Sub Assembly
Transmission Control SW
Transmission Shift Main SW

J 5 Junction Connector
J 6 Junction Connector
J 7 Junction Connector
J 8 Junction Connector
J 9 Junction Connector

K 3 Key Interlock Solenoid
Unlock Warning SW

M 1 Multi–Display
M 2 Multi–Display

N 2 Navigation ECU
N 3 Navigation ECU
N 5 Noise Filter (Stop Light)
N 6 Noise Filter (Stop Light)

P 3 Parking Brake SW
P 4 Power Outlet (Front)

R 3 Radio and Player
R 4 Radio and Player
R 5 Radio and Player
R 6 Rear Heater Main SW
R 7 Remote Control Mirror SW

S 4 Shift Lock ECU
S 5 Short Connector
S 6 Short Connector
S 7 Short Connector
S 8 Short Connector
S 9 Skid Control ECU
S10 Skid Control ECU
S11 Skid Control ECU
S12 Steering Sensor
S13 Stop Light SW

T 4 Theft Deterrent ECU
T 5 Theft Deterrent Indicator Light
T 7 Transponder Key Computer
T 8 Turn Signal Flasher

V 6 VSC Warning Buzzer