
Position of Parts in Body

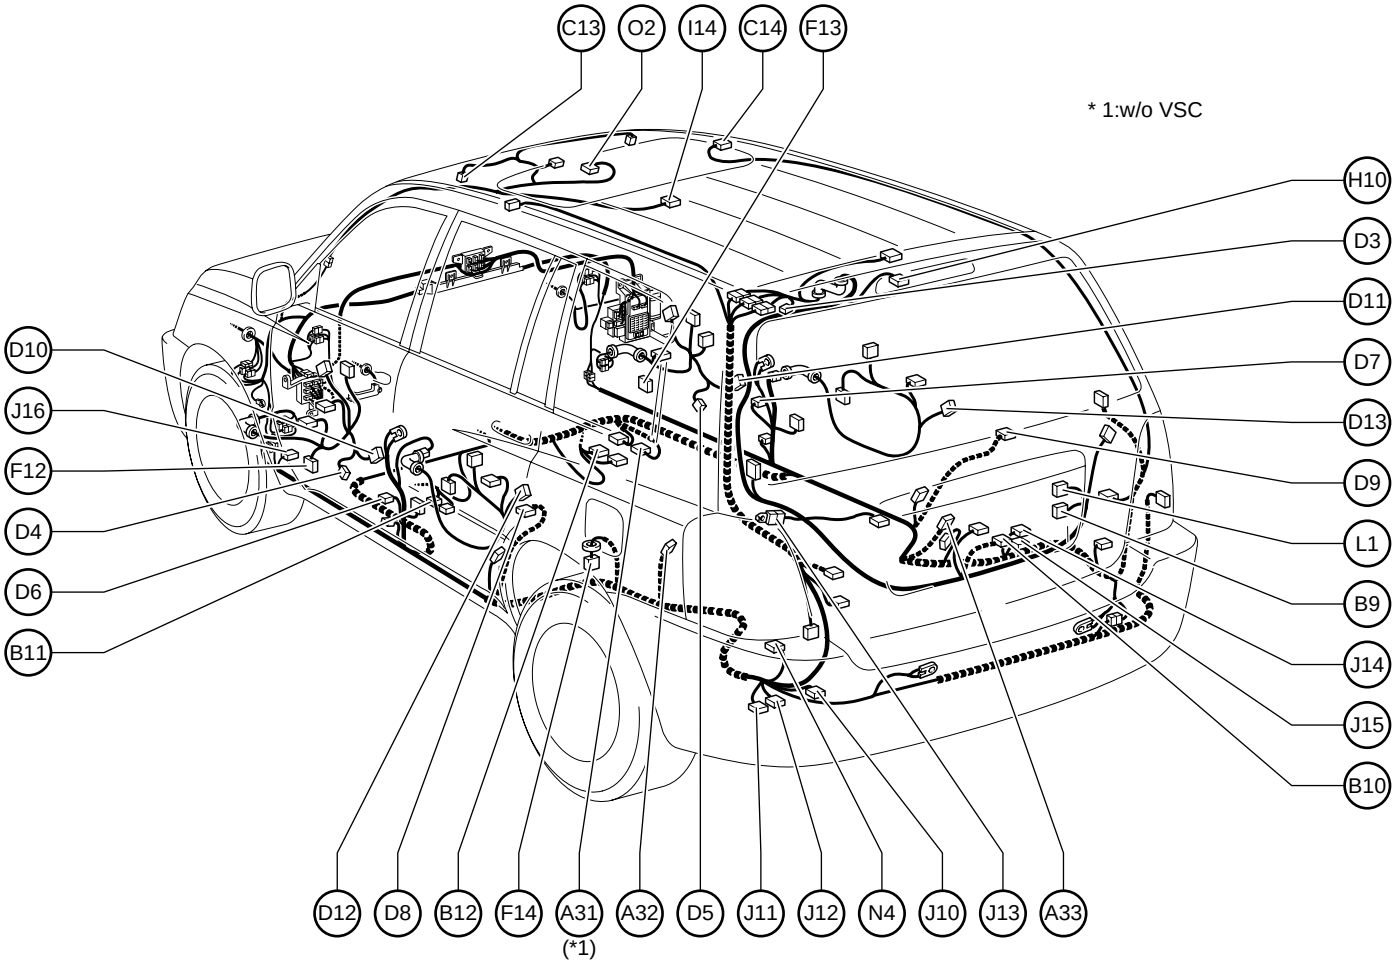

A31 ABS Deceleration Sensor
A32 ABS Speed Sensor Rear LH
A33 ABS Speed Sensor Rear RH

B 9 Back Door Key Lock and Unlock SW
B10 Back Door Lock Motor
Back Door Unlock Detection SW
B11 Buckle SW (Front Passenger's Side)
B12 Buckle SW RH
Seat Position Airbag Sensor RH

C13 Curtain Shield Airbag Squib LH
C14 Curtain Shield Airbag Squib RH

D 3 Diode (Rear Interior Light)
D 4 Door Courtesy Light Front LH
D 5 Door Courtesy Light Front RH
D 6 Door Courtesy SW Front LH
D 7 Door Courtesy SW Front RH
D 8 Door Courtesy SW Rear LH
D 9 Door Courtesy SW Rear RH
D10 Door Key Lock and Unlock SW Front LH
Door Lock Motor Front LH
Door Unlock Detection SW Front LH
D11 Door Key Lock and Unlock SW Front RH
Door Lock Motor Front RH
Door Unlock Detection SW Front RH
D12 Door Lock Motor Rear LH
Door Unlock Detection SW Rear LH
D13 Door Lock Motor Rear RH
Door Unlock Detection SW Rear RH

F 12 Front Door Speaker LH
F 13 Front Door Speaker RH
F 14 Fuel Pump
Fuel Sender

H10 High Mounted Stop Light

I 14 Interior Light

J 10 Junction Connector
J 11 Junction Connector
J 12 Junction Connector
J 13 Junction Connector
J 14 Junction Connector
J 15 Junction Connector
J 16 Junction Connector

L 1 License Plate light

N 4 Noise Filter (Rear Window Defogger)

O 2 Overhead J/B