
Position of Parts in Seat

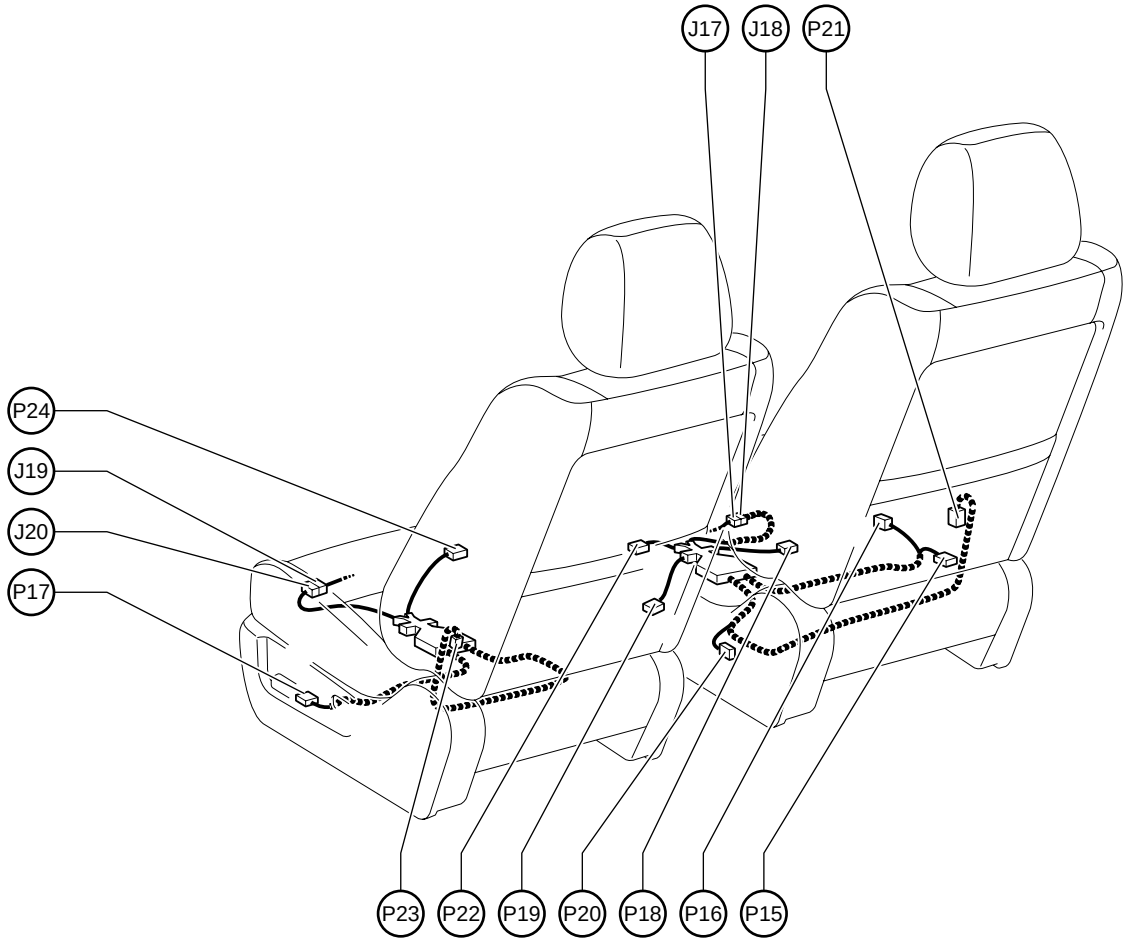

J 17 Junction Connector
J 18 Junction Connector
J 19 Junction Connector
J 20 Junction Connector

P 15 Power Seat Control SW (Driver's Seat Lumbar Support Control)
P 16 Power Seat Control SW (Driver's Seat)
P 17 Power Seat Control SW (Front Passenger's Seat)
P 18 Power Seat Motor (Driver's Seat Front Vertical Motor)
P 19 Power Seat Motor (Driver's Seat Lifter Control)
P 20 Power Seat Motor (Driver's Seat Lumbar Support Control)
P 21 Power Seat Motor (Driver's Seat Reclining Control)
P 22 Power Seat Motor (Driver's Seat Slide Control)
P 23 Power Seat Motor (Front Passenger's Reclining Control)
P 24 Power Seat Motor (Front Passenger's Seat Slide Control)