
Connector Joining Wire Harness and Wire Harness

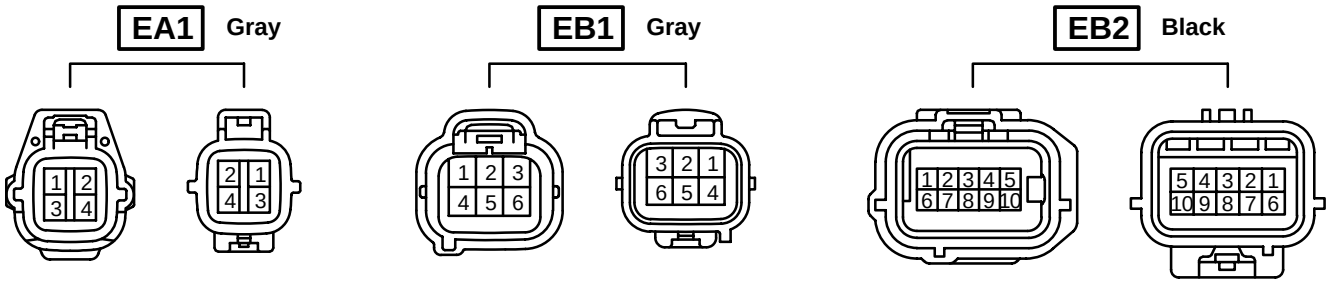

Code	Joining Wire Harness and Wire Harness (Connector Location)
EA1	Engine Wire and Sensor Wire (Right Side of Cylinder Head)
EB1	Engine Wire and Engine Room Main Wire (Front Side of Engine Room R/B)
EB2	