
Connector Joining Wire Harness and Wire Harness

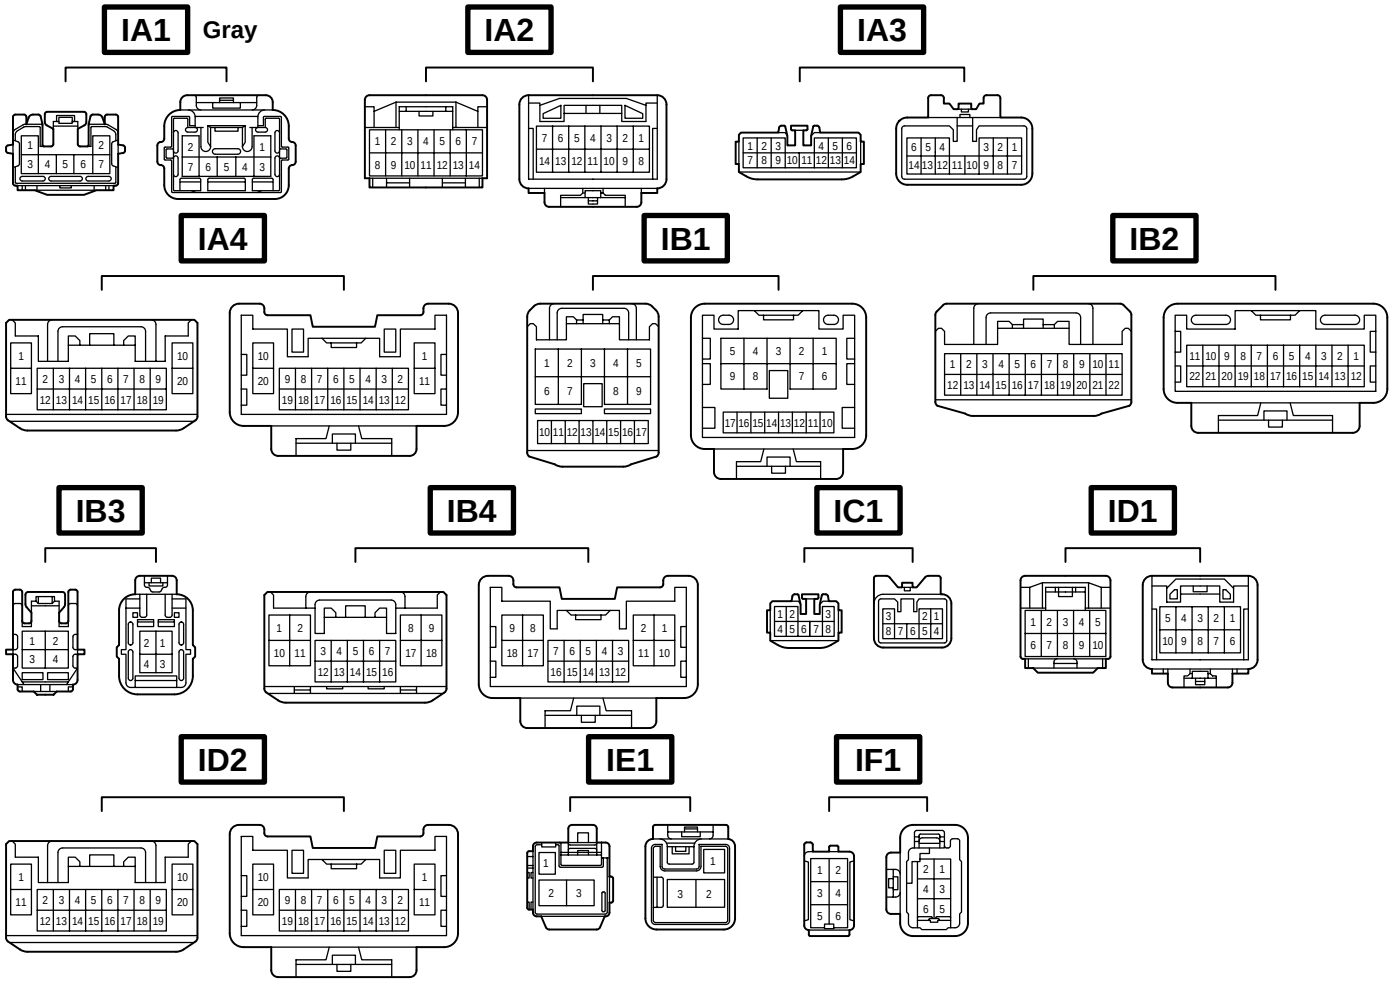

Code	Joining Wire Harness and Wire Harness (Connector Location)
IA1	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IA2	
IA3	Cowl Wire and Floor No.2 Wire (Left Kick Panel)
IA4	
IB1	Engine Room Main Wire and Cowl Wire (Right Cowl Side Panel)
IB2	
IB3	
IB4	
IC1	Roof Wire and Cowl Wire (Near the Bottom of Left Front Pillar)
ID1	Instrument Panel Wire and Cowl Wire (Right Side of Instrument Panel J/B)
ID2	
IE1	Cowl Wire and A/C Sub No.2 Wire (Upper Portion of Left Instrument Panel Brace)
IF1	Instrument Panel Wire and A/C Sub No.3 Wire (Upper Portion of Left Instrument Panel Brace)