
Connector Joining Wire Harness and Wire Harness

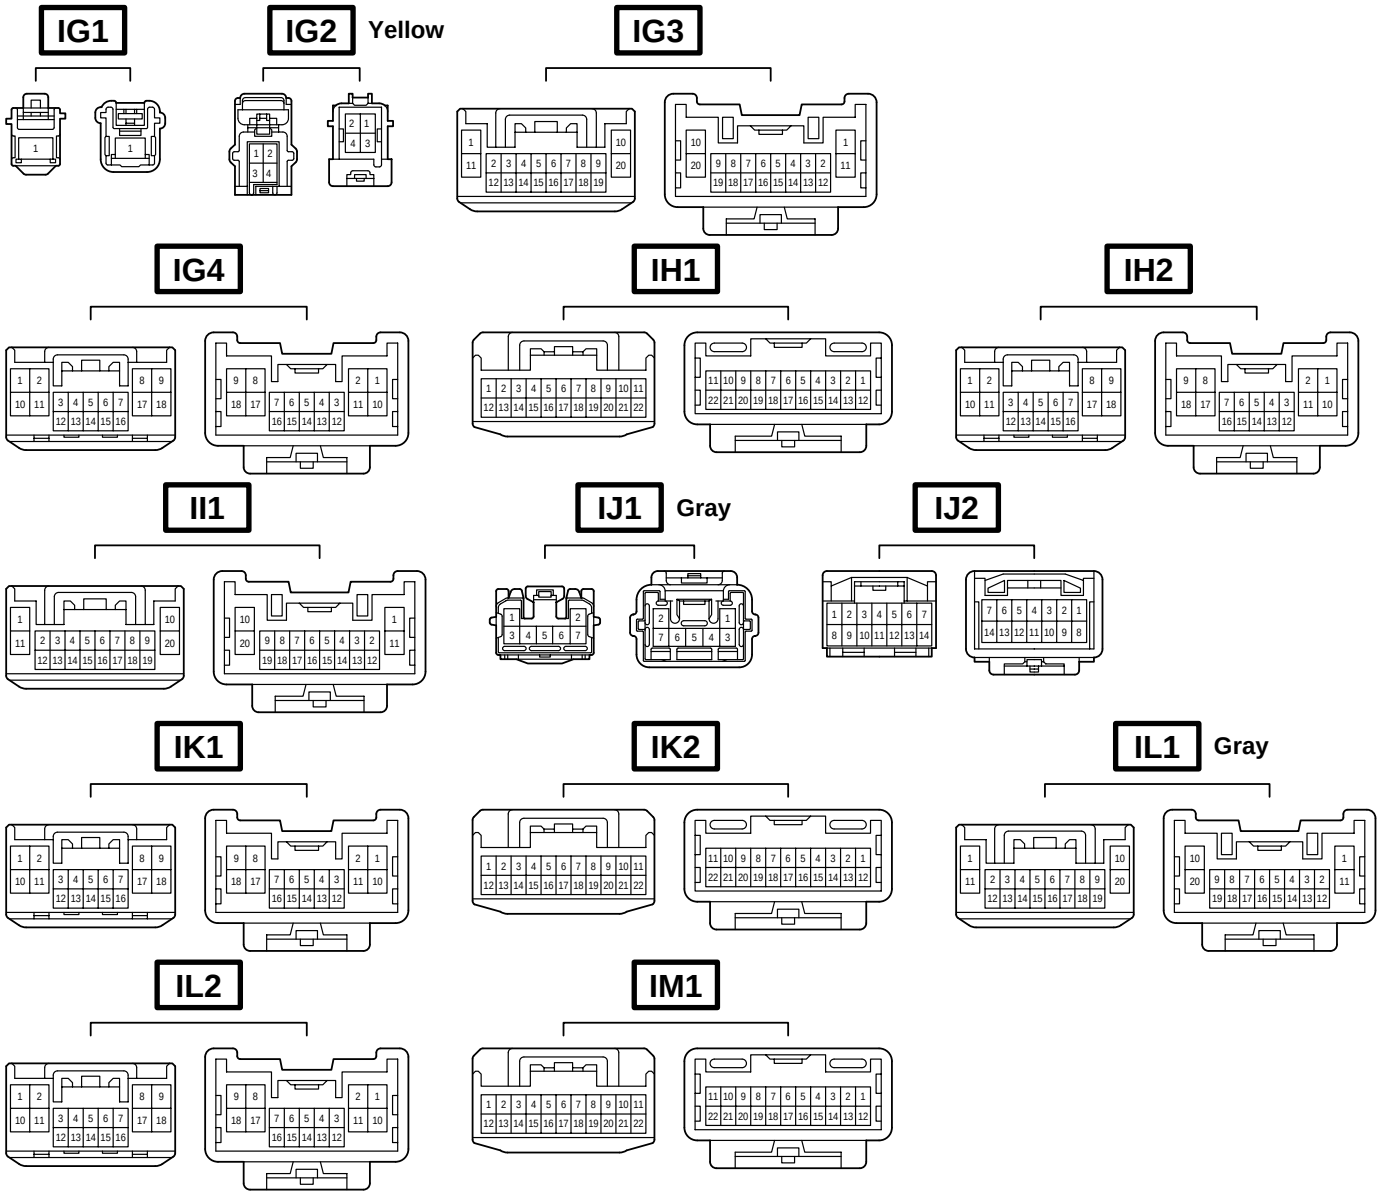

Code	Joining Wire Harness and Wire Harness (Connector Location)
IG1	Engine Room Main Wire and Cowl Wire (Left Cowl Side Panel)
IG2	
IG3	
IG4	
IH1	Instrument Panel Wire and Cowl Wire (Upper Side of Passenger Side J/B)
IH2	
II1	Engine Wire and Cowl Wire (Left Kick Panel)
IJ1	Front Door RH Wire and Cowl Wire (Right Kick Panel)
IJ2	
IK1	Cowl Wire and Floor Wire (Right Kick Panel)
IK2	
IL1	Instrument Panel Wire and Floor Wire (Instrument Panel Brace RH)
IL2	
IM1	Instrument Panel Wire and Cowl Wire (Left Side of Instrument Panel J/B)