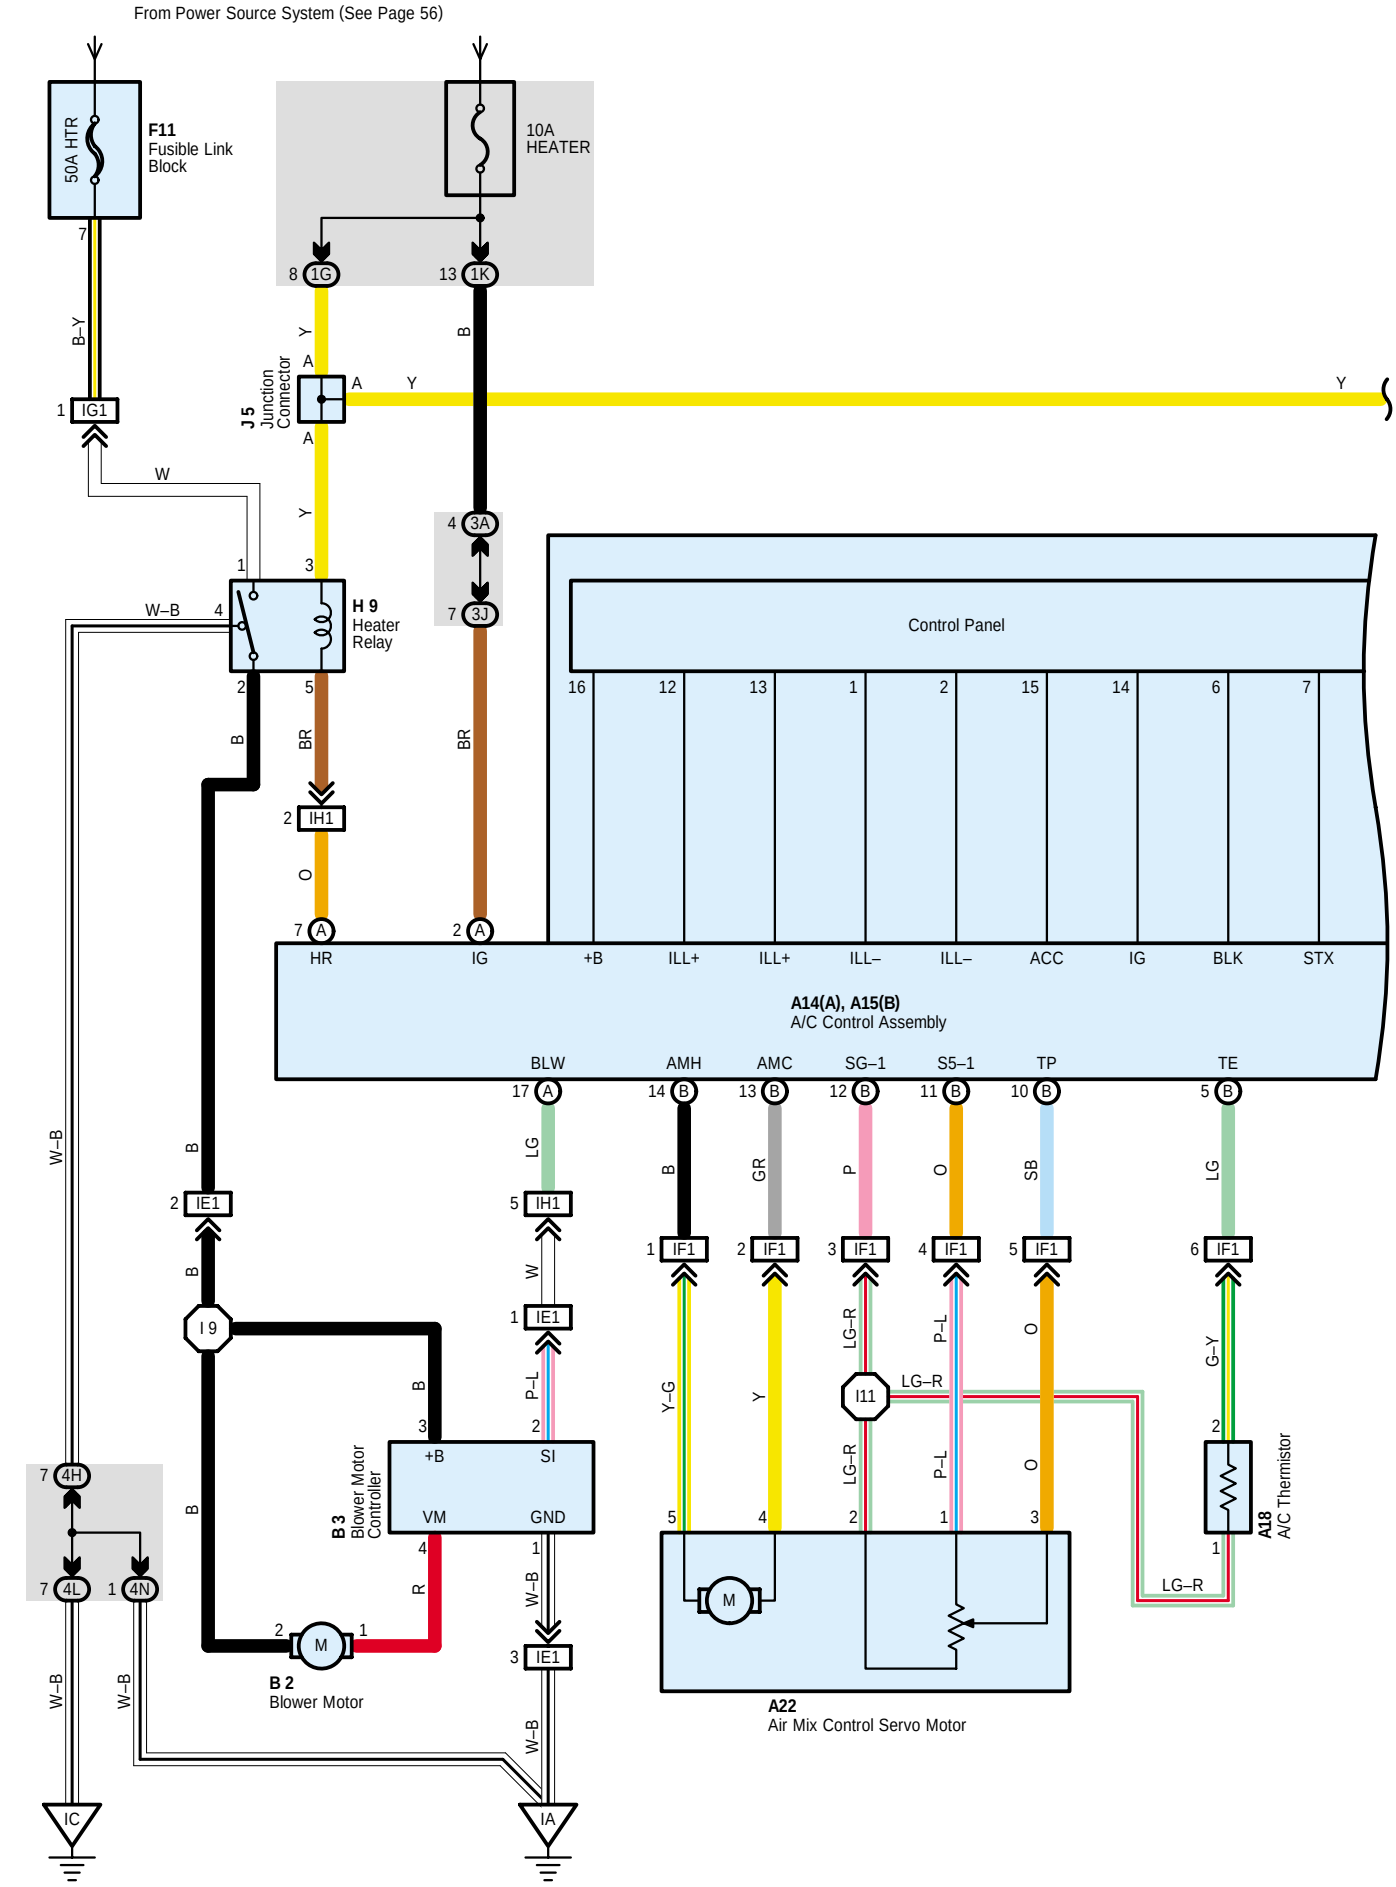
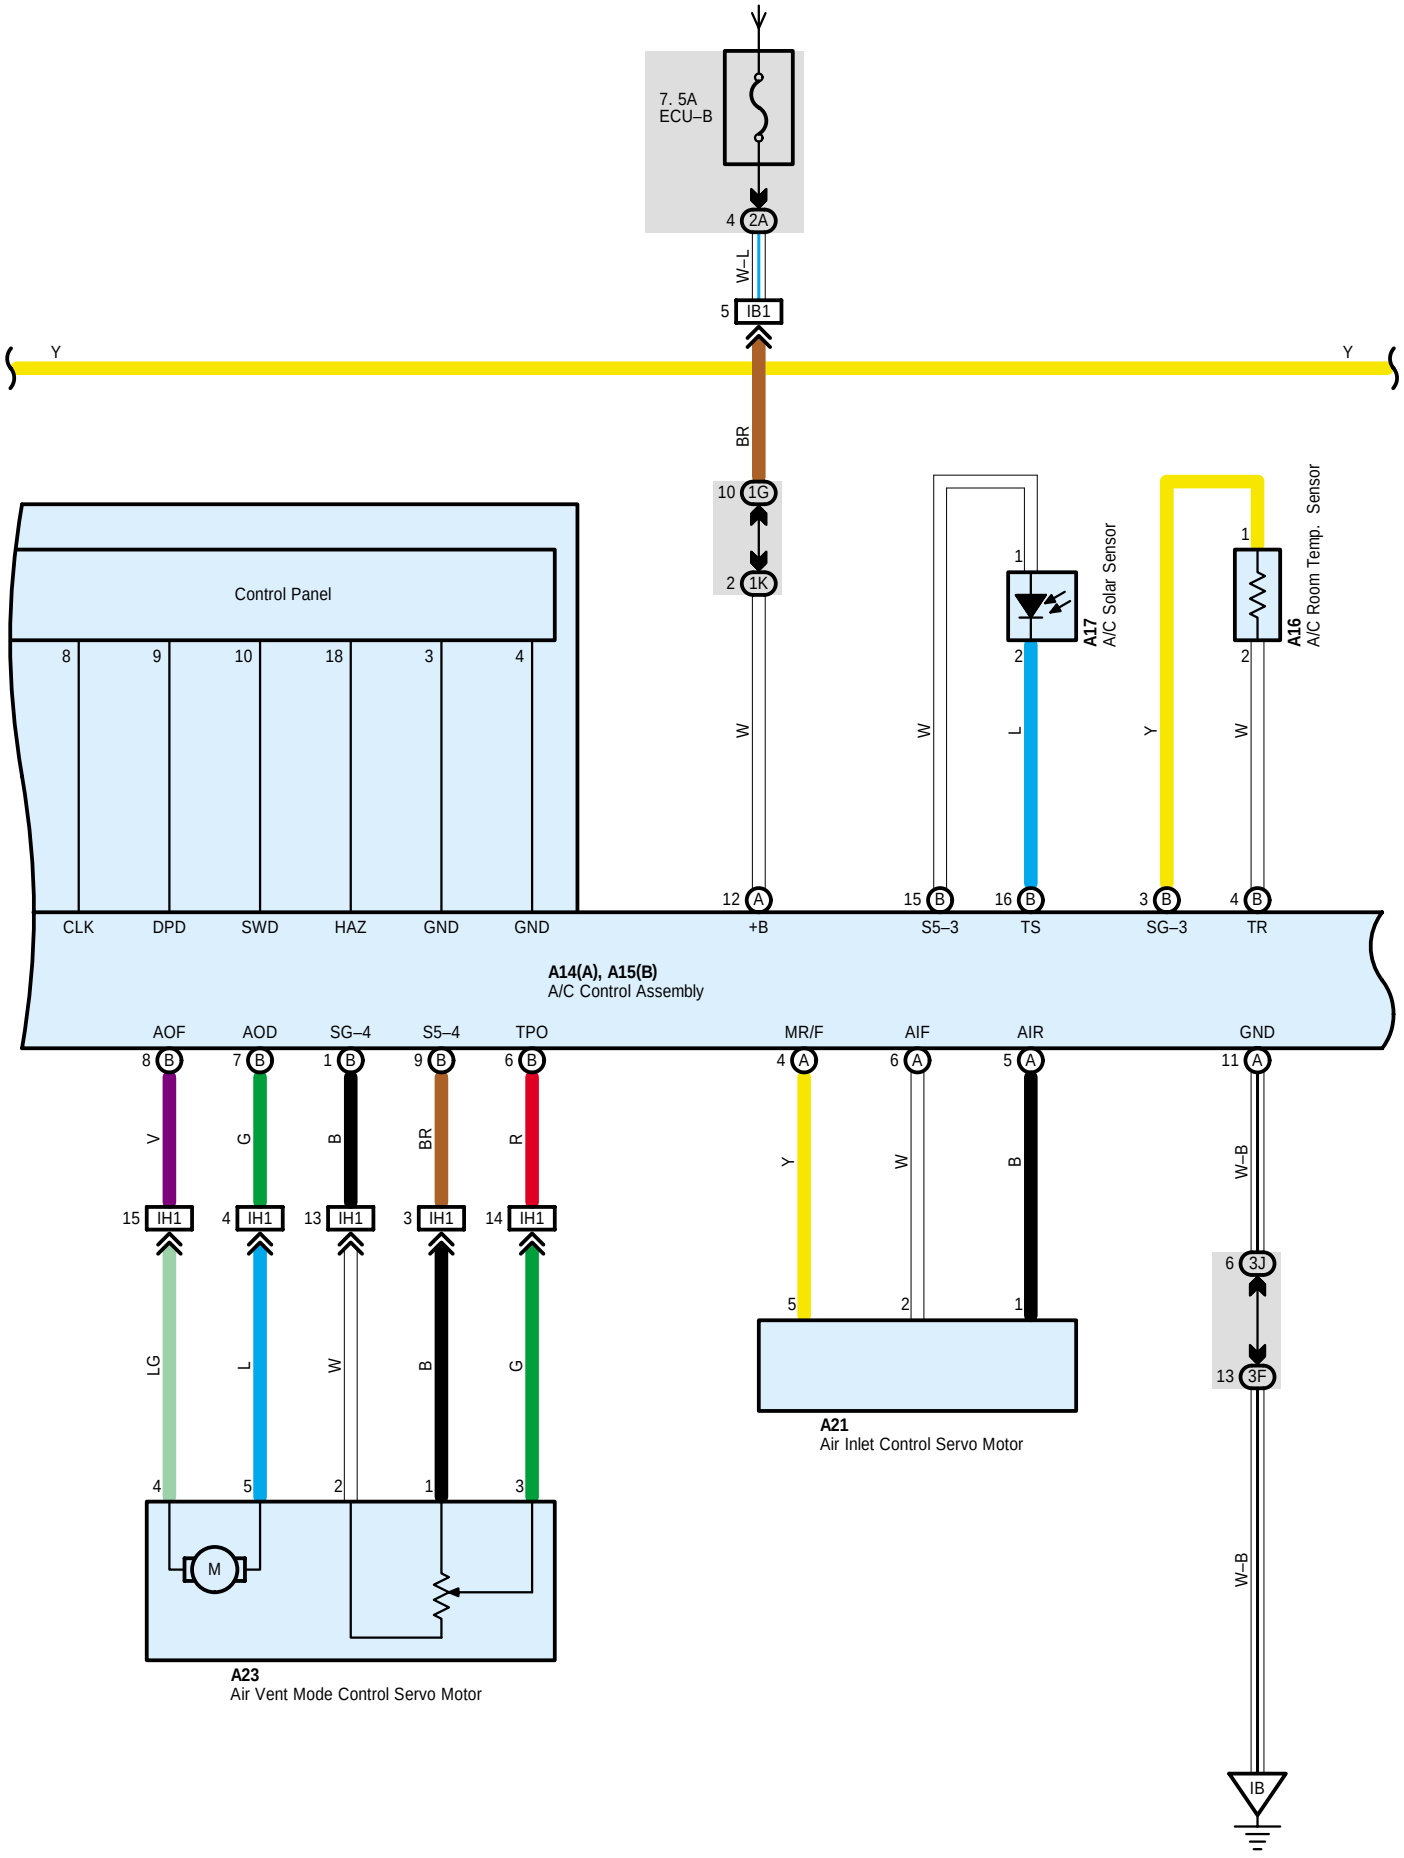
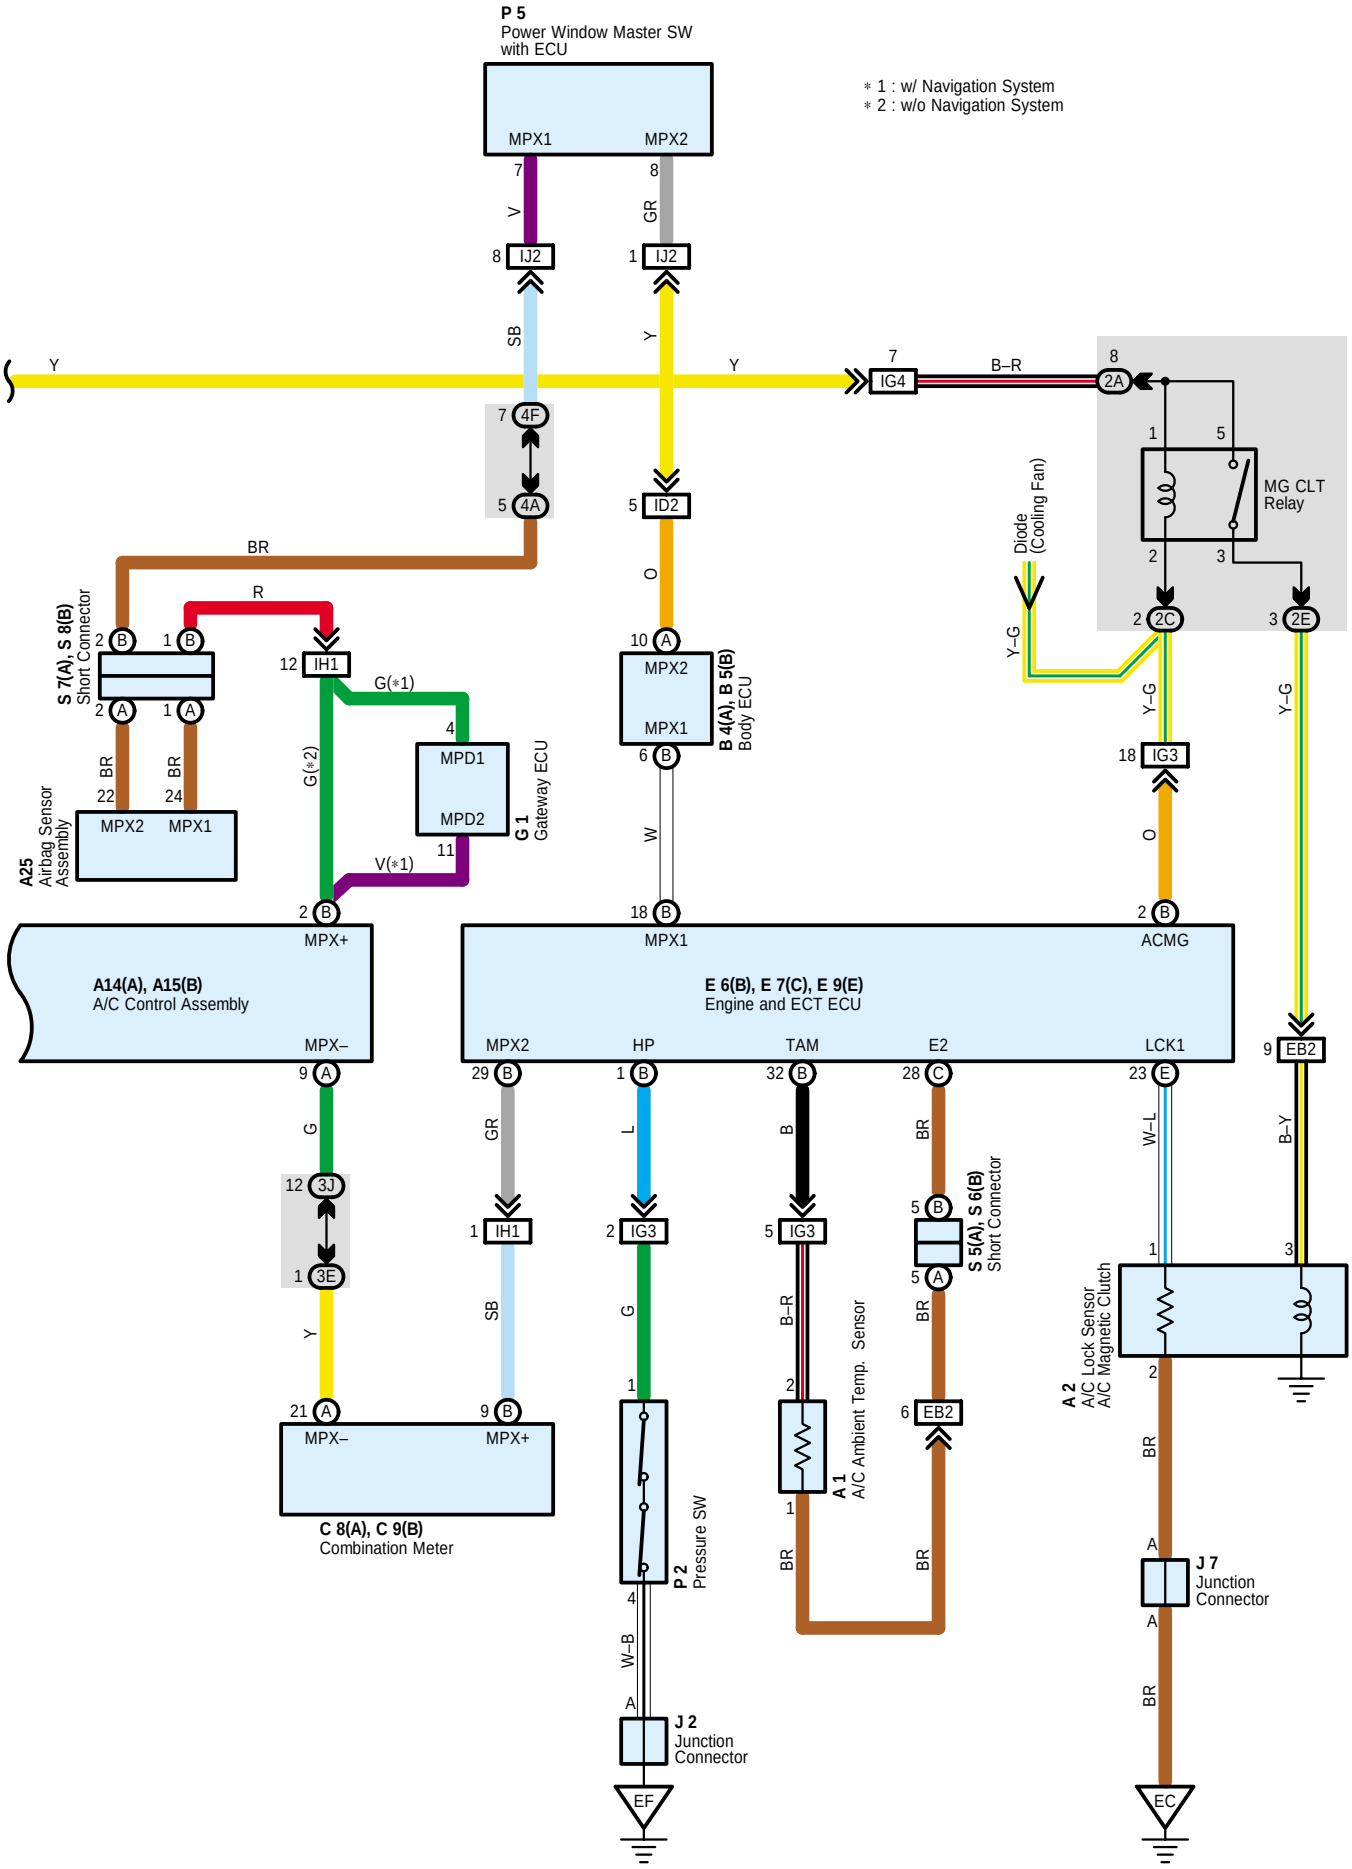

From Power Source System (See Page 56)
50A HTR
F11
Fusible Link Block
10A HEATER
IG1
1G
1K
3A
3J
J5
Junction Connector
H 9
Heater Relay
IH1
IE1
I 9
Control Panel
HR
IG
+B
ILL+
ILL+
ILL–
ILL–
ACC
IG
BLK
STX
A14(A), A15(B)
A/C Control Assembly
BLW
AMH
AMC
SG–1
S5–1
TP
TE
IF1
I11
LG–R
B 3
Blower Motor Controller
+B
SI
VM
GND
B 2
Blower Motor
M
4H
4L
4N
IC
IA
A22
Air Mix Control Servo Motor
A18
A/C Thermistor

From Power Source System (See Page 56)




P 5
Power Window Master SW with ECU
MPX1
MPX2
＊1 : w/ Navigation System
＊2 : w/o Navigation System
IJ2
IG4
2A
MG CLT Relay
Diode (Cooling Fan)
4F
4A
ID2
2C
2E
IG3
S 7(A), S 8(B) Short Connector
IH1
MPD1
MPD2
G 1 Gateway ECU
B 4(A), B 5(B) Body ECU
A25 Airbag Sensor Assembly
A14(A), A15(B) A/C Control Assembly
MPX+
MPX–
E 6(B), E 7(C), E 9(E) Engine and ECT ECU
HP
TAM
E2
LCK1
ACMG
EB2
3J
3E
C 8(A), C 9(B) Combination Meter
P 2 Pressure SW
A 1 A/C Ambient Temp. Sensor
S 5(A), S 6(B) Short Connector
A 2 A/C Lock Sensor A/C Magnetic Clutch
J 2 Junction Connector
J 7 Junction Connector
EF
EC