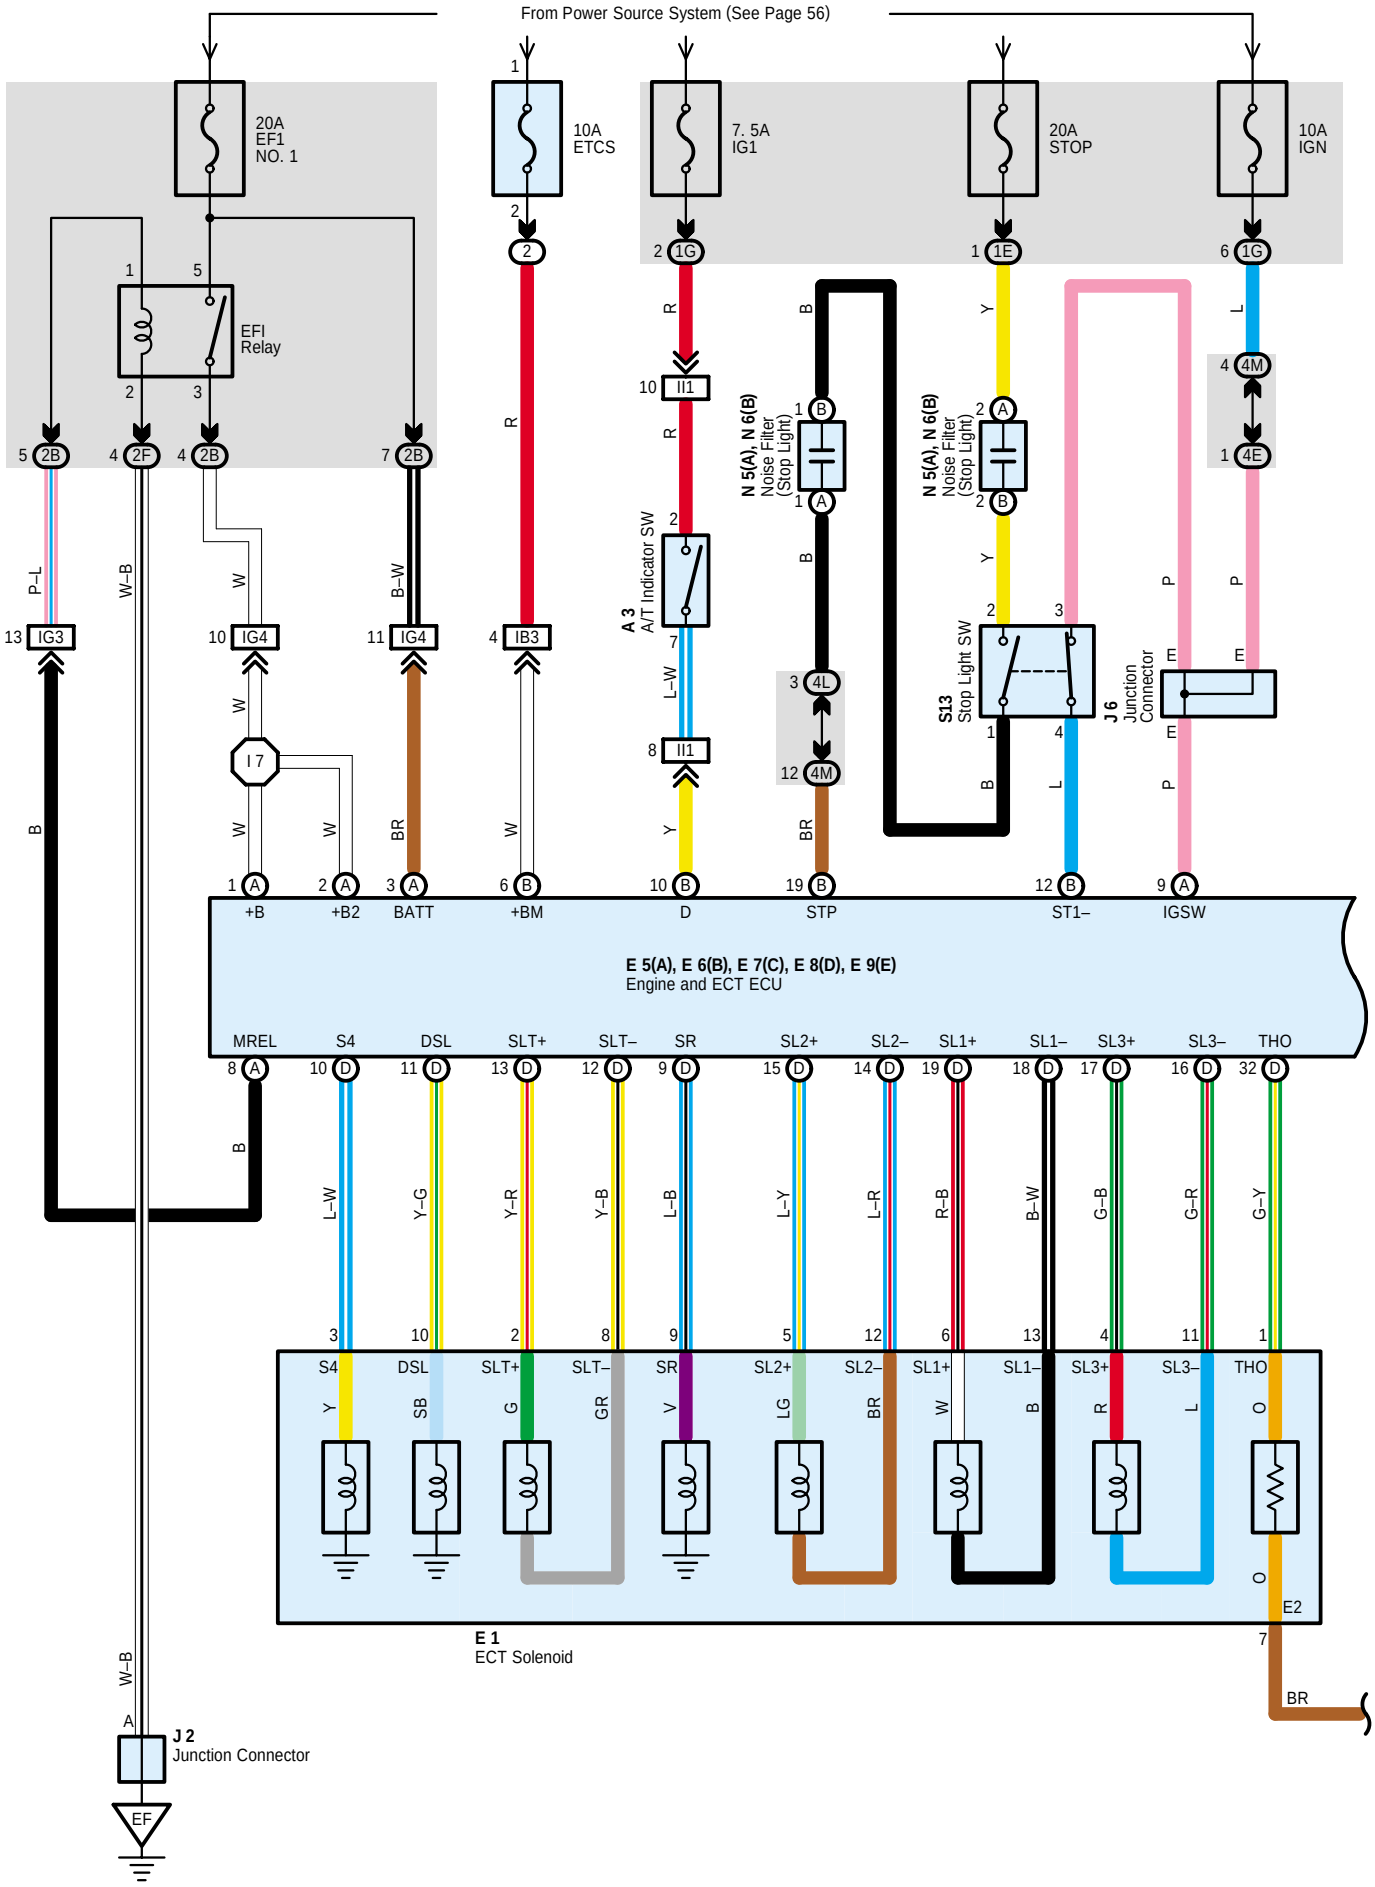
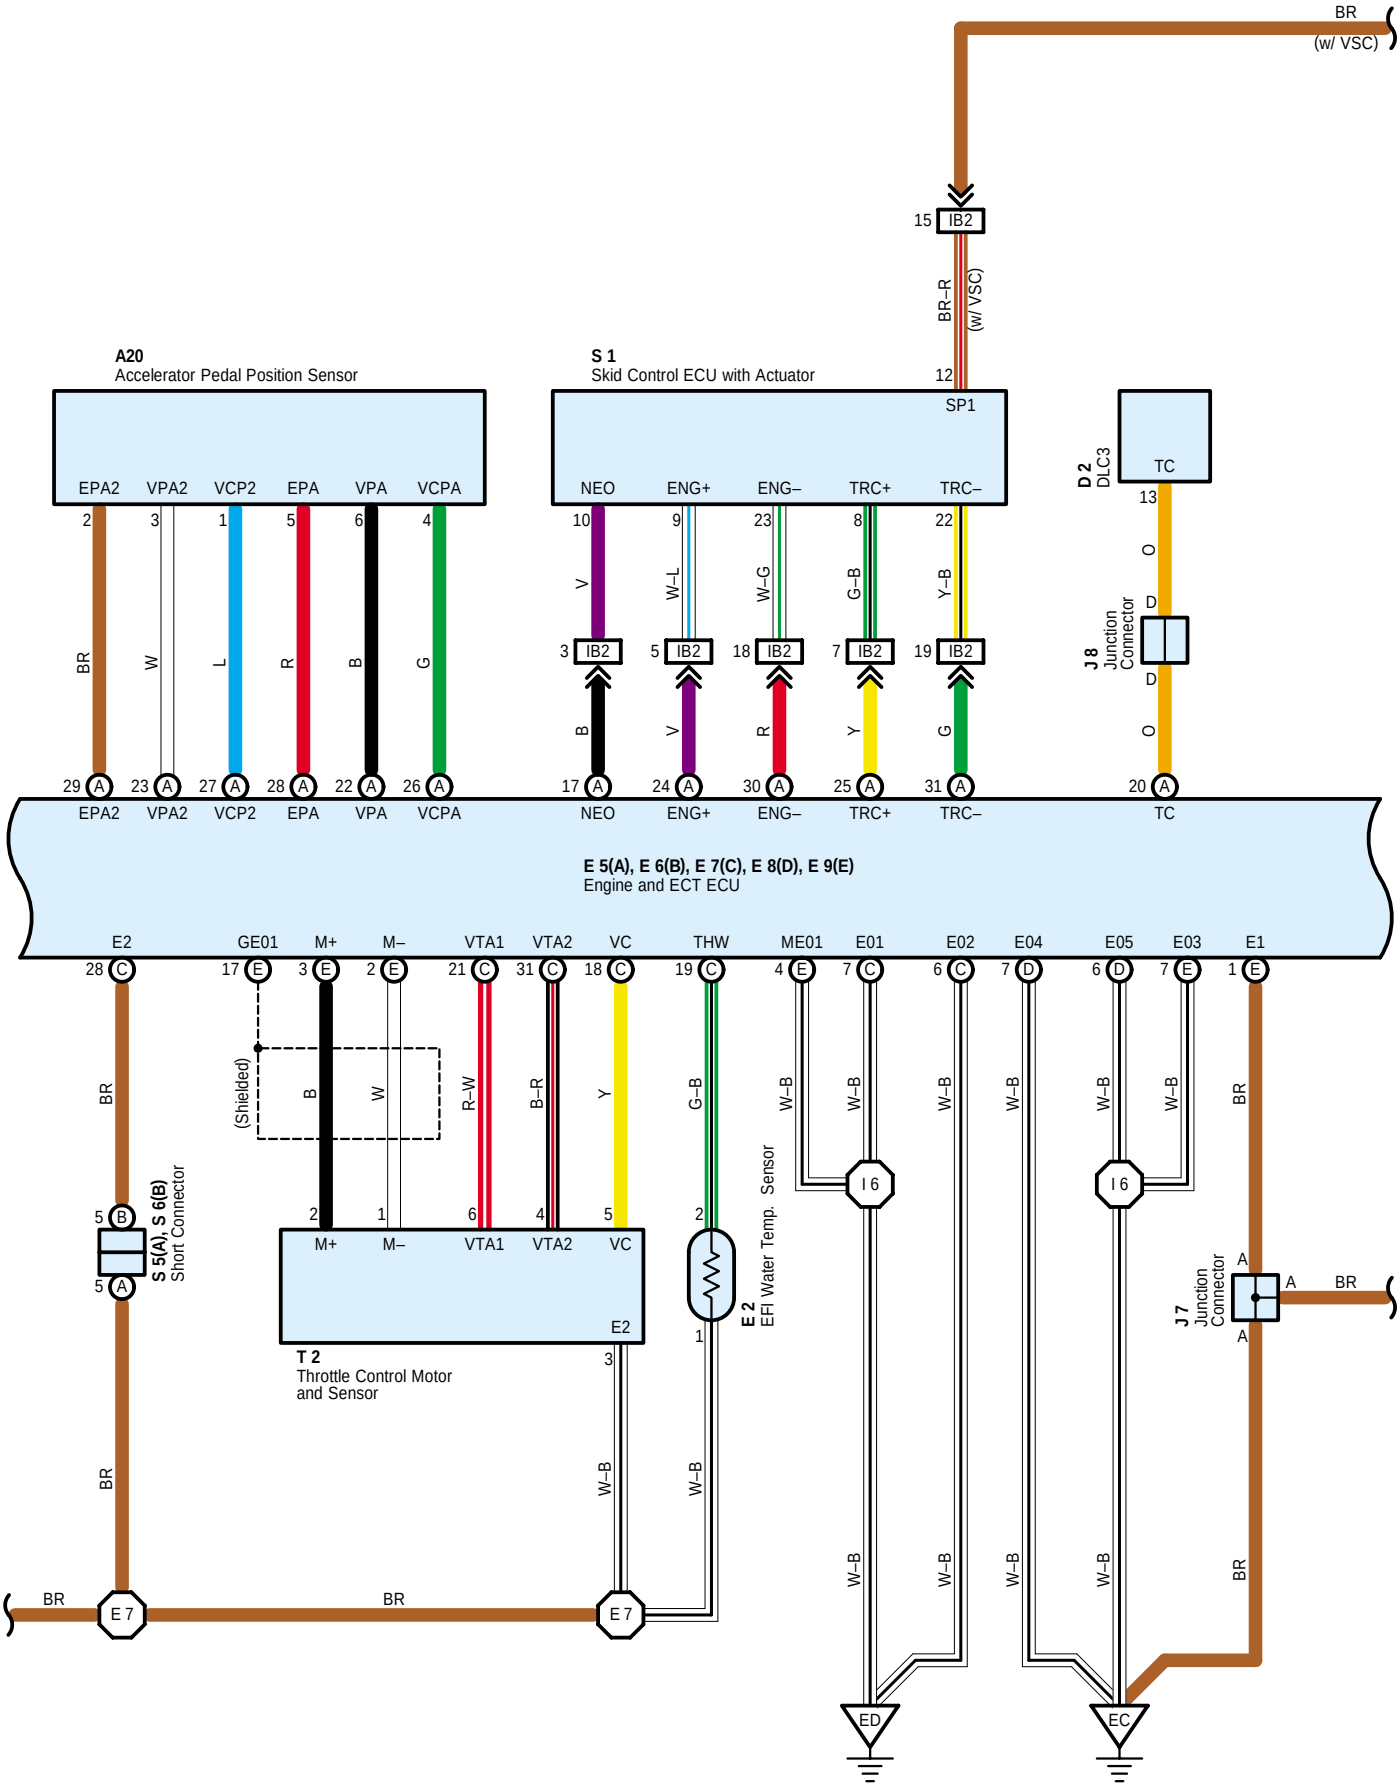
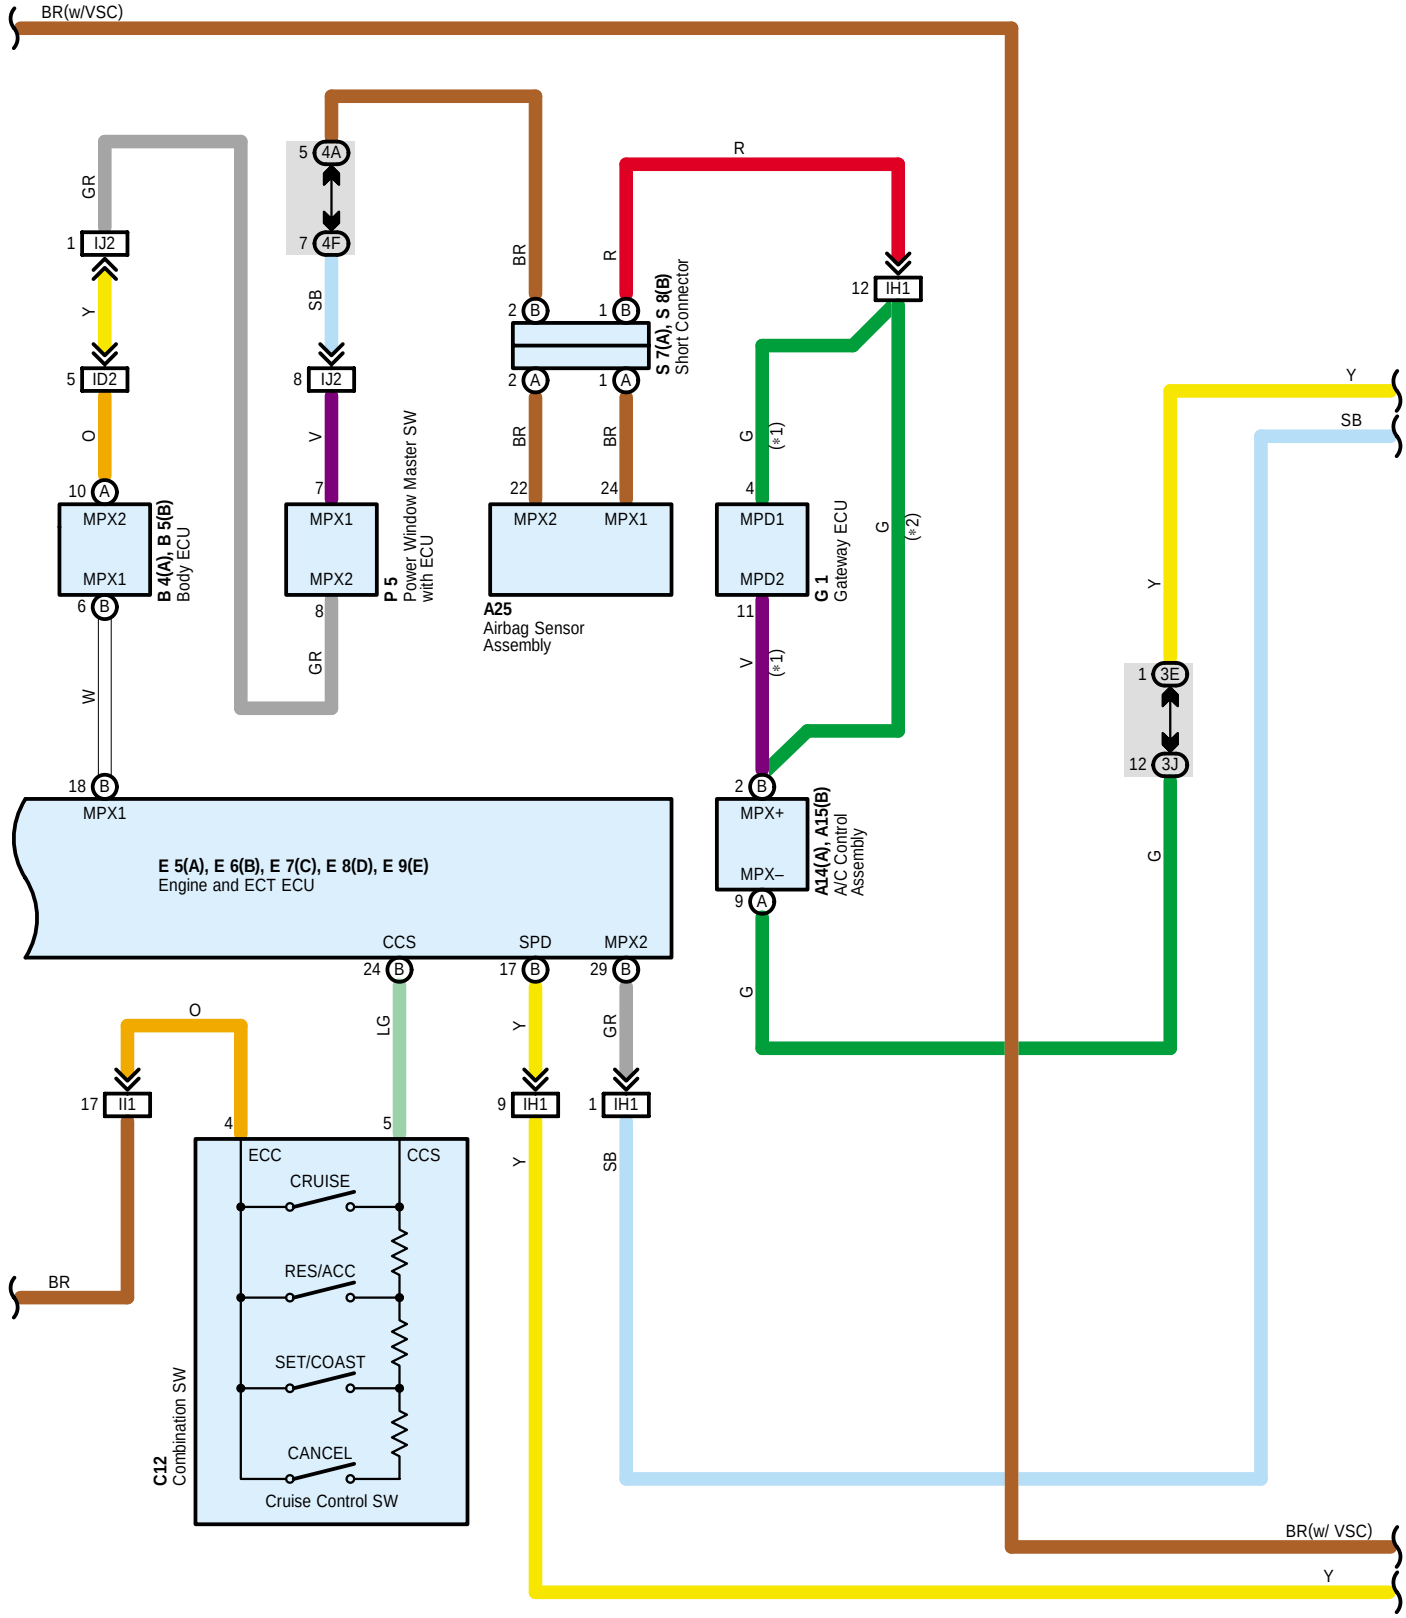

From Power Source System (See Page 56)
20A EF1 NO. 1
10A ETCS
7. 5A IG1
20A STOP
10A IGN
EFI Relay
A 3 A/T Indicator SW
N 5(A), N 6(B) Noise Filter (Stop Light)
S13 Stop Light SW
J 6 Junction Connector
+B
+B2
BATT
+BM
D
STP
ST1–
IGSW
E 5(A), E 6(B), E 7(C), E 8(D), E 9(E)
Engine and ECT ECU
MREL
S4
DSL
SLT+
SLT–
SR
SL2+
SL2–
SL1+
SL1–
SL3+
SL3–
THO
E 1
ECT Solenoid
J 2
Junction Connector
EF


BR
(w/ VSC)
15 IB2
BR–R
(w/ VSC)
A20
Accelerator Pedal Position Sensor
S 1
Skid Control ECU with Actuator
12
SP1
D 2
DLC3
TC
13
O
D
J 8
Junction Connector
D
O
20 A
TC
EPA2 VPA2 VCP2 EPA VPA VCPA
2 3 1 5 6 4
BR W L R B G
29 A 23 A 27 A 28 A 22 A 26 A
EPA2 VPA2 VCP2 EPA VPA VCPA
NEO ENG+ ENG– TRC+ TRC–
10 9 23 8 22
V W–L W–G G–B Y–B
3 IB2 5 IB2 18 IB2 7 IB2 19 IB2
B V R Y G
17 A 24 A 30 A 25 A 31 A
NEO ENG+ ENG– TRC+ TRC–
E 5(A), E 6(B), E 7(C), E 8(D), E 9(E)
Engine and ECT ECU
E2 GE01 M+ M– VTA1 VTA2 VC THW ME01 E01 E02 E04 E05 E03 E1
28 C 17 E 3 E 2 E 21 C 31 C 18 C 19 C 4 E 7 C 6 C 7 D 6 D 7 E 1 E
BR (Shielded) B W R–W B–R Y G–B W–B W–B W–B W–B W–B W–B W–B BR
5 B
5 A
S 5(A), S 6(B)
Short Connector
2 1 6 4 5 2
M+ M– VTA1 VTA2 VC E2
T 2
Throttle Control Motor
and Sensor
3 1
E 2
EFI Water Temp. Sensor
I 6
I 6
J 7
Junction Connector
A A BR
A
BR BR BR W–B W–B W–B W–B W–B W–B BR
E 7 E 7
ED EC


BR(w/VSC)
GR
1 IJ2
Y
5 ID2
O
10 A
MPX2
MPX1
6 B
B 4(A), B 5(B)
Body ECU
W
18 B
MPX1
E 5(A), E 6(B), E 7(C), E 8(D), E 9(E)
Engine and ECT ECU
5 4A
7 4F
SB
8 IJ2
V
7
MPX1
MPX2
8
GR
P 5
Power Window Master SW with ECU
BR
2 B
2 A
BR
22
MPX2
R
1 B
1 A
BR
24
MPX1
S 7(A), S 8(B)
Short Connector
A25
Airbag Sensor Assembly
R
12 IH1
G
(*1)
4
MPD1
MPD2
11
V
(*1)
G
(*2)
G 1
Gateway ECU
2 B
MPX+
MPX–
9 A
A14(A), A15(B)
A/C Control Assembly
G
Y
SB
Y
1 3E
12 3J
G
CCS
SPD
MPX2
24 B
17 B
29 B
LG
Y
GR
O
17 II1
4
5
9 IH1
1 IH1
Y
SB
ECC
CCS
CRUISE
RES/ACC
SET/COAST
CANCEL
Cruise Control SW
C12
Combination SW
BR
BR(w/ VSC)
Y

From Power Source System (See Page 56)

* 1 : w/ Navigation System
* 2 : w/o Navigation System

