




Door Lock Control

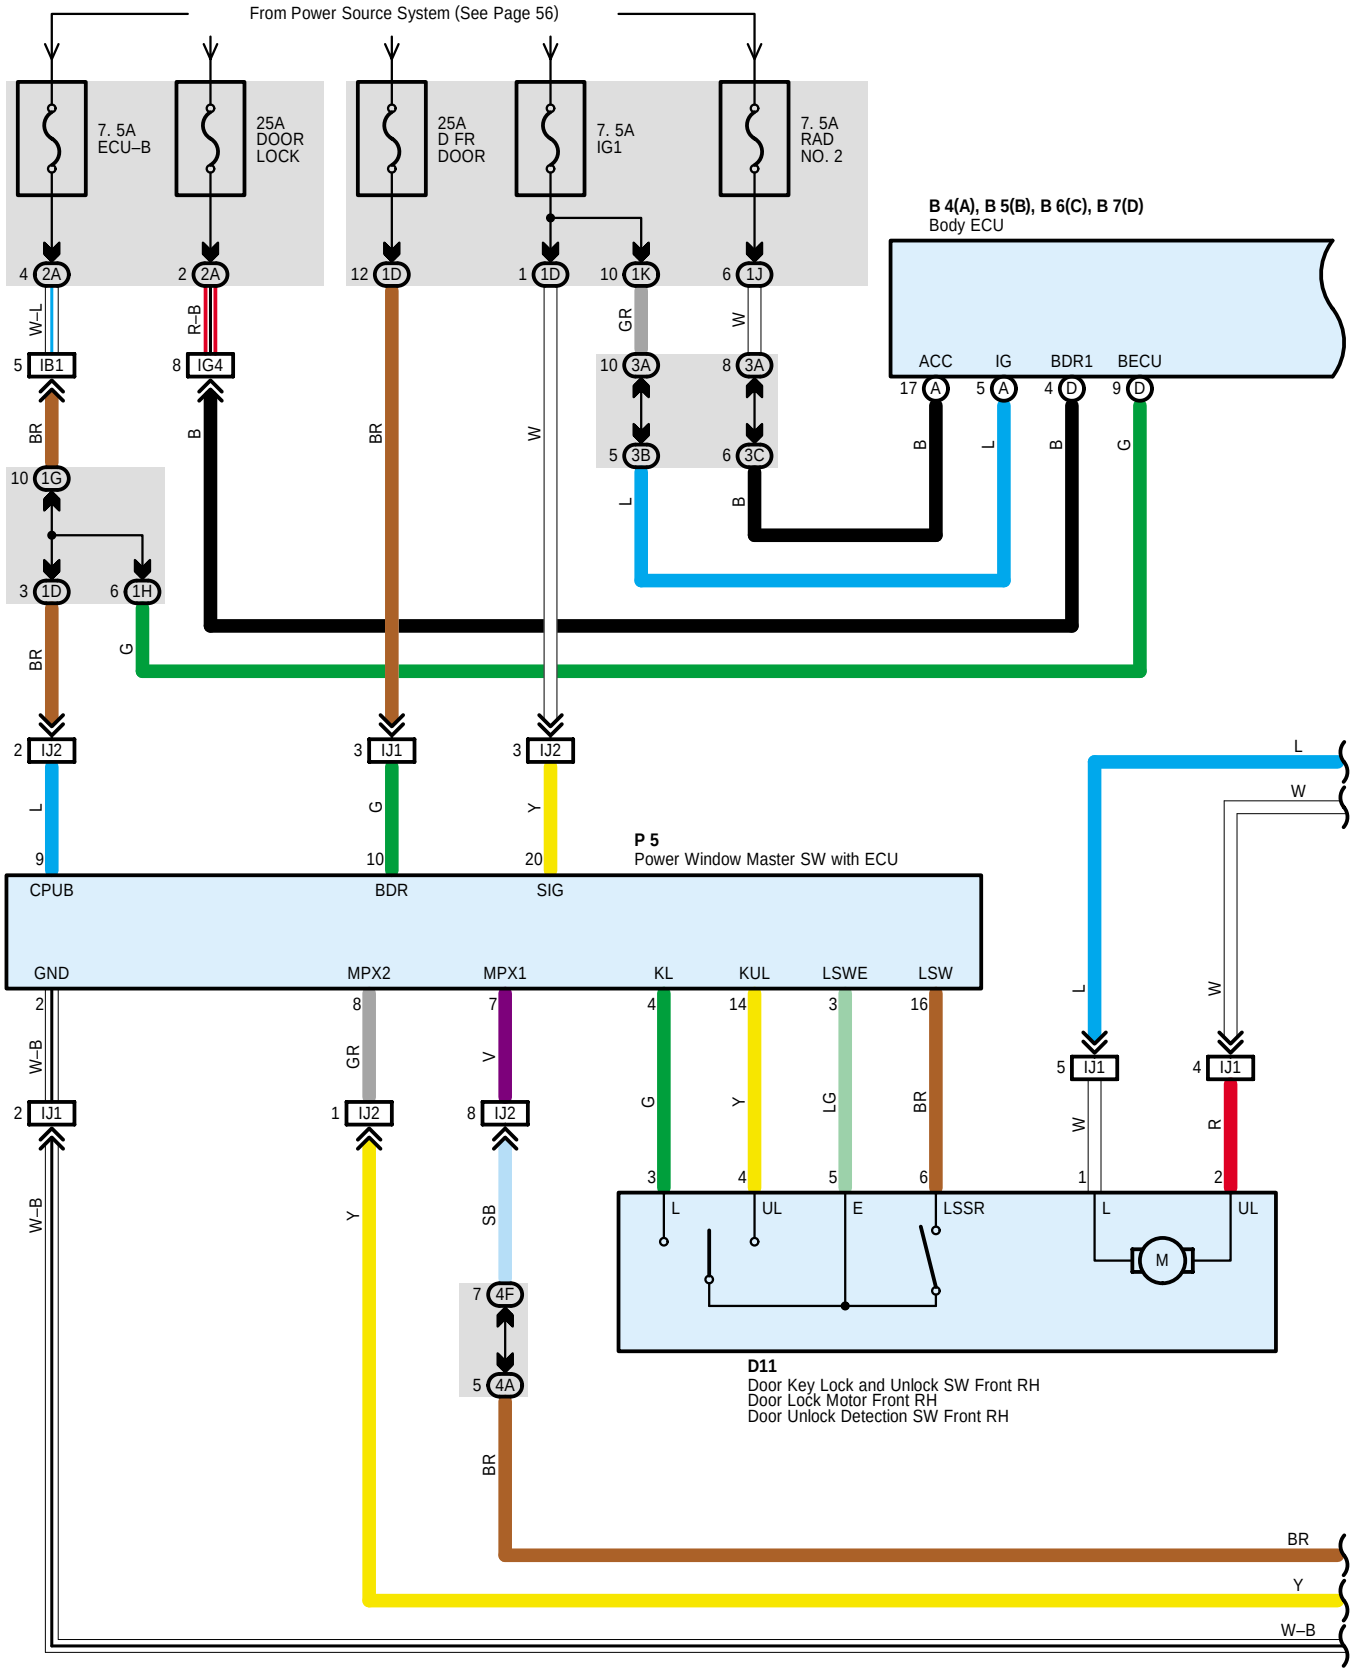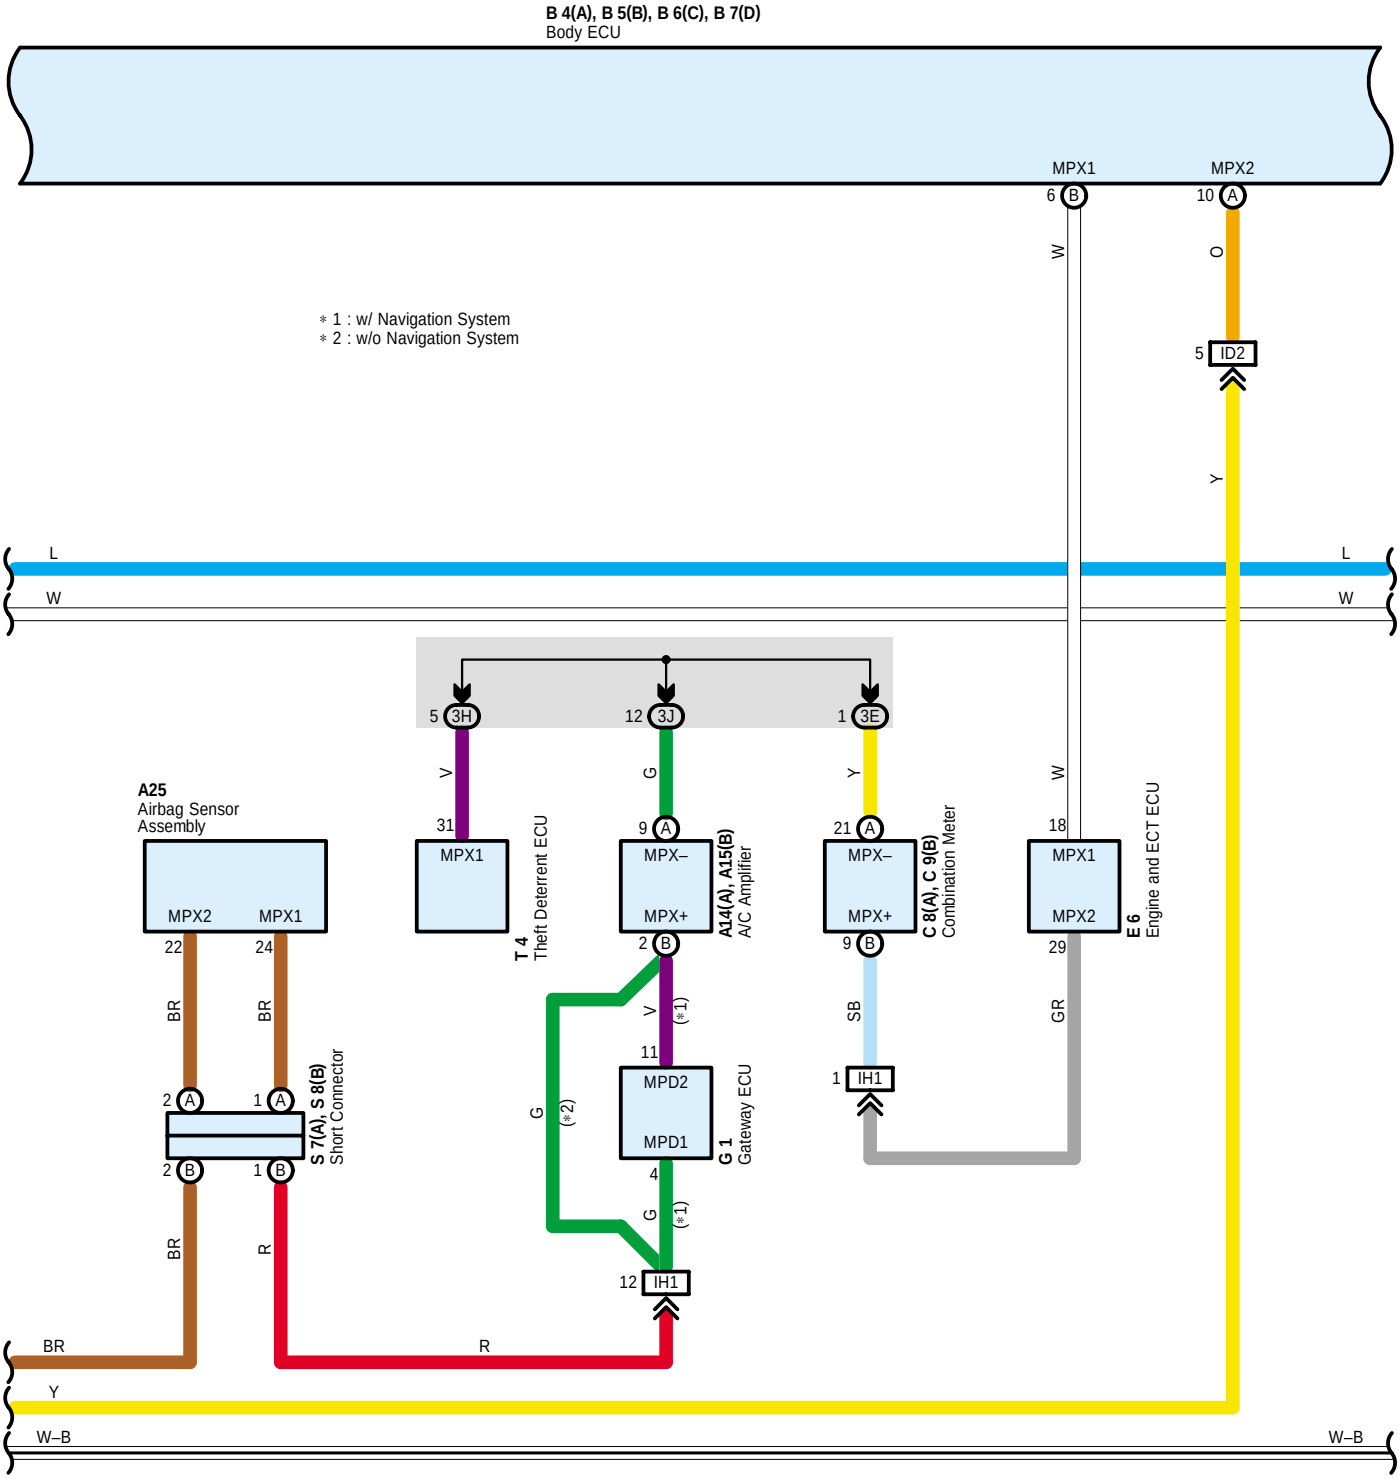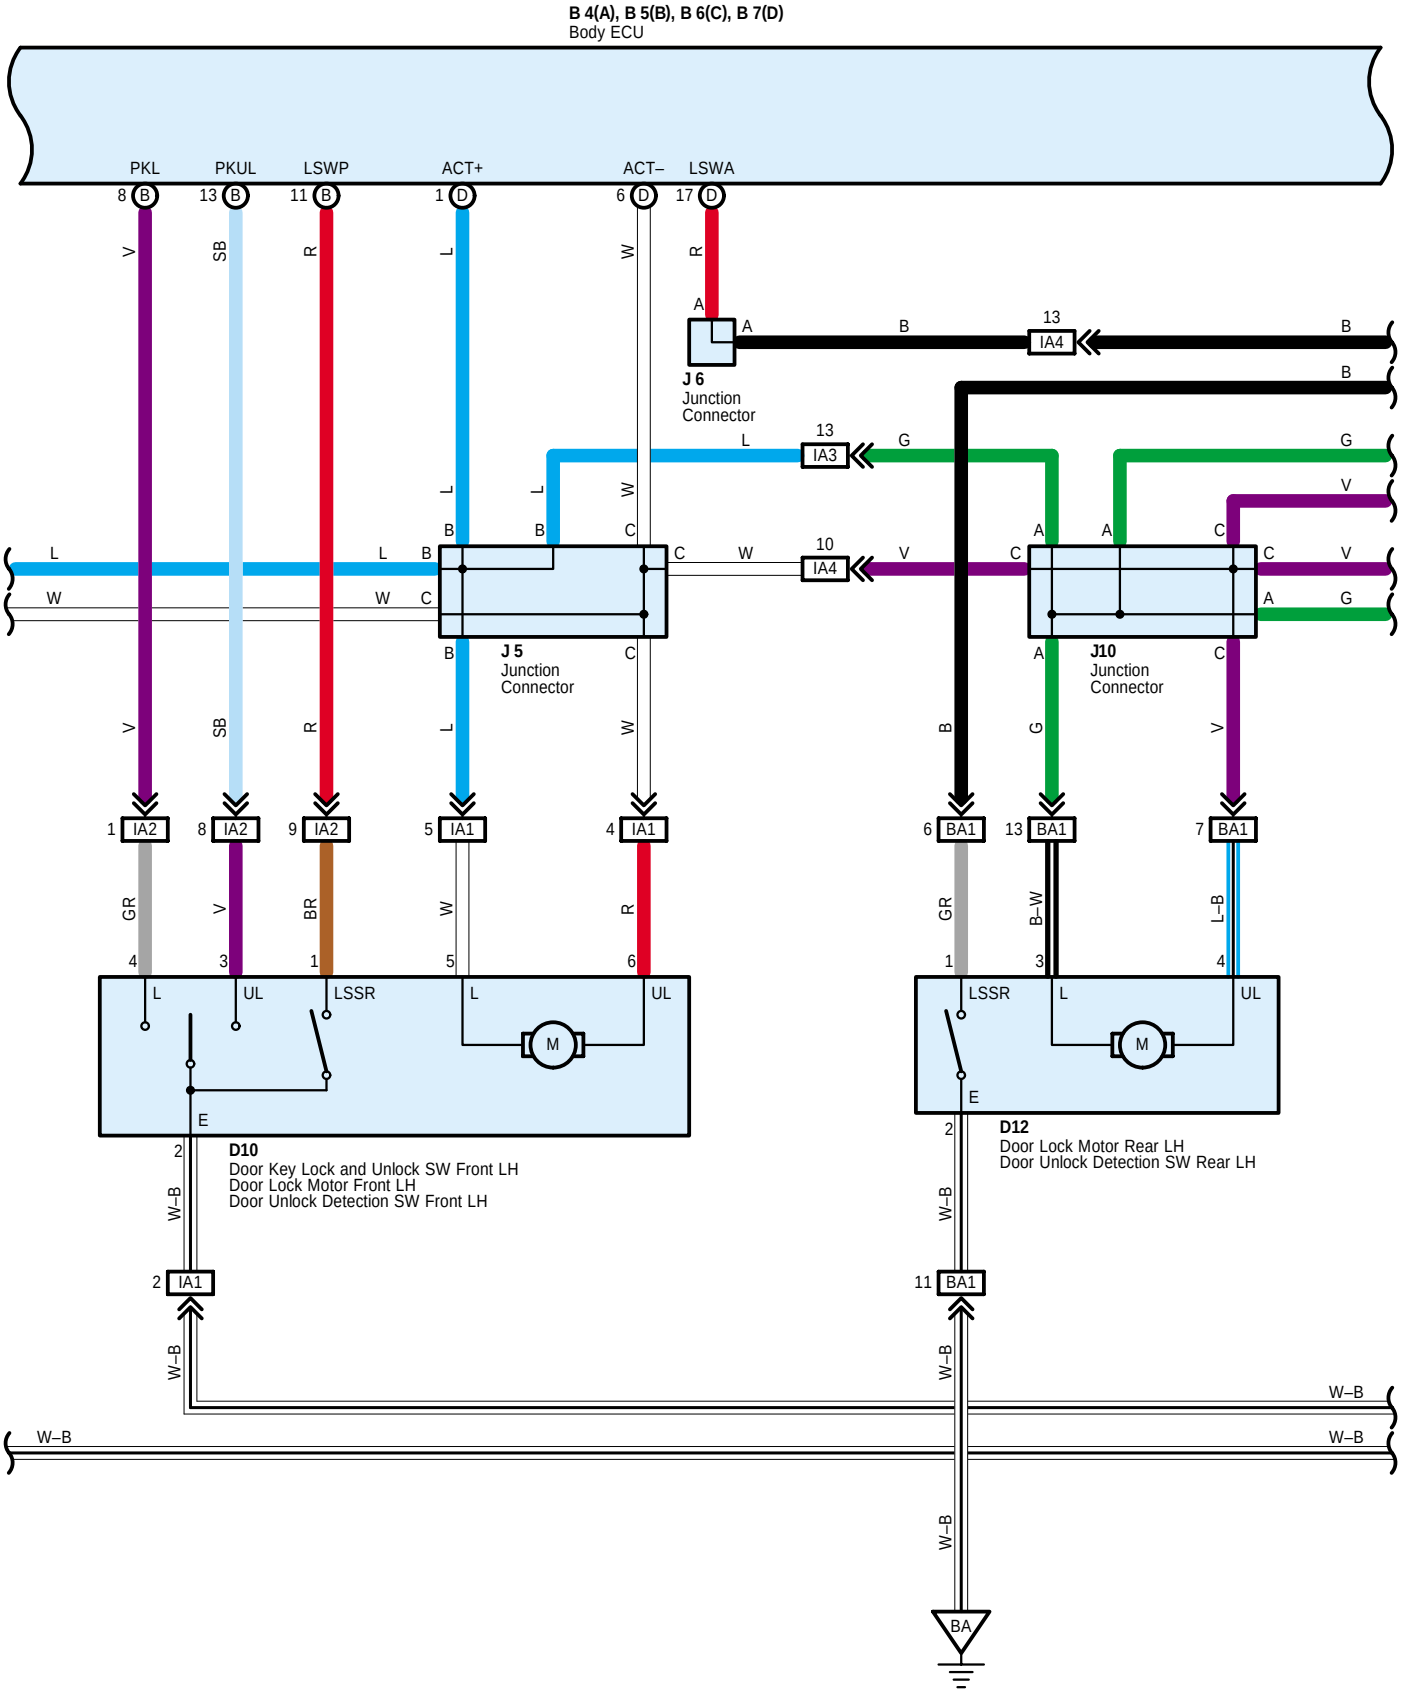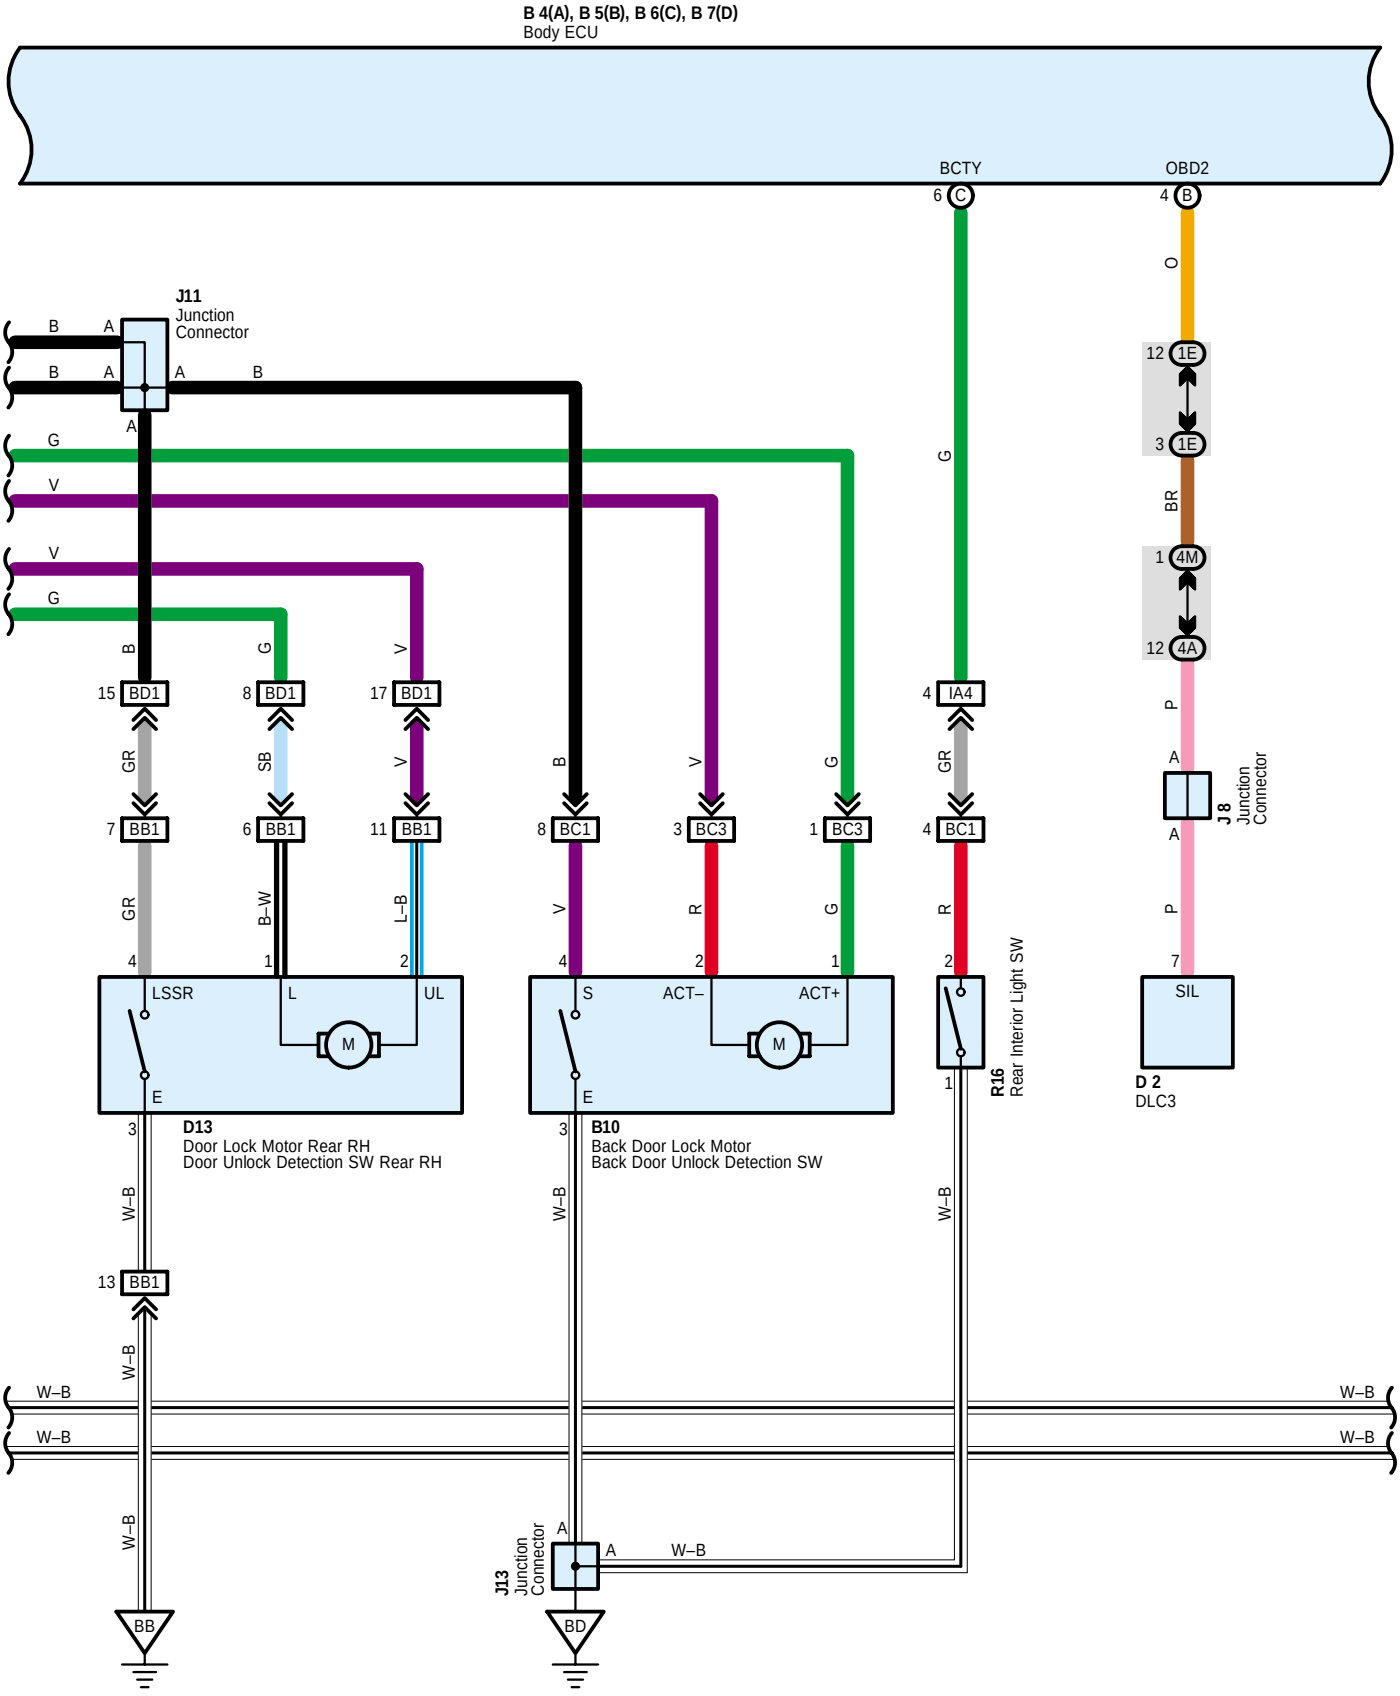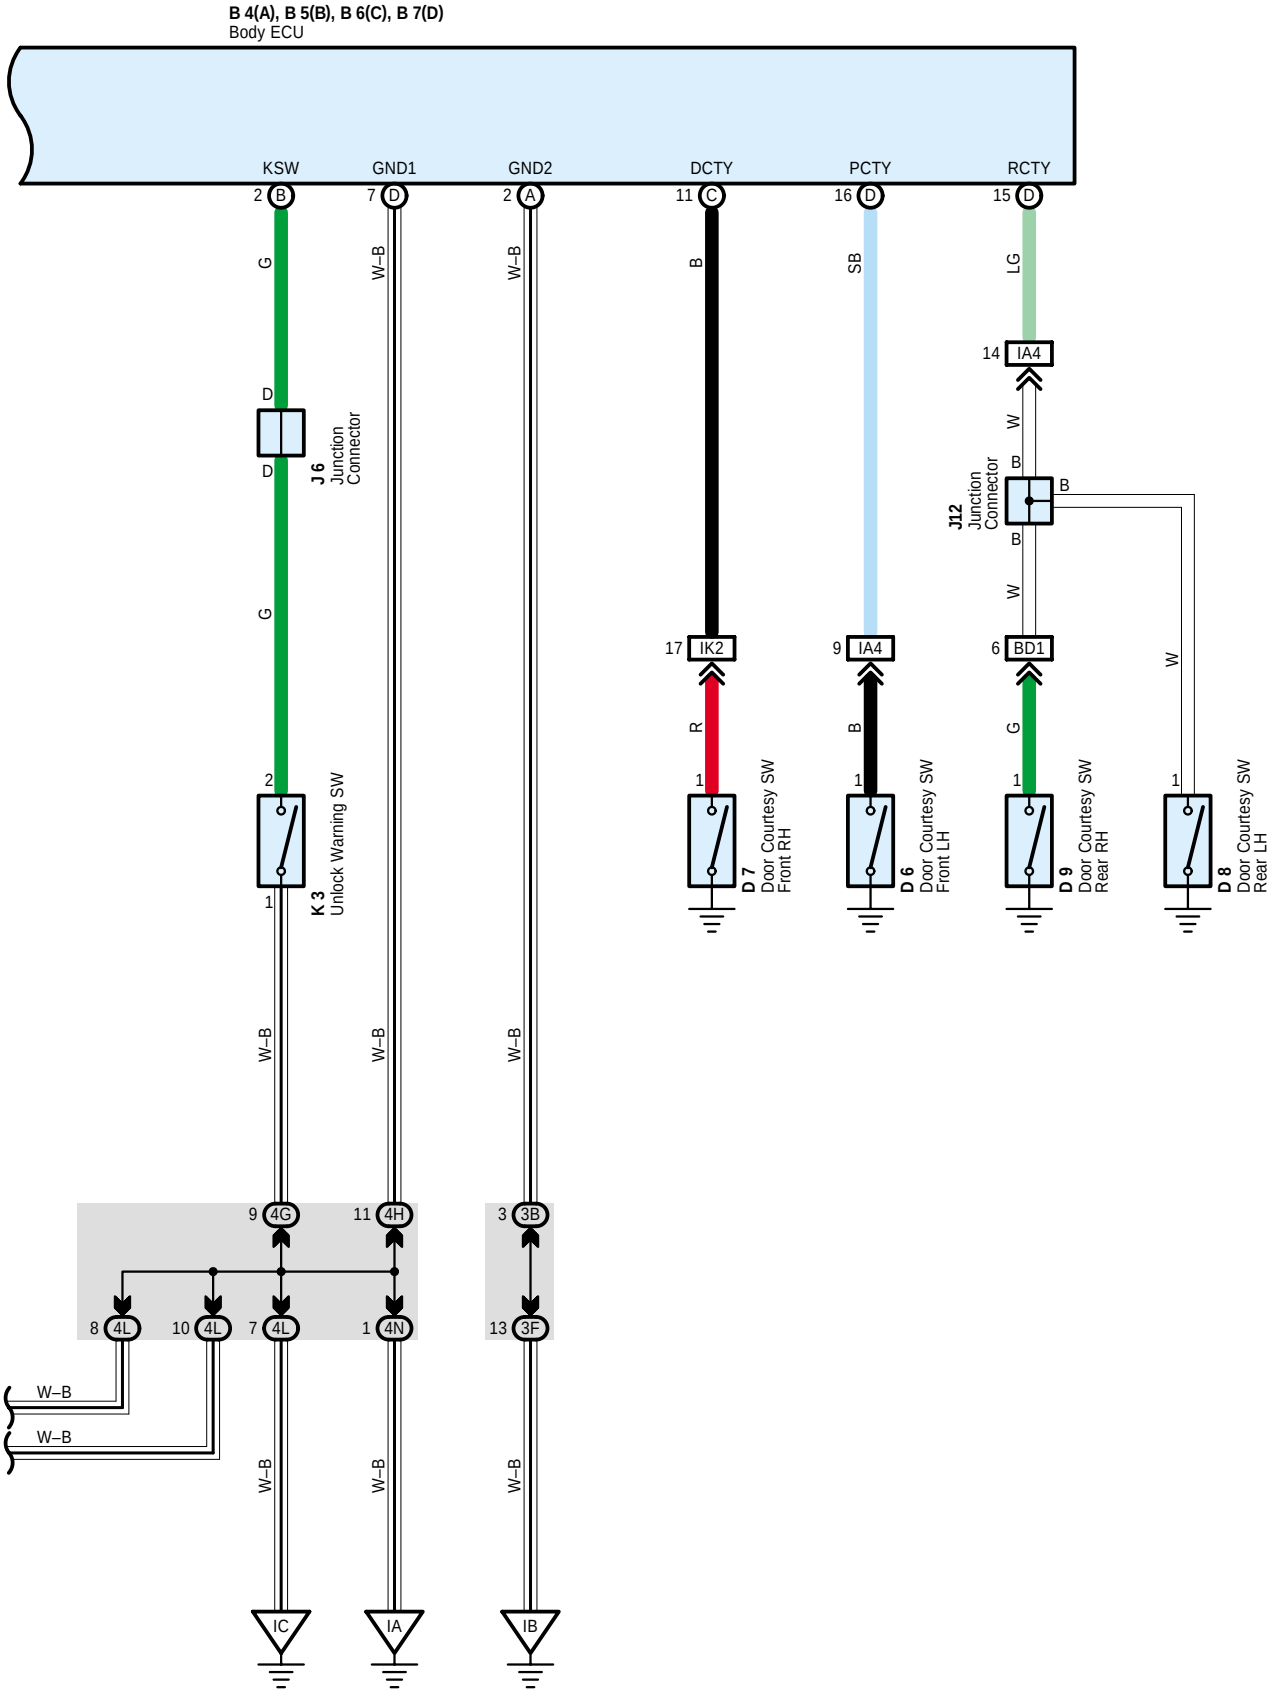


B 4(A), B 5(B), B 6(C), B 7(D)
Body ECU
MPX1
MPX2
6 B
10 A
W
O
5 ID2
Y
＊1 : w/ Navigation System
＊2 : w/o Navigation System
L
W
L
W
5 3H
12 3J
1 3E
V
G
Y
W
A25
Airbag Sensor
Assembly
MPX2
MPX1
22
24
BR
BR
2 A
1 A
S 7(A), S 8(B)
Short Connector
2 B
1 B
BR
R
31
MPX1
T 4
Theft Deterrent ECU
9 A
MPX–
MPX+
2 B
A14(A), A15(B)
A/C Amplifier
V
(＊1)
11
MPD2
MPD1
4
G
(＊1)
12 IH1
G
(＊2)
G 1
Gateway ECU
21 A
MPX–
MPX+
9 B
C 8(A), C 9(B)
Combination Meter
SB
1 IH1
18
MPX1
MPX2
29
GR
E 6
Engine and ECT ECU
BR
R
Y
W–B
W–B


B 4(A), B 5(B), B 6(C), B 7(D)
Body ECU
PKL
PKUL
LSWP
ACT+
ACT–
LSWA
J 6
Junction Connector
J 5
Junction Connector
J10
Junction Connector
D10
Door Key Lock and Unlock SW Front LH
Door Lock Motor Front LH
Door Unlock Detection SW Front LH
D12
Door Lock Motor Rear LH
Door Unlock Detection SW Rear LH
BA


B 4(A), B 5(B), B 6(C), B 7(D)
Body ECU
BCTY
OBD2
J11
Junction
Connector
D13
Door Lock Motor Rear RH
Door Unlock Detection SW Rear RH
B10
Back Door Lock Motor
Back Door Unlock Detection SW
R16
Rear Interior Light SW
D 2
DLC3
J 8
Junction
Connector
J13
Junction
Connector
LSSR
L
UL
S
ACT–
ACT+
SIL
M
BB
BD


B 4(A), B 5(B), B 6(C), B 7(D)
Body ECU
KSW
GND1
GND2
DCTY
PCTY
RCTY
2 B
7 D
2 A
11 C
16 D
15 D
G
W–B
W–B
B
SB
LG
14 IA4
D
D
J 6
Junction
Connector
W
B
B
J12
Junction
Connector
B
W
G
17 IK2
9 IA4
6 BD1
R
B
G
W
2
1
K 3
Unlock Warning SW
1
1
1
1
D 7
Door Courtesy SW
Front RH
D 6
Door Courtesy SW
Front LH
D 9
Door Courtesy SW
Rear RH
D 8
Door Courtesy SW
Rear LH
W–B
W–B
W–B
W–B
W–B
W–B
9 4G
11 4H
3 3B
8 4L
10 4L
7 4L
1 4N
13 3F
W–B
W–B
W–B
W–B
W–B
IC
IA
IB