




ECT and A/T Indicator

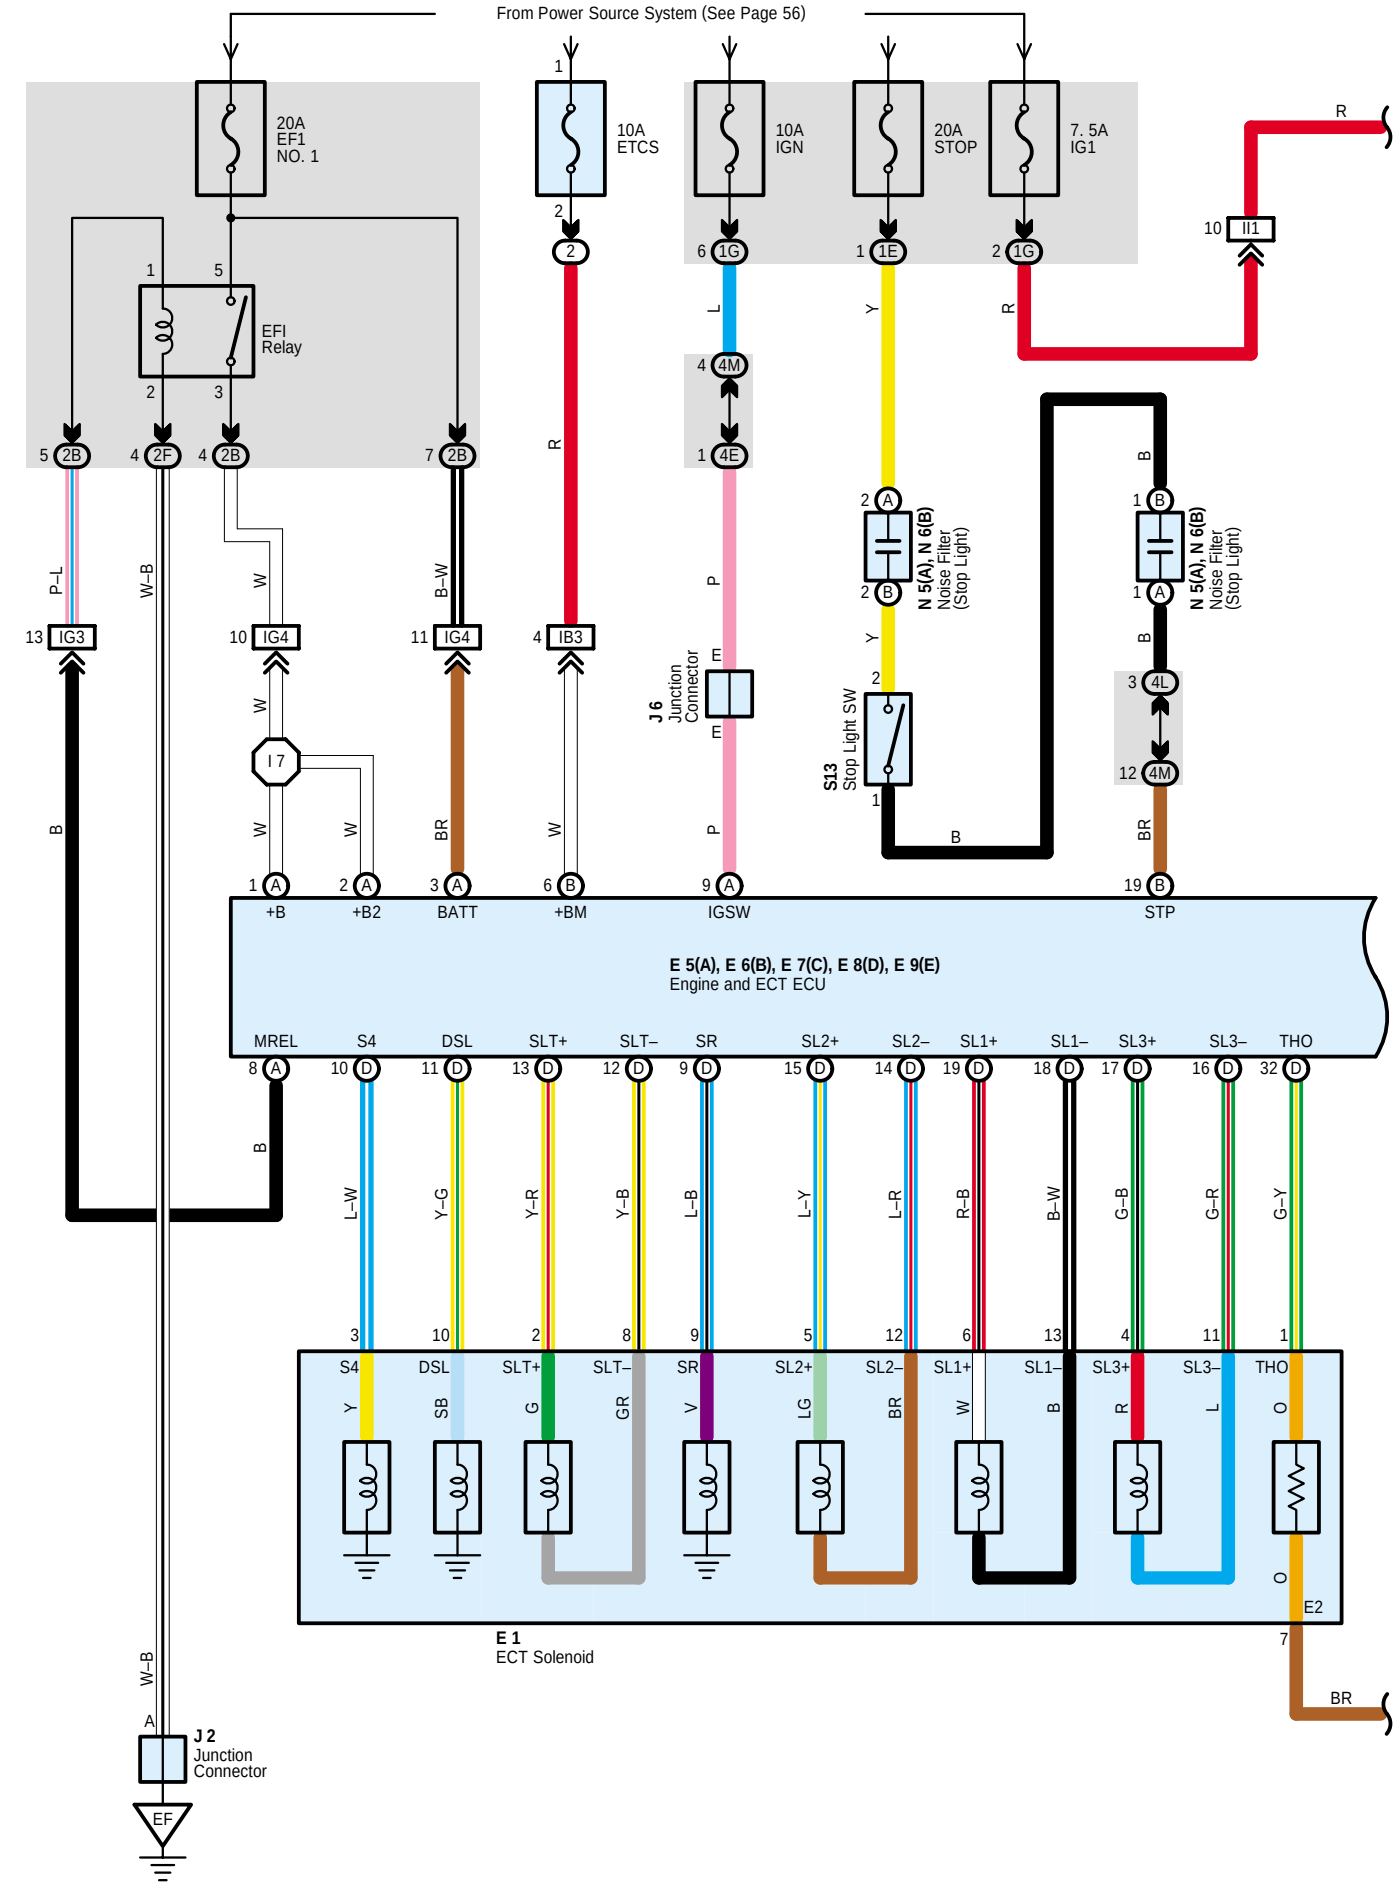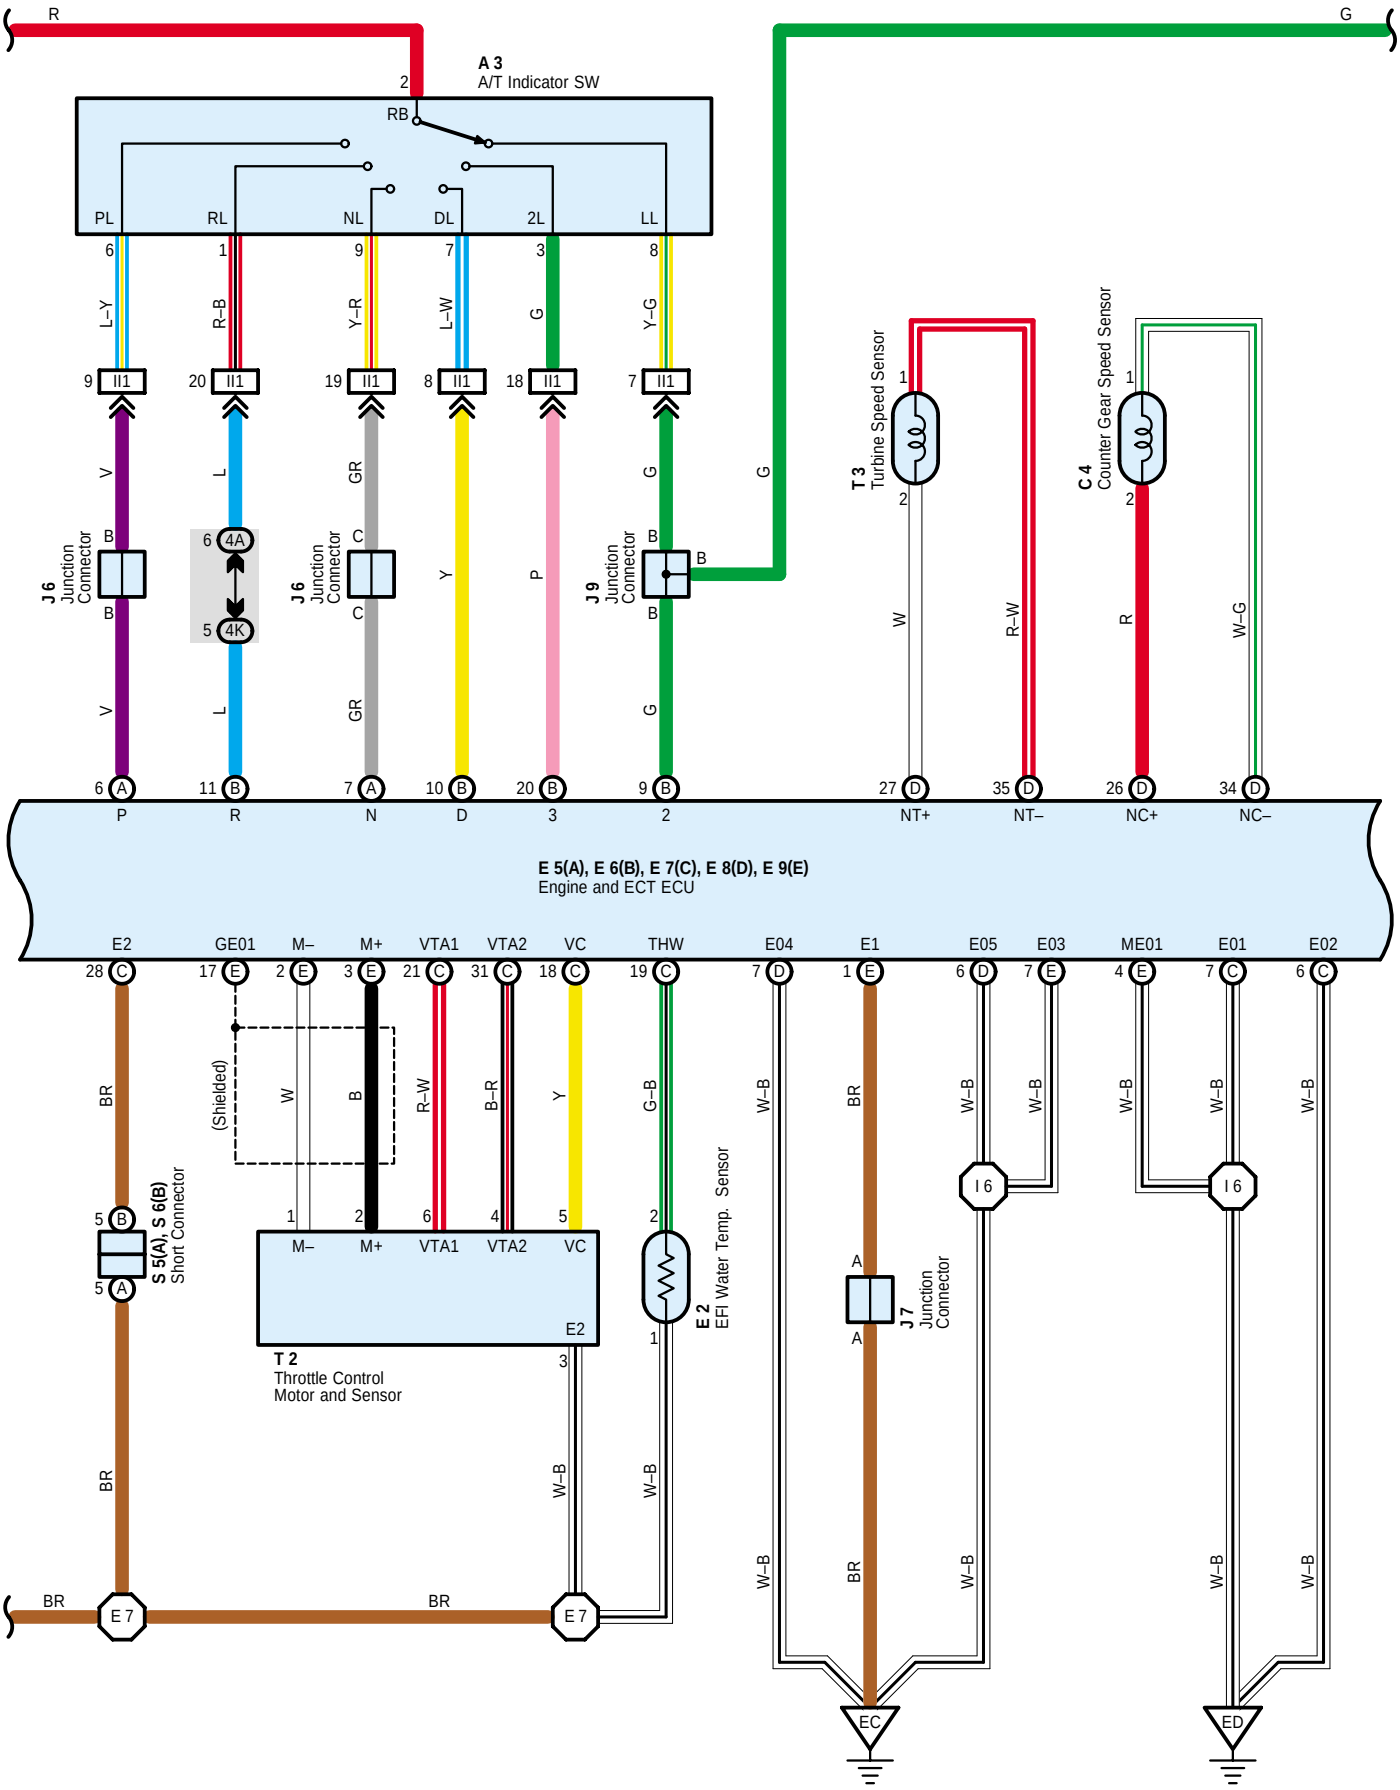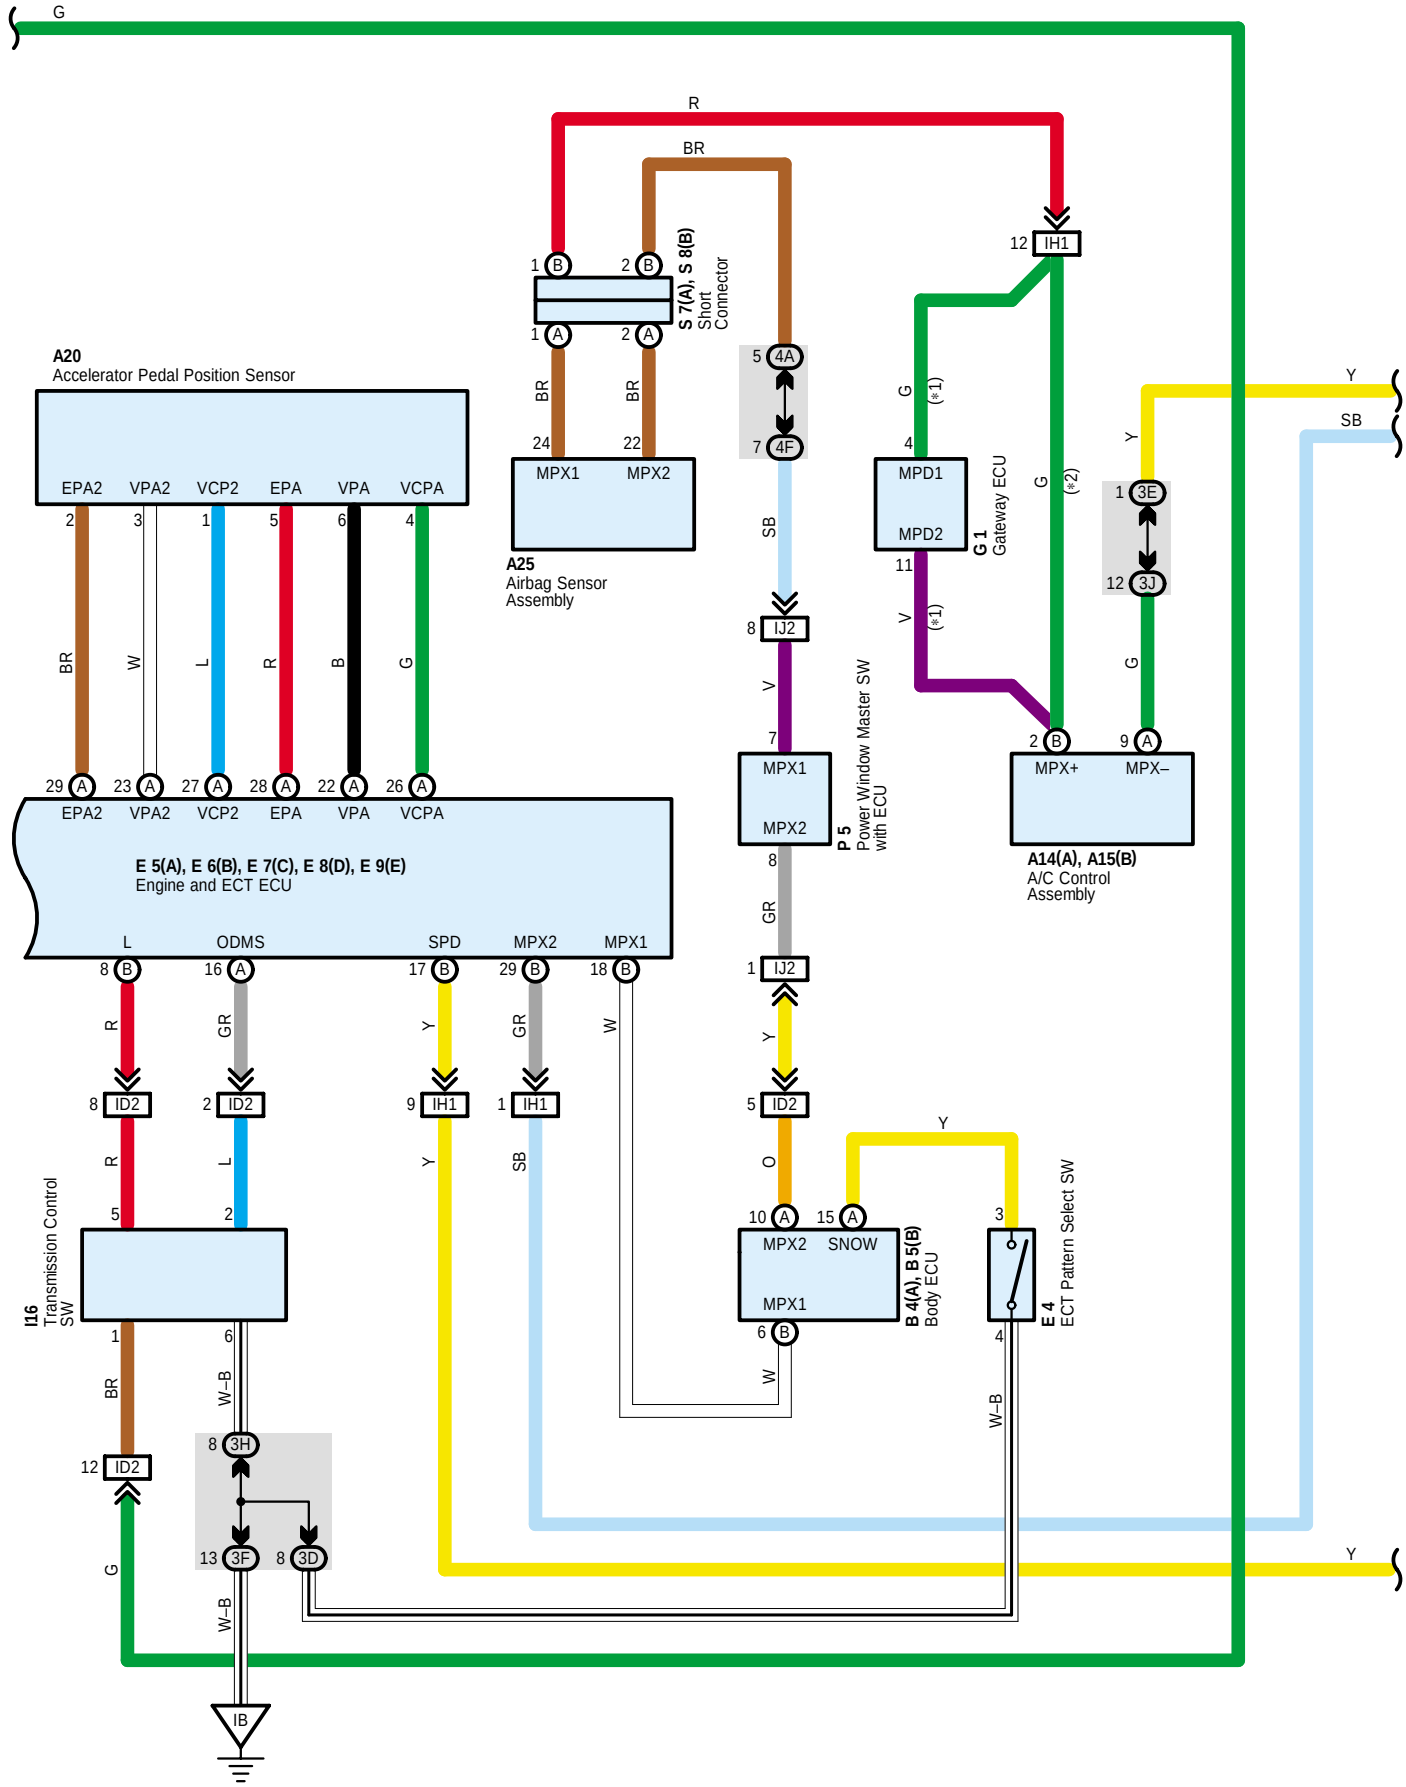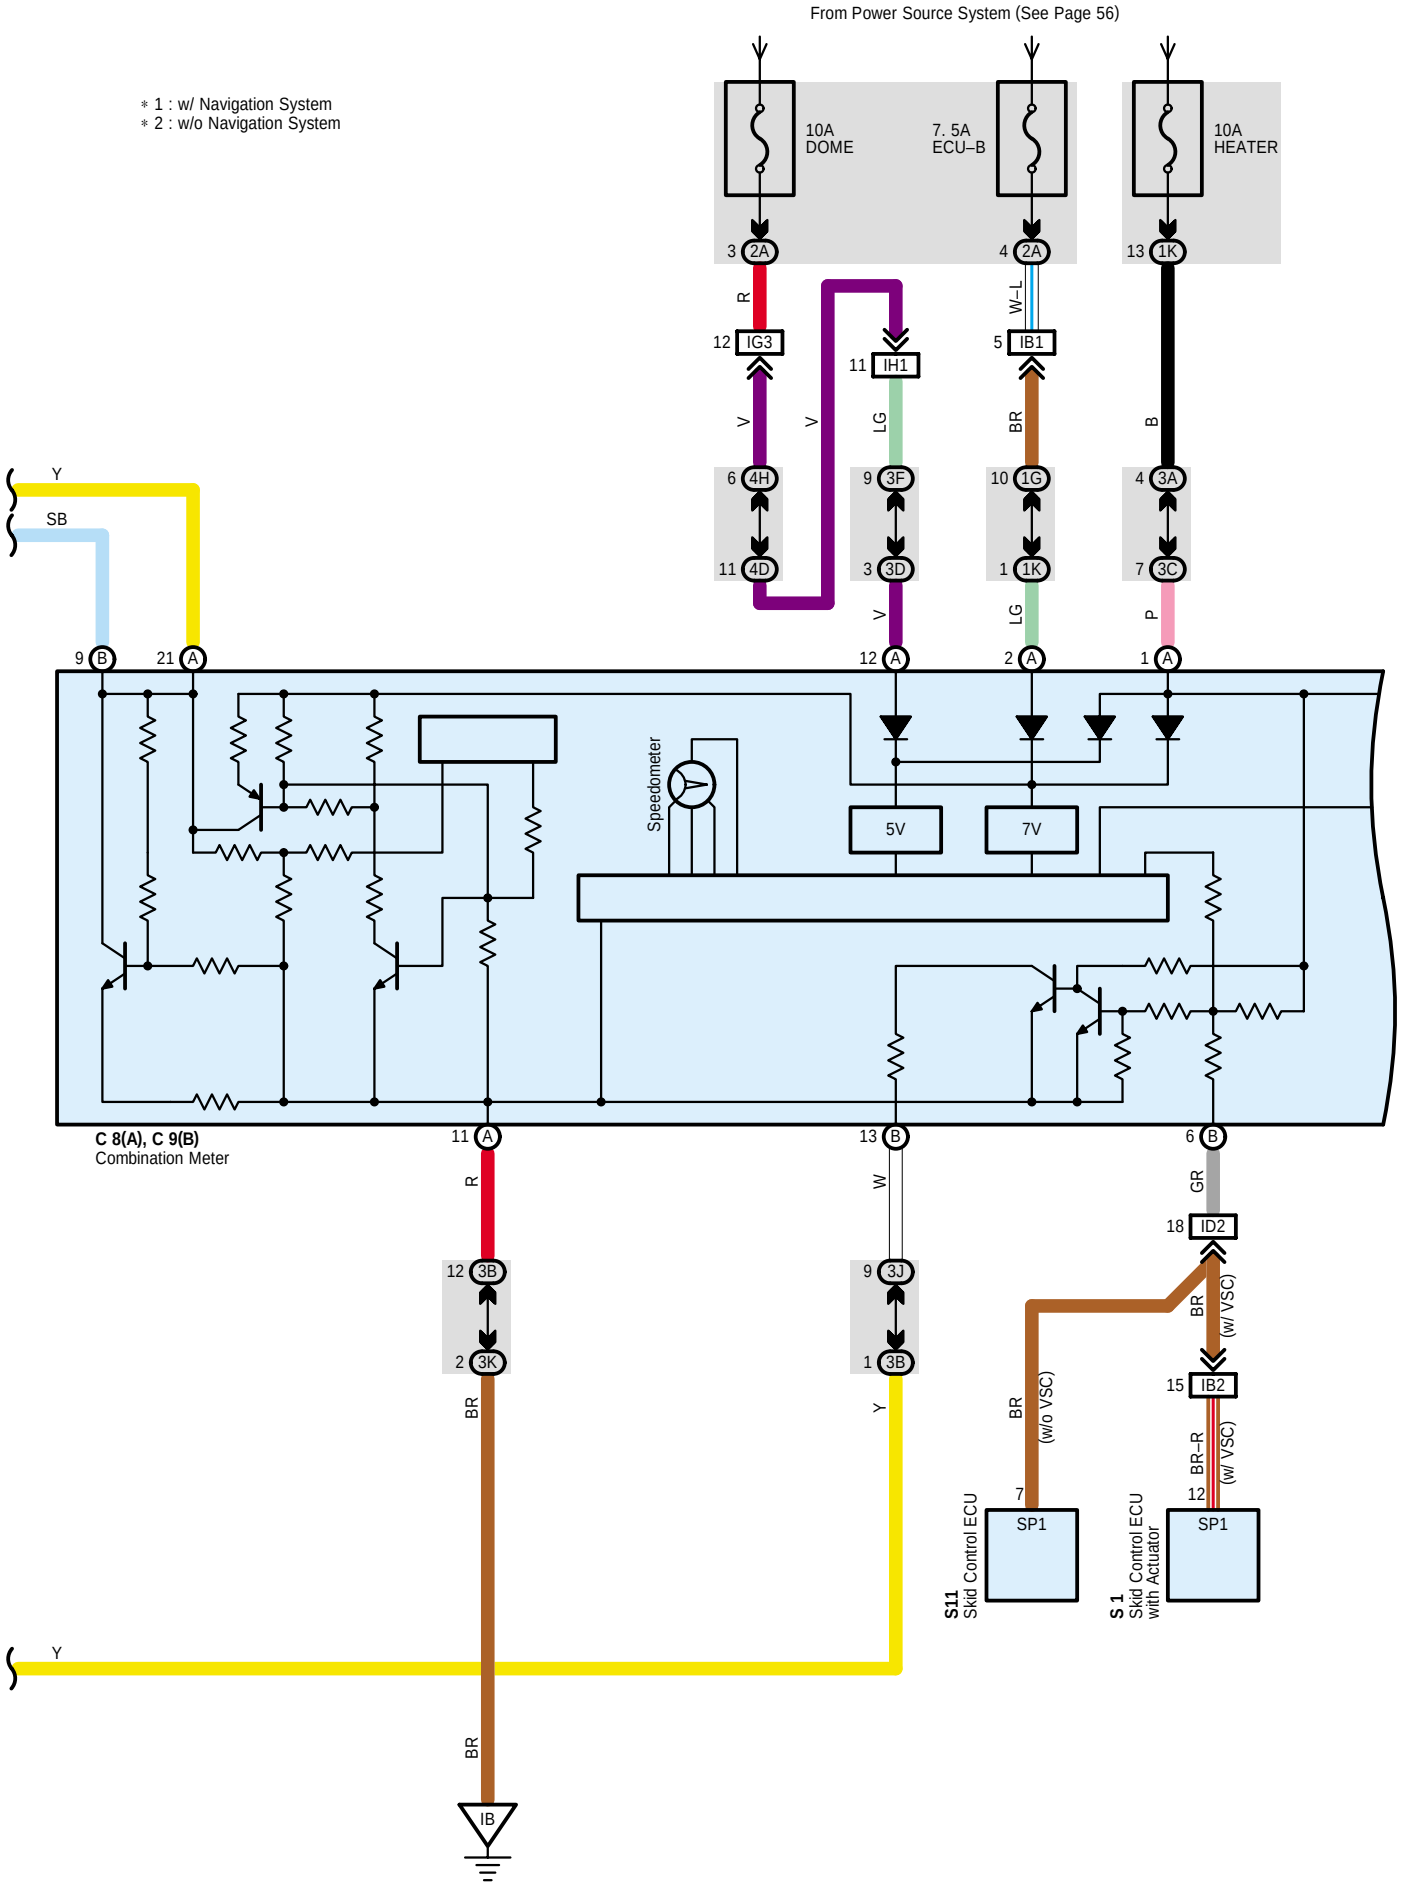


A 3
A/T Indicator SW
PL
RL
NL
DL
2L
LL
J 6
Junction Connector
J 9
Junction Connector
T 3
Turbine Speed Sensor
C 4
Counter Gear Speed Sensor
P
R
N
D
3
2
NT+
NT–
NC+
NC–
E 5(A), E 6(B), E 7(C), E 8(D), E 9(E)
Engine and ECT ECU
S 5(A), S 6(B)
Short Connector
T 2
Throttle Control Motor and Sensor
E 2
EFI Water Temp. Sensor
J 7
Junction Connector
(Shielded)
E 7
EC
ED


G
R
BR
S 7(A), S 8(B)
Short Connector
A20
Accelerator Pedal Position Sensor
EPA2 VPA2 VCP2 EPA VPA VCPA
A25
Airbag Sensor Assembly
MPX1 MPX2
IH1
IJ2
MPD1 MPD2
G 1
Gateway ECU
(*1)
(*2)
Y
SB
3E
3J
P 5
Power Window Master SW with ECU
MPX+ MPX–
A14(A), A15(B)
A/C Control Assembly
E 5(A), E 6(B), E 7(C), E 8(D), E 9(E)
Engine and ECT ECU
L ODMS SPD MPX2 MPX1
ID2
I16
Transmission Control SW
3H 3F 3D
IB
B 4(A), B 5(B)
Body ECU
SNOW
E 4
ECT Pattern Select SW


From Power Source System (See Page 56)
* 1 : w/ Navigation System
* 2 : w/o Navigation System
10A DOME
7. 5A ECU–B
10A HEATER
3 2A
4 2A
13 1K
R
W–L
12 IG3
5 IB1
11 IH1
V
V
LG
BR
B
6 4H
11 4D
9 3F
3 3D
10 1G
1 1K
4 3A
7 3C
Y
SB
V
LG
P
9 B
21 A
12 A
2 A
1 A
Speedometer
5V
7V
C 8(A), C 9(B)
Combination Meter
11 A
13 B
6 B
R
W
GR
18 ID2
12 3B
2 3K
9 3J
1 3B
BR
Y
BR
(w/ VSC)
BR
(w/o VSC)
15 IB2
BR–R
(w/ VSC)
7
SP1
S11
Skid Control ECU
12
SP1
S 1
Skid Control ECU with Actuator
Y
BR
IB

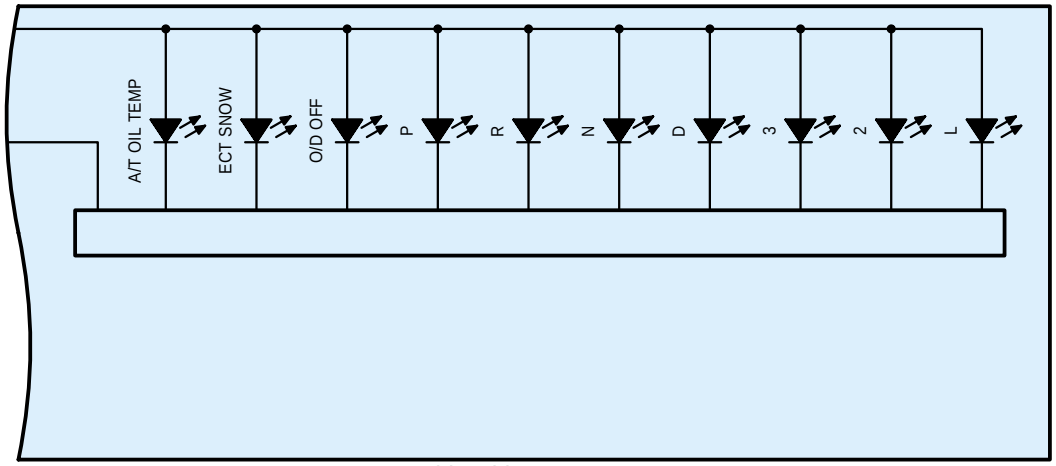

C 8(A), C 9(B)
Combination Meter