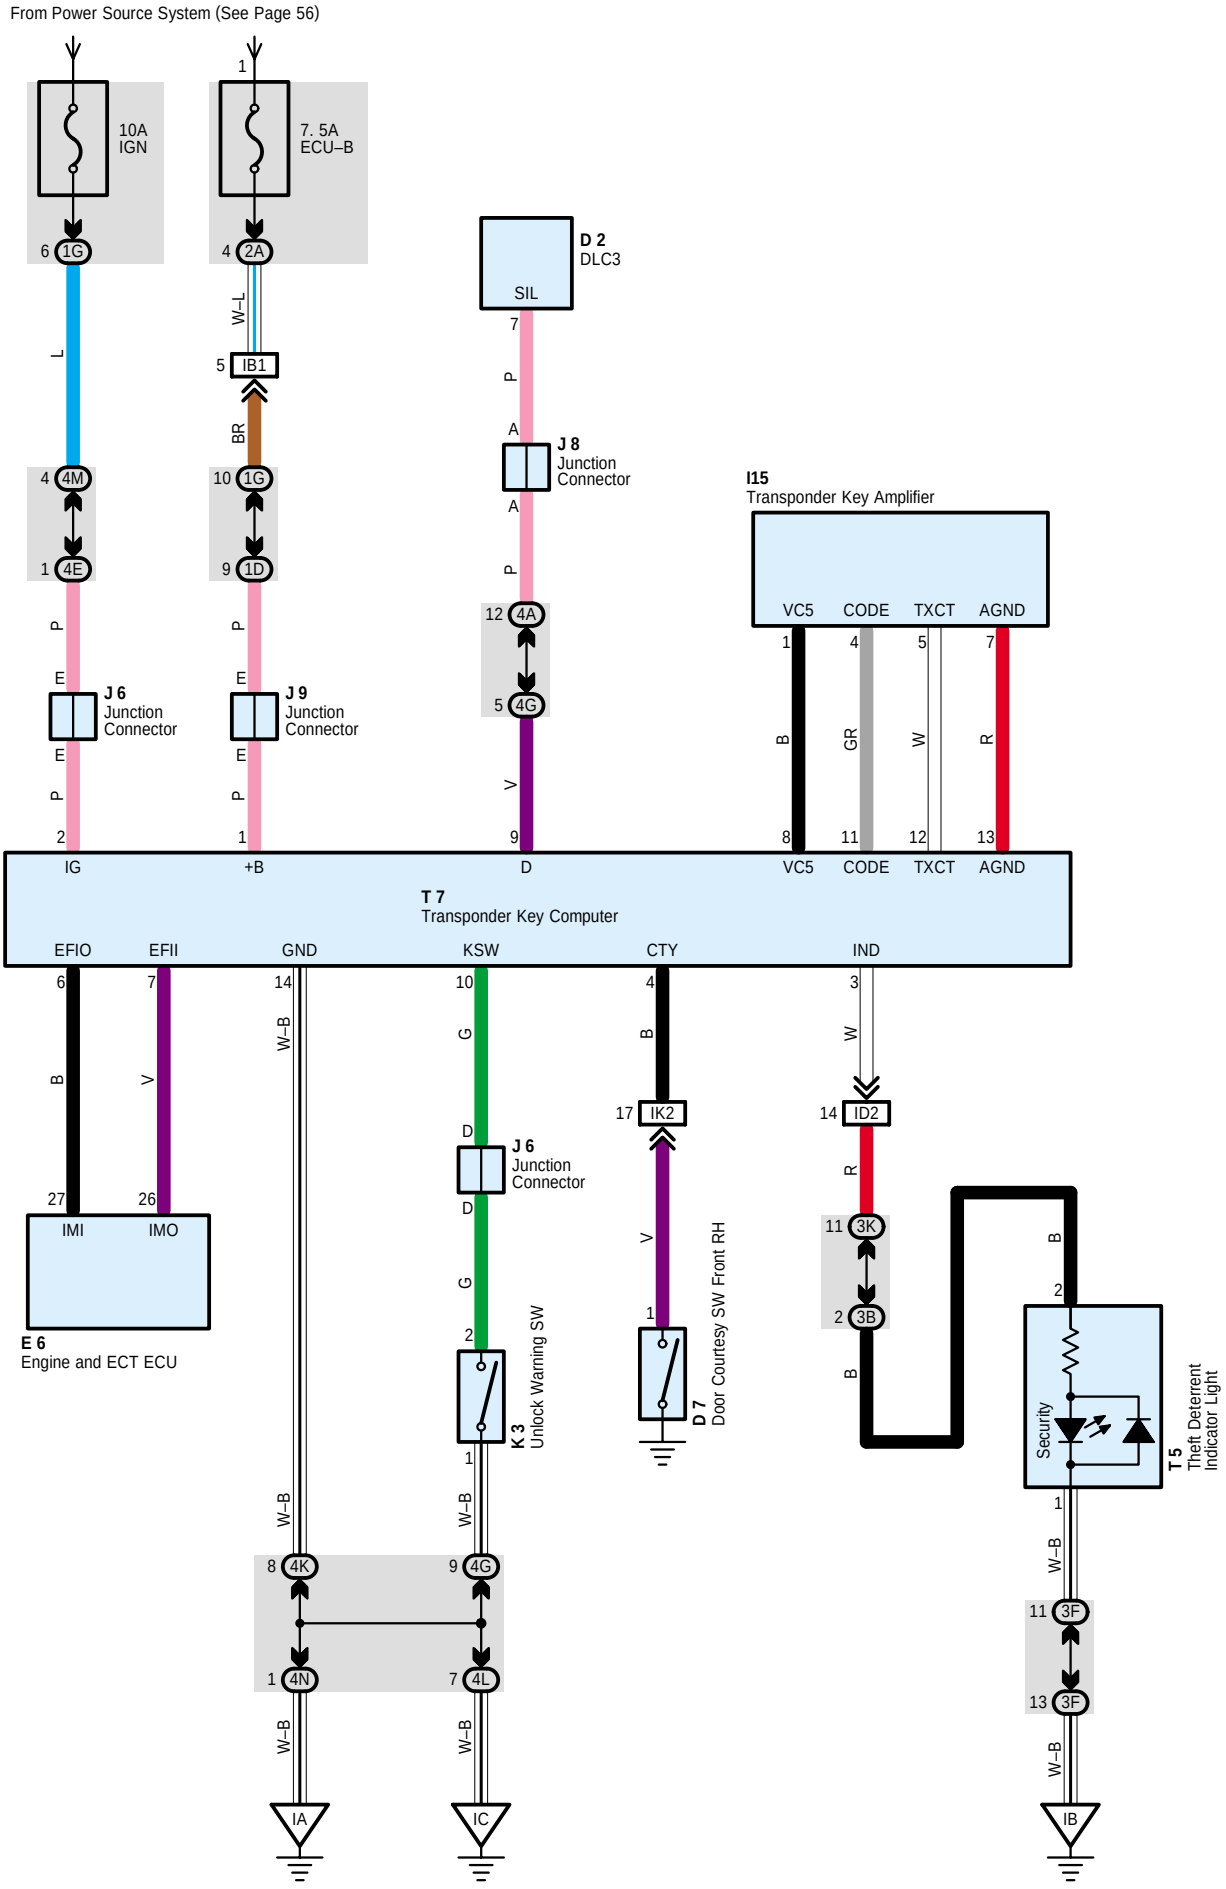

From Power Source System (See Page 56)
10A IGN
7. 5A ECU–B
D 2 DLC3
SIL
J 8 Junction Connector
I15 Transponder Key Amplifier
VC5 CODE TXCT AGND
J 6 Junction Connector
J 9 Junction Connector
IG +B D VC5 CODE TXCT AGND
T 7 Transponder Key Computer
EFIO EFII GND KSW CTY IND
E 6 Engine and ECT ECU
IMI IMO
K 3 Unlock Warning SW
D 7 Door Courtesy SW Front RH
T 5 Theft Deterrent Indicator Light
Security
IA IC IB