




I GROUND POINT

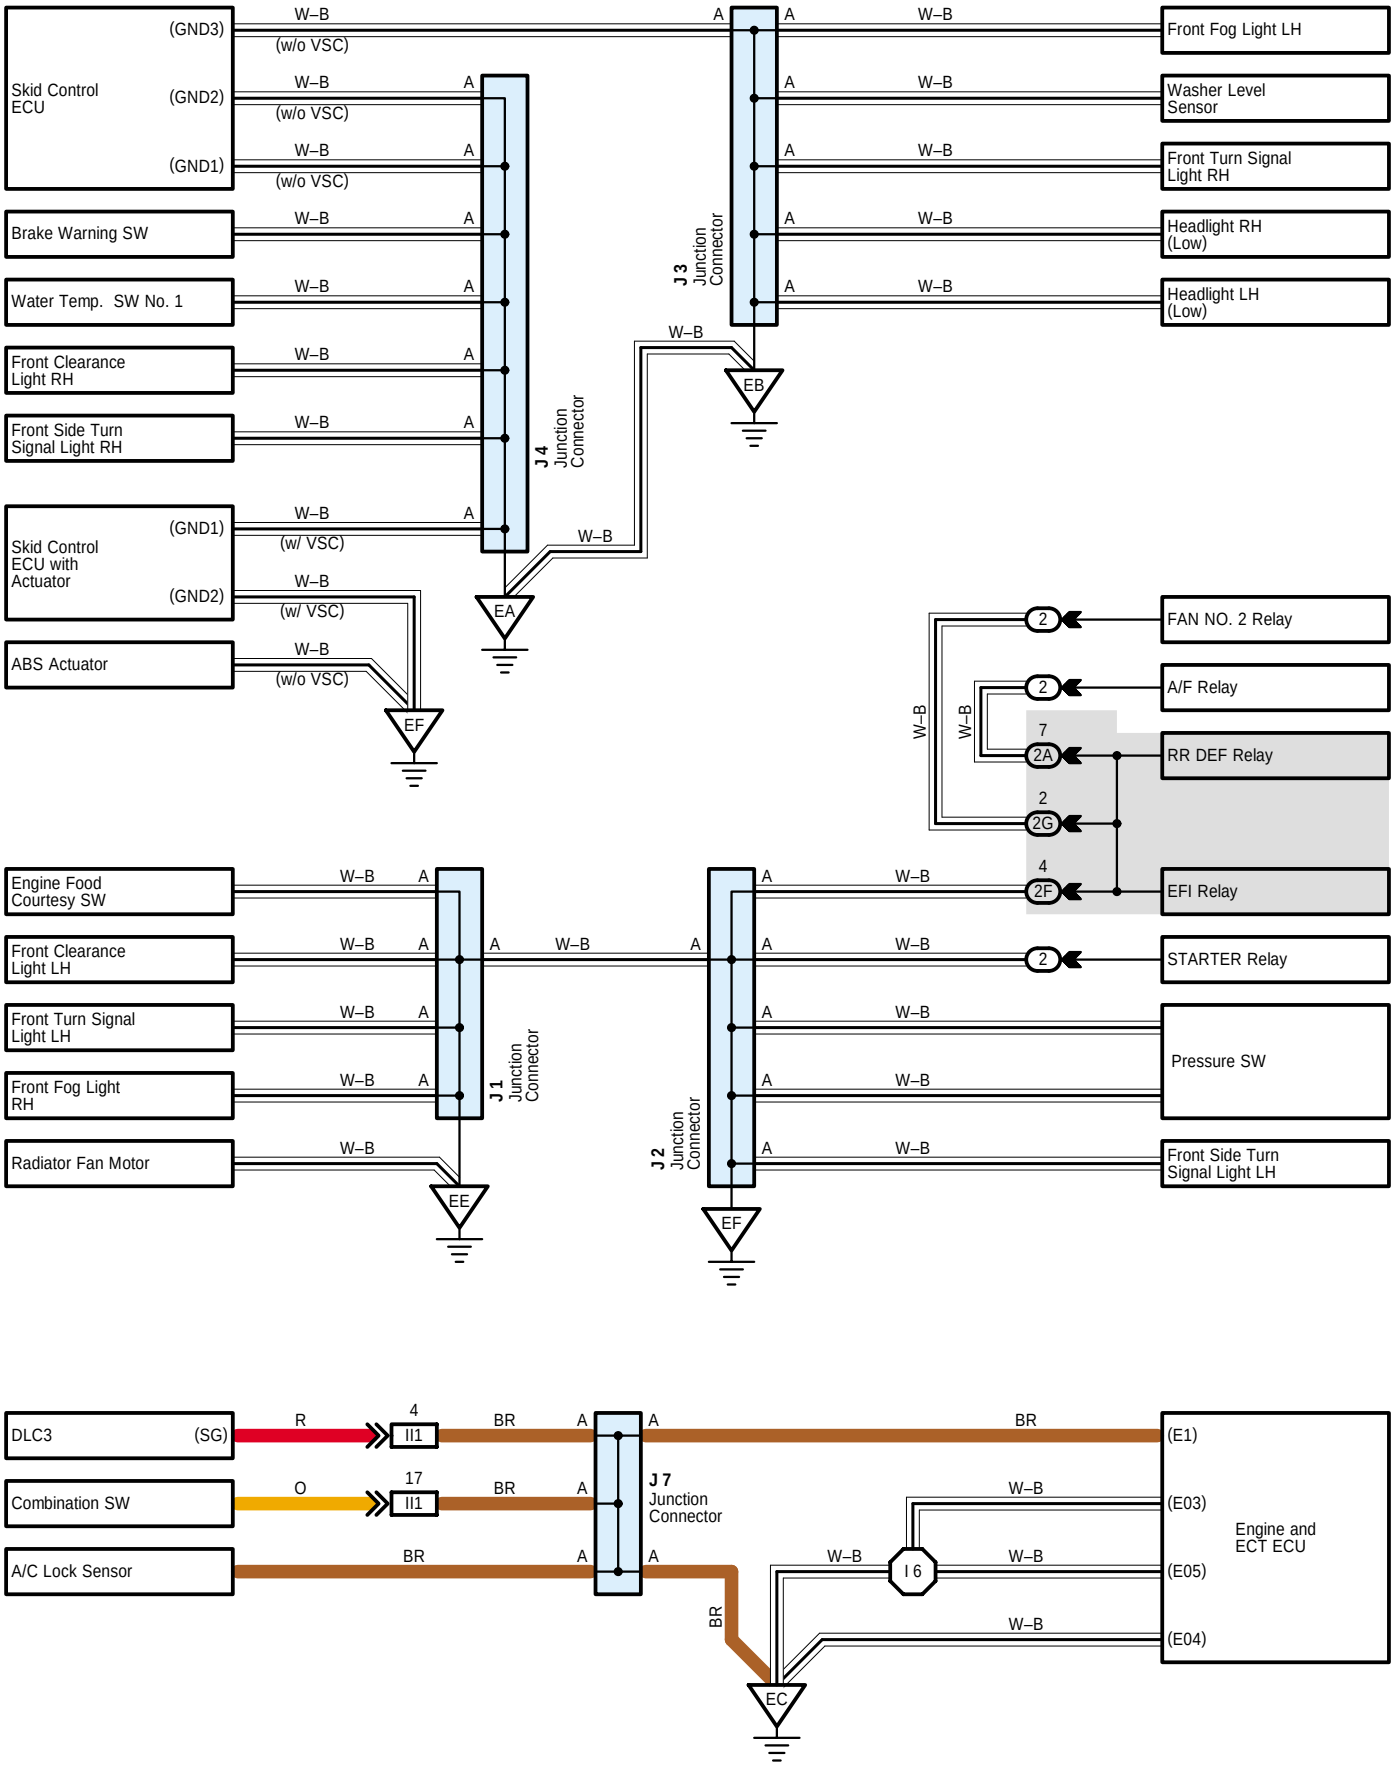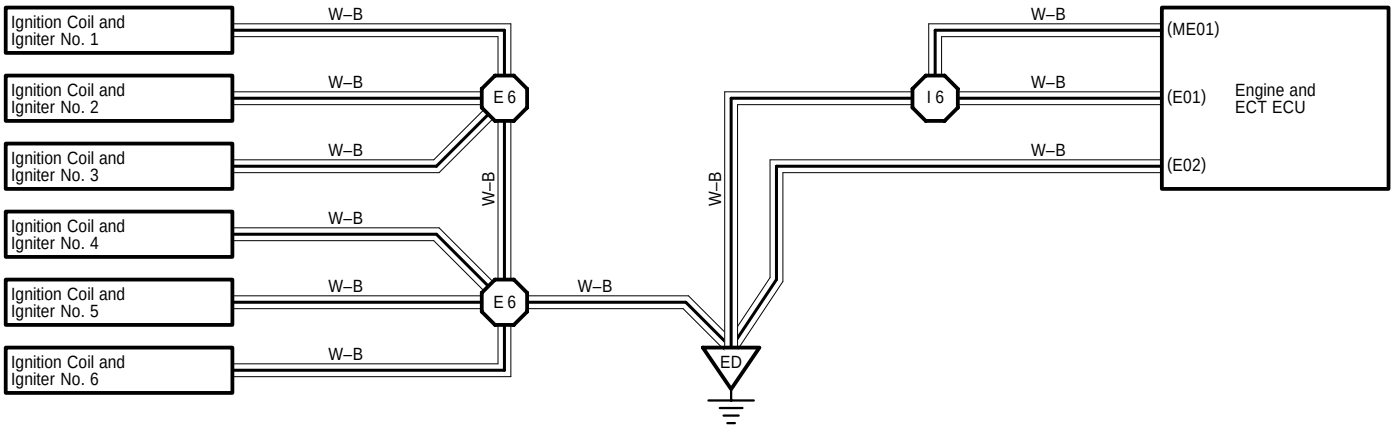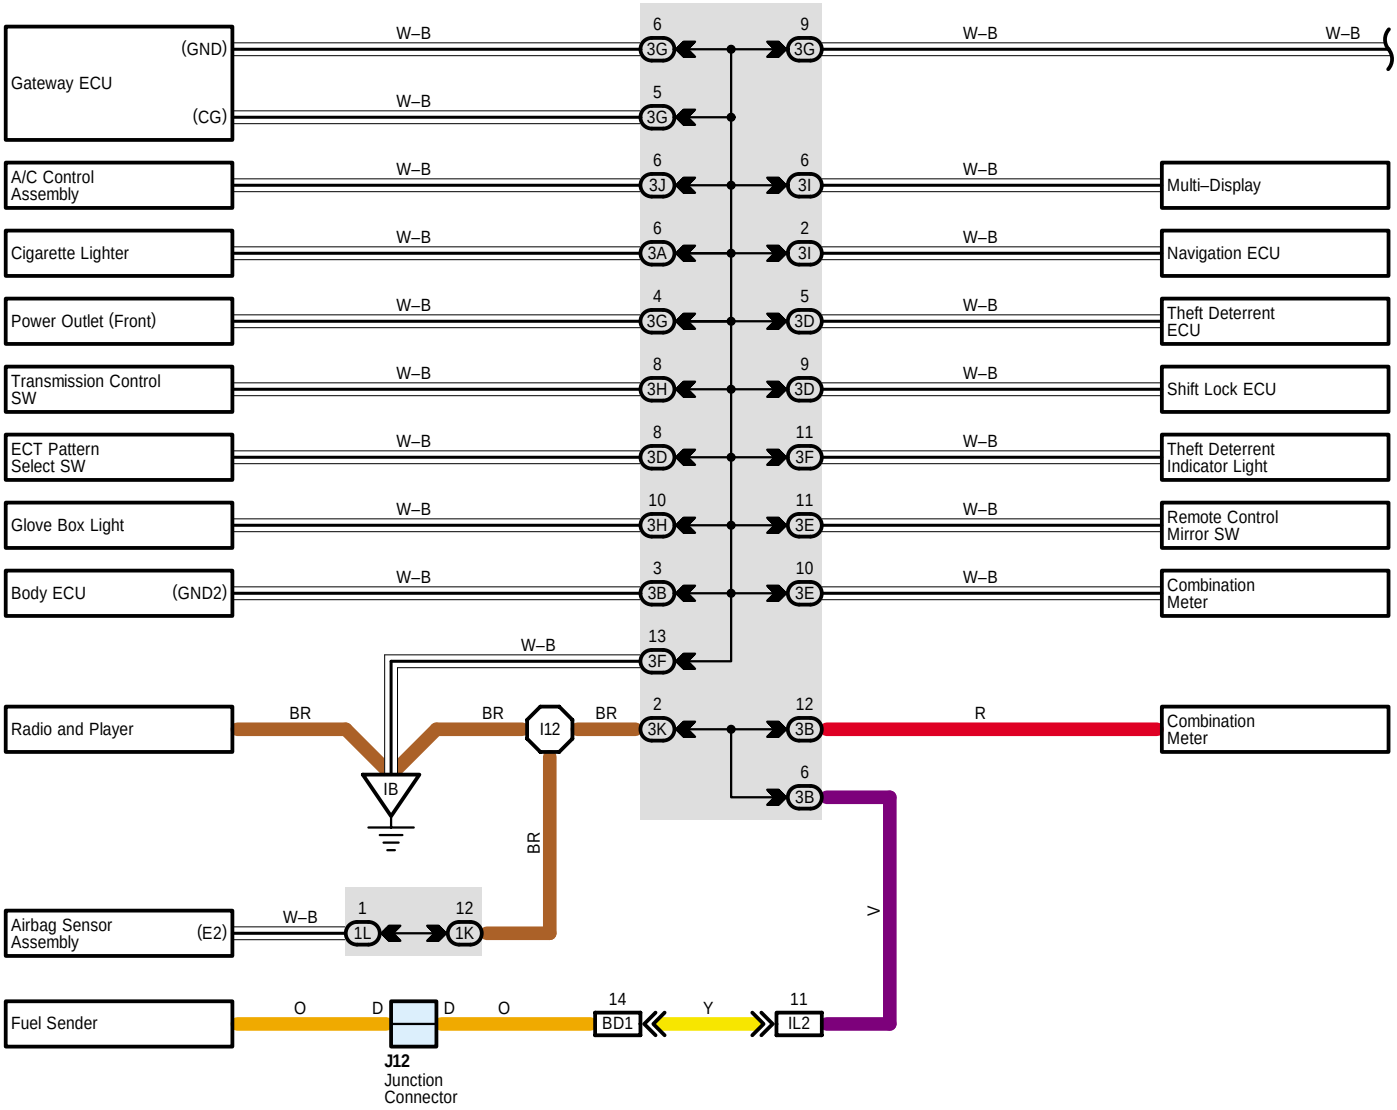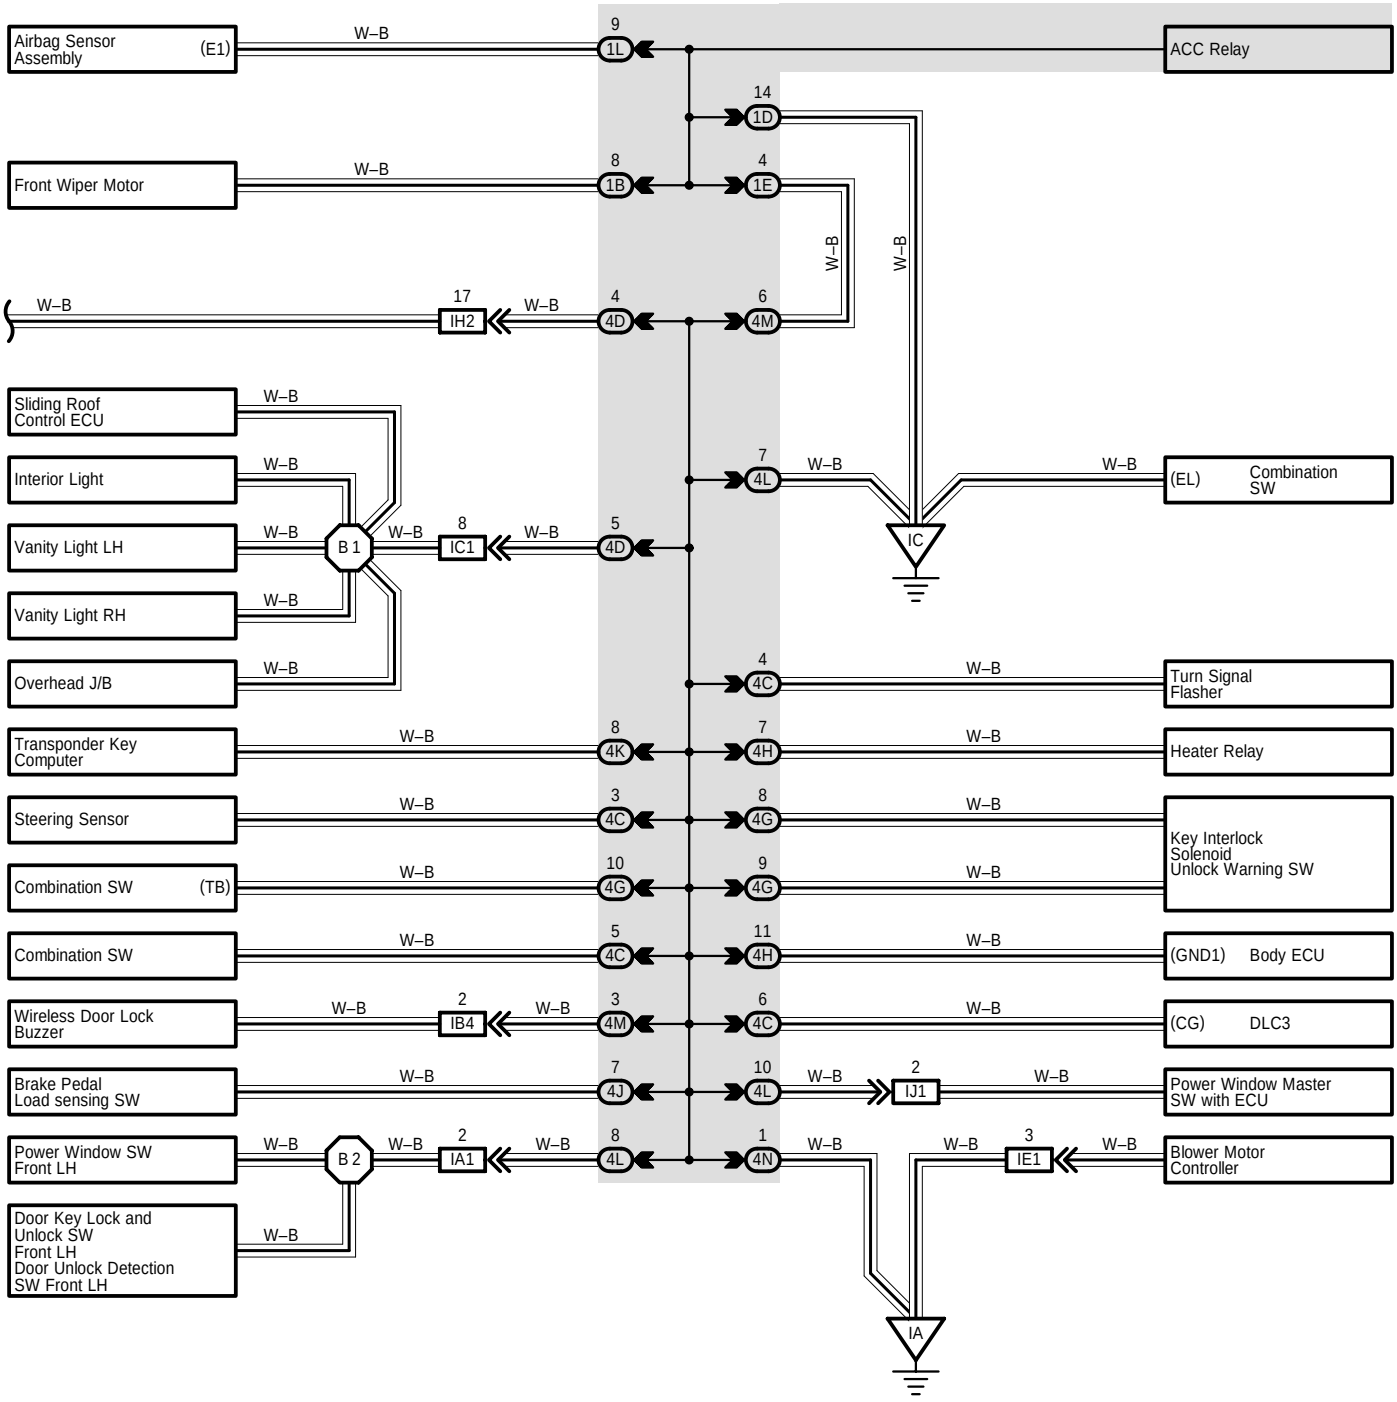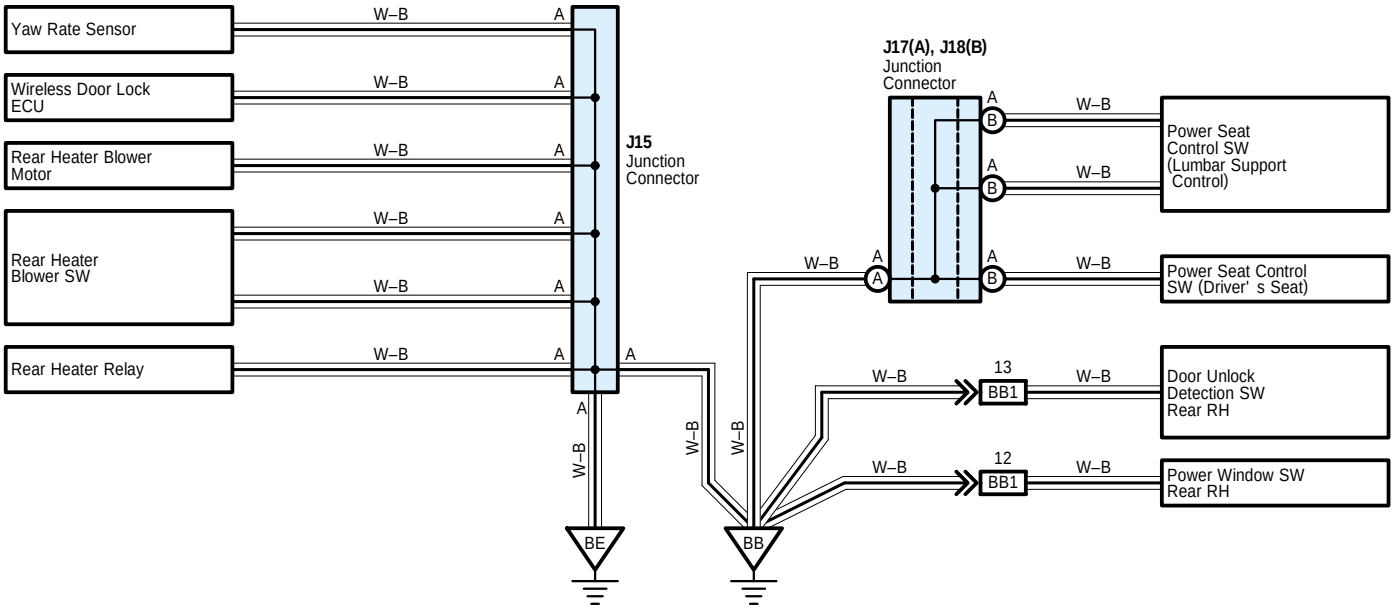



Ignition Coil and Igniter No. 1
Ignition Coil and Igniter No. 2
Ignition Coil and Igniter No. 3
Ignition Coil and Igniter No. 4
Ignition Coil and Igniter No. 5
Ignition Coil and Igniter No. 6
W–B
E 6
I 6
ED
(ME01)
(E01)
(E02)
Engine and ECT ECU


Gateway ECU
(GND)
(CG)
A/C Control Assembly
Cigarette Lighter
Power Outlet (Front)
Transmission Control SW
ECT Pattern Select SW
Glove Box Light
Body ECU
(GND2)
Radio and Player
Airbag Sensor Assembly
(E2)
Fuel Sender
Multi–Display
Navigation ECU
Theft Deterrent ECU
Shift Lock ECU
Theft Deterrent Indicator Light
Remote Control Mirror SW
Combination Meter
IB
I12
J12
Junction Connector
W–B
BR
R
O
D
Y
V


Airbag Sensor Assembly
(E1)
W–B
9
1L
ACC Relay
14
1D
Front Wiper Motor
8
1B
4
1E
W–B
W–B
W–B
17
IH2
4
4D
6
4M
Sliding Roof Control ECU
Interior Light
Vanity Light LH
Vanity Light RH
Overhead J/B
B 1
8
IC1
5
4D
7
4L
(EL)
Combination SW
IC
4
4C
Turn Signal Flasher
Transponder Key Computer
8
4K
7
4H
Heater Relay
Steering Sensor
3
4C
8
4G
Key Interlock Solenoid Unlock Warning SW
Combination SW
(TB)
10
4G
9
4G
Combination SW
5
4C
11
4H
(GND1)
Body ECU
Wireless Door Lock Buzzer
2
IB4
3
4M
6
4C
(CG)
DLC3
Brake Pedal Load sensing SW
7
4J
10
4L
2
IJ1
Power Window Master SW with ECU
Power Window SW Front LH
B 2
2
IA1
8
4L
1
4N
3
IE1
Blower Motor Controller
Door Key Lock and Unlock SW Front LH
Door Unlock Detection SW Front LH
IA


Yaw Rate Sensor
Wireless Door Lock ECU
Rear Heater Blower Motor
Rear Heater Blower SW
Rear Heater Relay
W–B
A
J15
Junction Connector
J17(A), J18(B)
Junction Connector
Power Seat Control SW (Lumbar Support Control)
Power Seat Control SW (Driver' s Seat)
Door Unlock Detection SW Rear RH
Power Window SW Rear RH
13
12
BB1
BE
BB

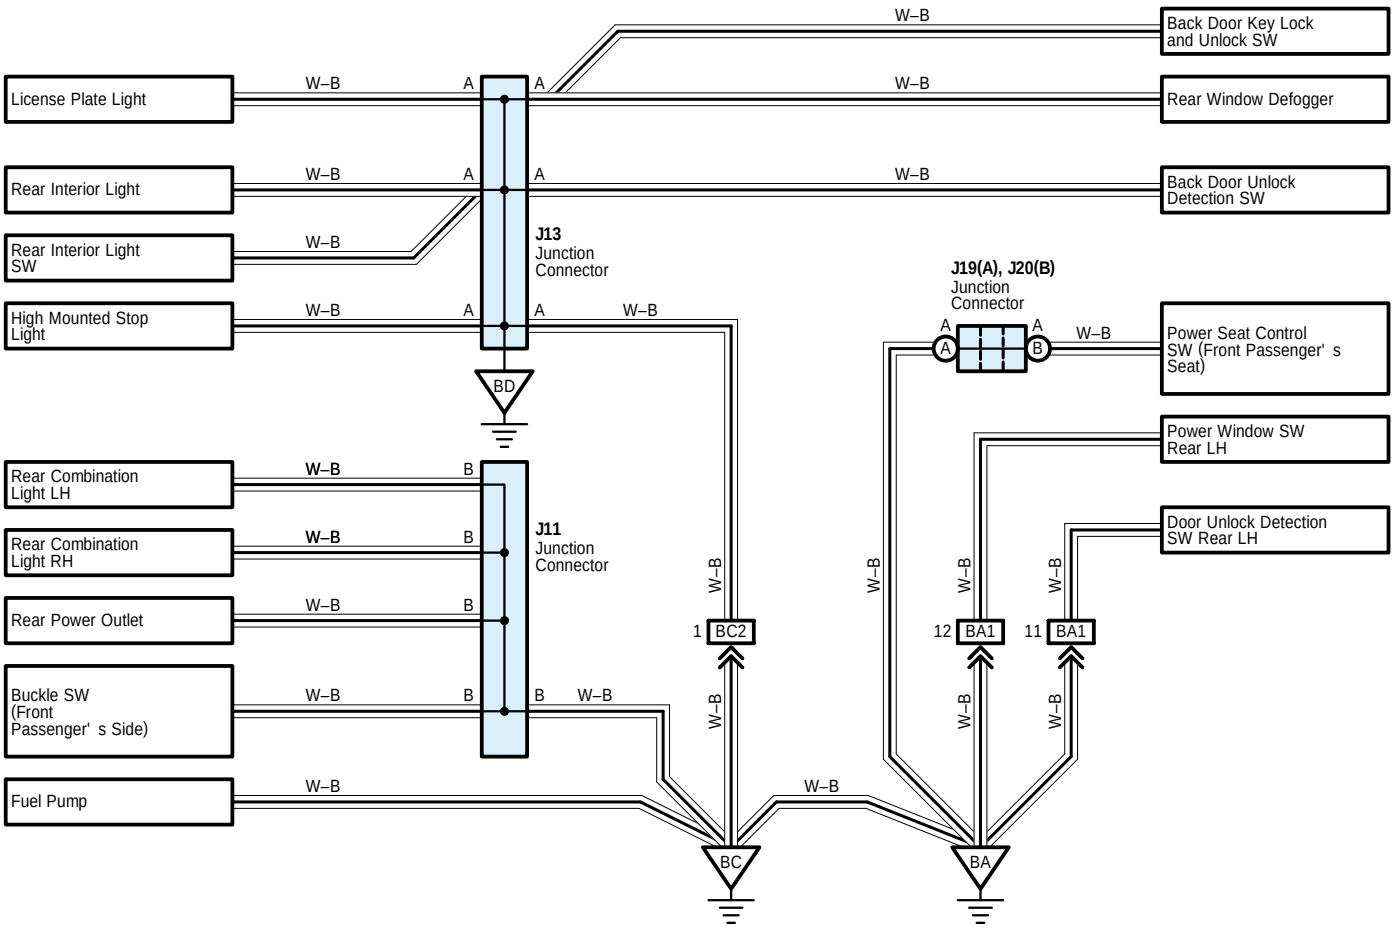
License Plate Light
Rear Interior Light
Rear Interior Light SW
High Mounted Stop Light
Rear Combination Light LH
Rear Combination Light RH
Rear Power Outlet
Buckle SW (Front Passenger' s Side)
Fuel Pump
Back Door Key Lock and Unlock SW
Rear Window Defogger
Back Door Unlock Detection SW
J13
Junction Connector
J11
Junction Connector
J19(A), J20(B)
Junction Connector
Power Seat Control SW (Front Passenger' s Seat)
Power Window SW Rear LH
Door Unlock Detection SW Rear LH
BD
BC
BA
BC2
BA1