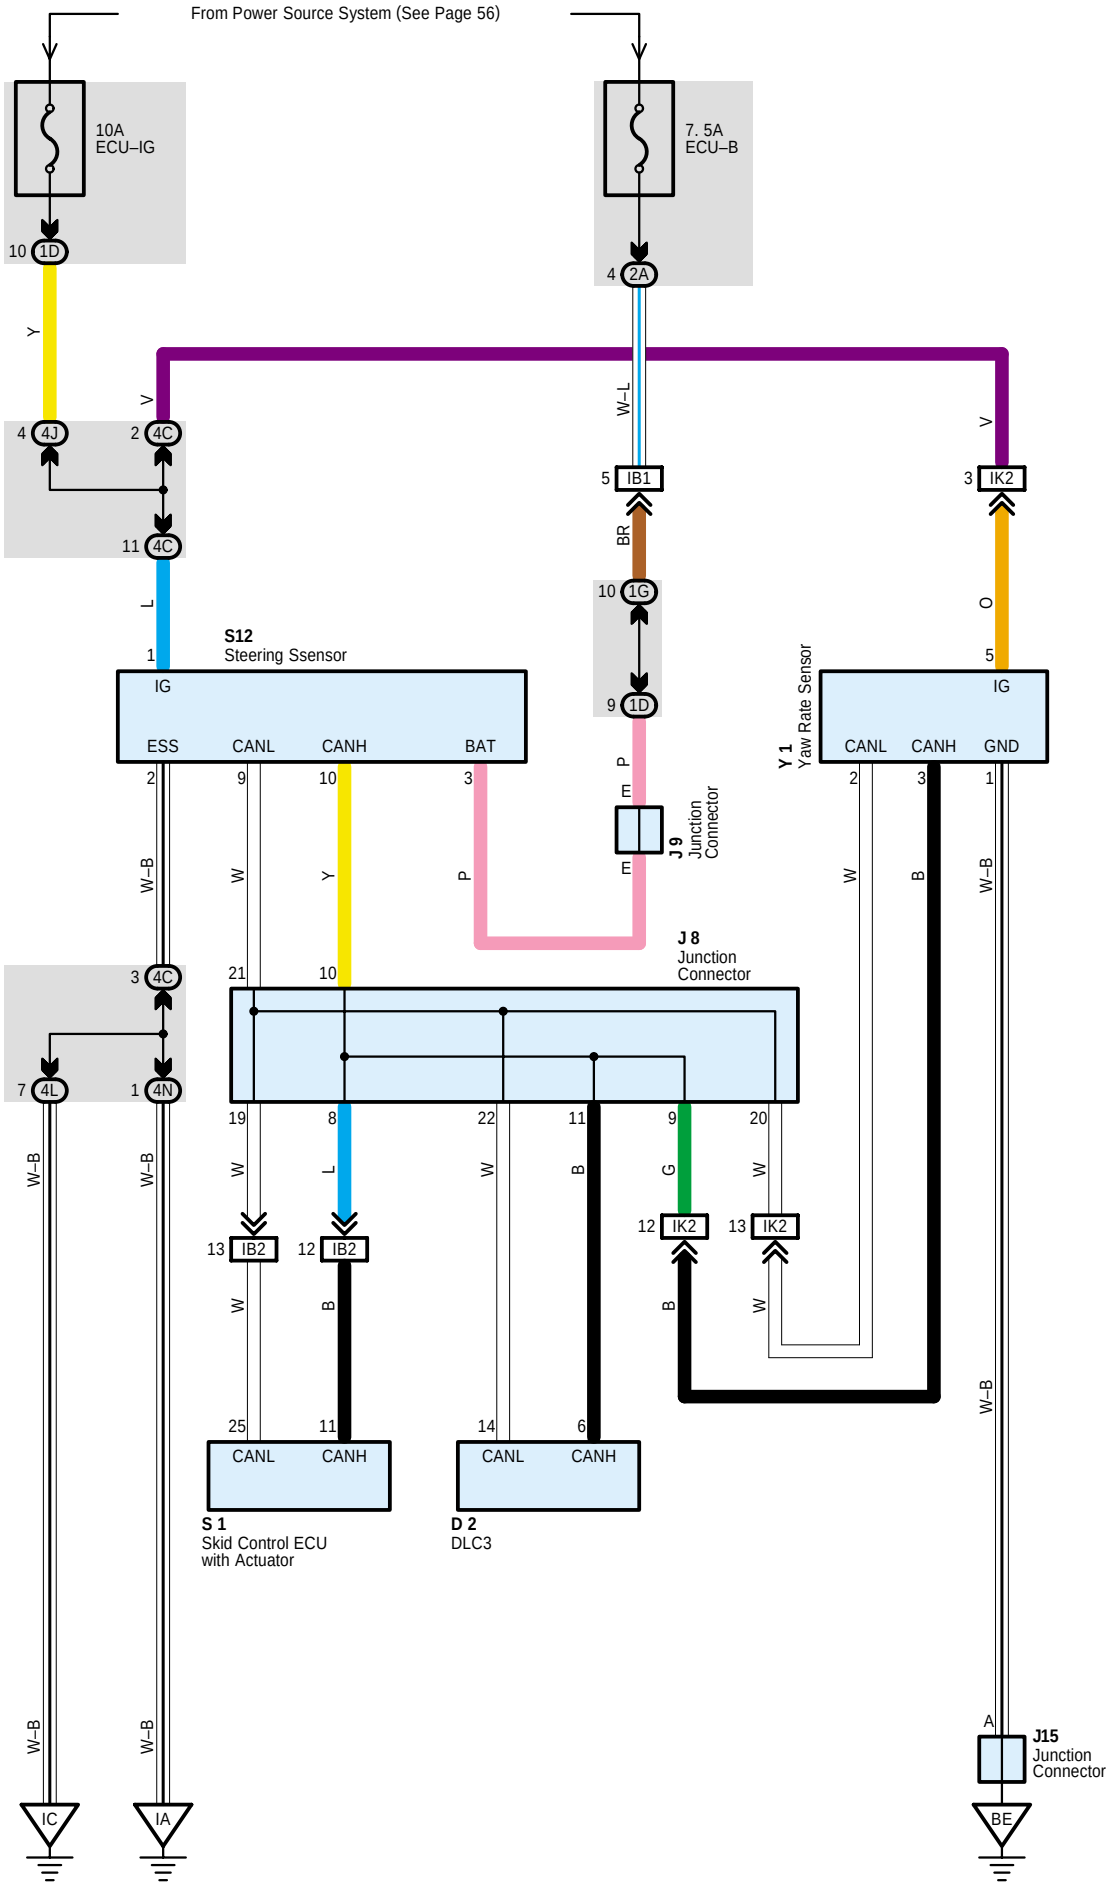

From Power Source System (See Page 56)
10A
ECU–IG
7. 5A
ECU–B
10 1D
4 2A
Y
V
W–L
V
4 4J
2 4C
5 IB1
3 IK2
BR
11 4C
10 1G
O
L
1
S12
Steering Ssensor
IG
9 1D
5
IG
ESS
CANL
CANH
BAT
CANL
CANH
GND
Y 1
Yaw Rate Sensor
2
9
10
3
P
E
J 9
Junction
Connector
E
2
3
1
W–B
W
Y
P
W
B
W–B
J 8
Junction
Connector
3 4C
21
10
7 4L
1 4N
19
8
22
11
9
20
W–B
W–B
W
L
W
B
G
W
13 IB2
12 IB2
12 IK2
13 IK2
W
B
B
W
25
11
14
6
W–B
CANL
CANH
CANL
CANH
S 1
Skid Control ECU
with Actuator
D 2
DLC3
A
J15
Junction
Connector
W–B
W–B
IC
IA
BE