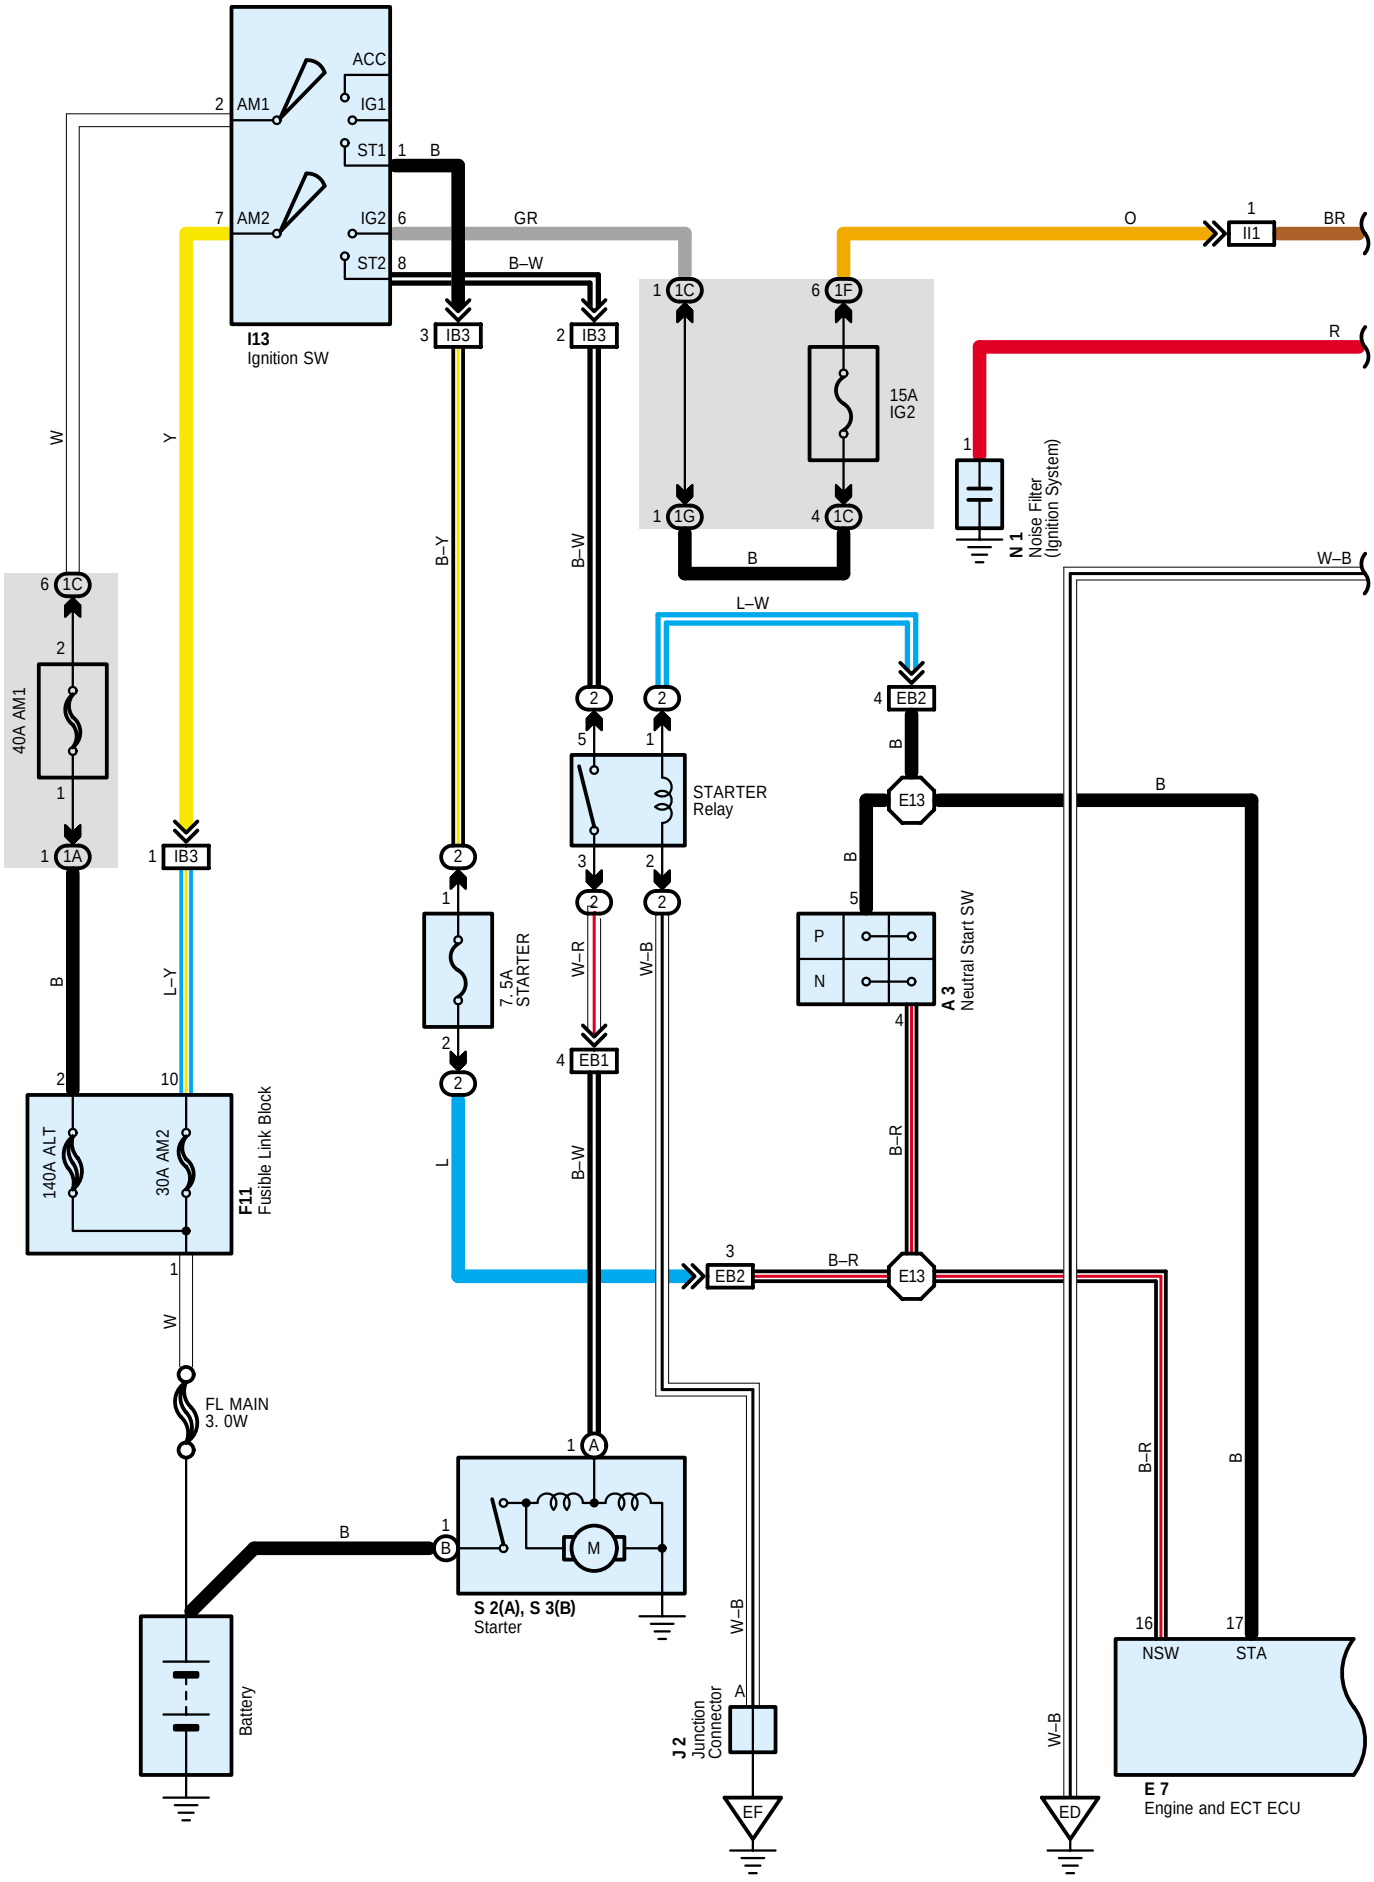
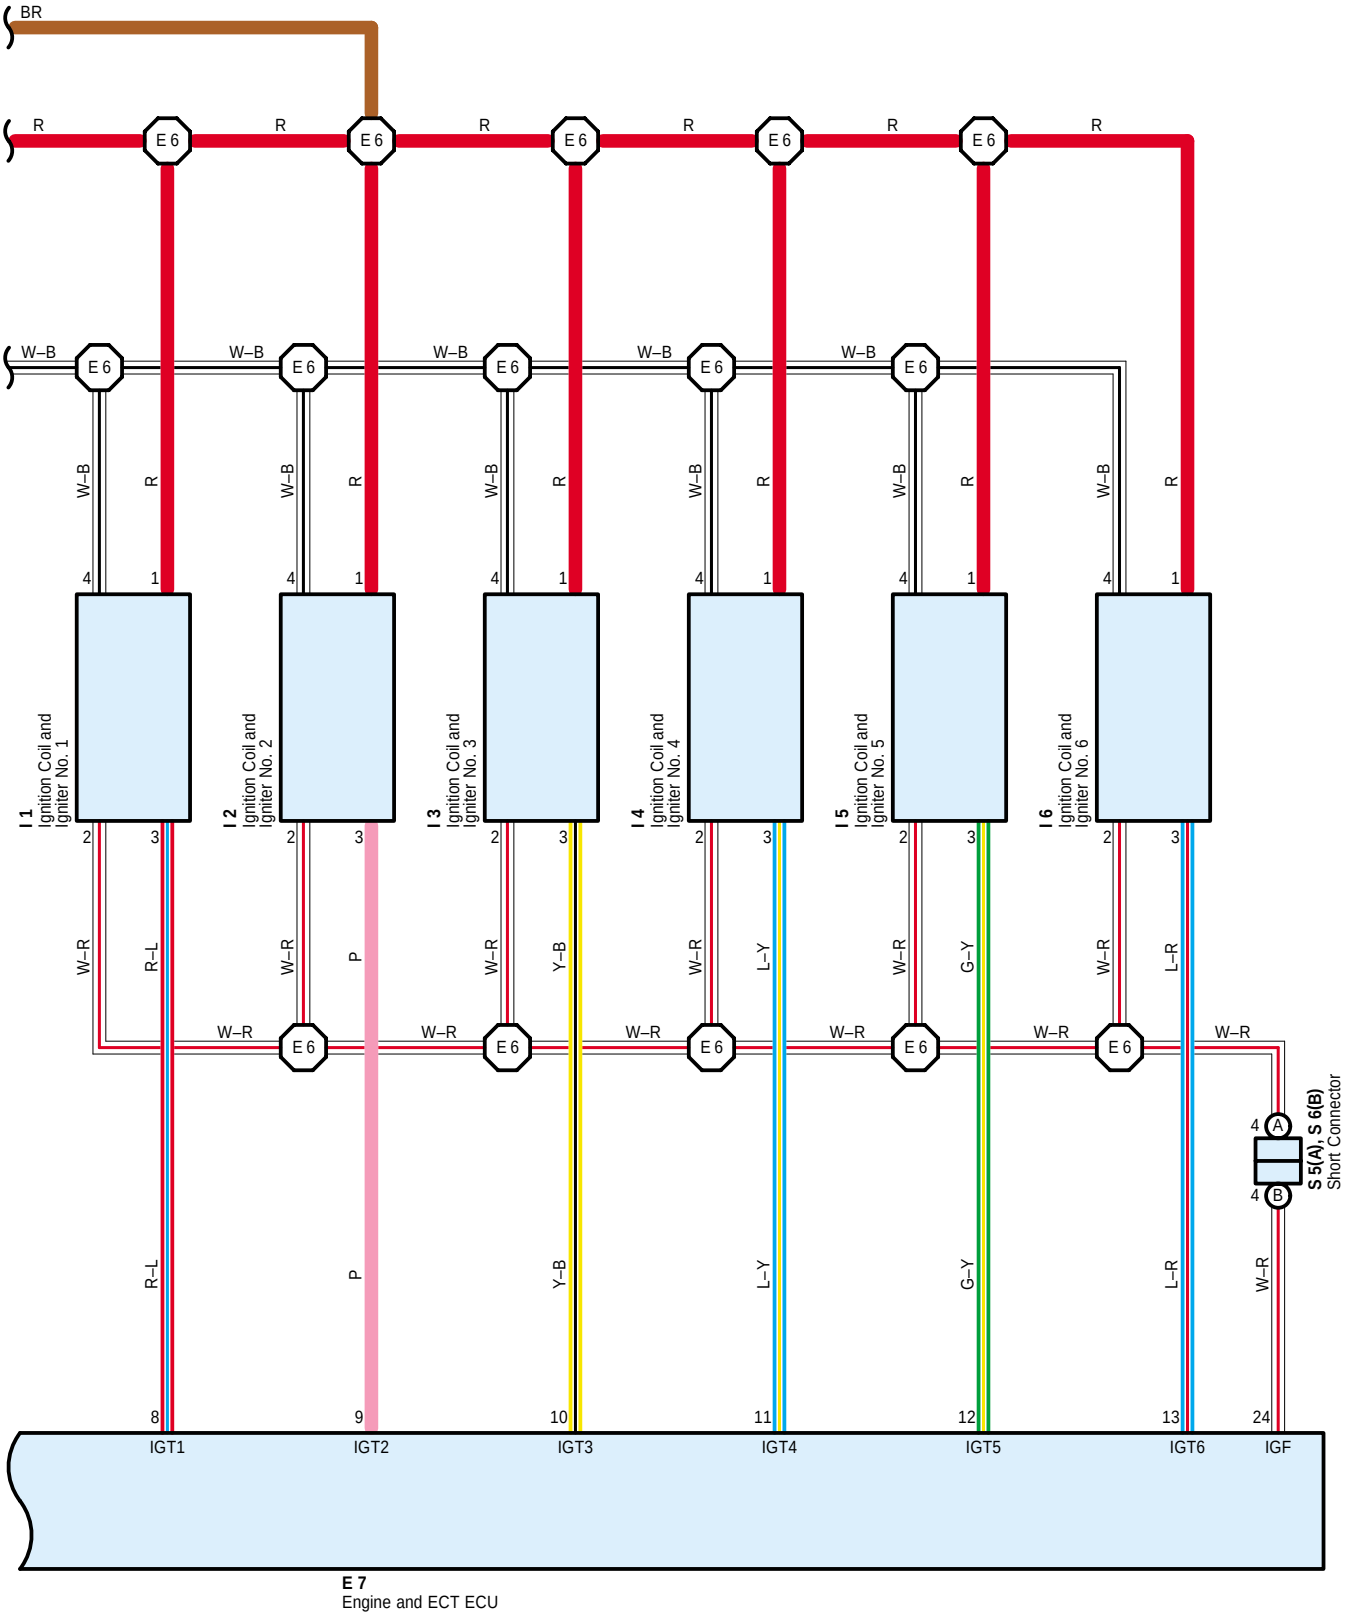

I13
Ignition SW
ACC
IG1
ST1
IG2
ST2
AM1
AM2
15A
IG2
40A AM1
STARTER
Relay
7.5A
STARTER
F11
Fusible Link Block
140A ALT
30A AM2
FL MAIN
3. 0W
Battery
S 2(A), S 3(B)
Starter
J2
Junction
Connector
A 3
Neutral Start SW
P
N
N 1
Noise Filter
(Ignition System)
E 7
Engine and ECT ECU
NSW
STA
EF
ED
W
Y
B
GR
B–W
B–Y
L–W
L–Y
W–R
W–B
B–R
L
O
BR
R


BR
R
E 6
W–B
I 1
Ignition Coil and Igniter No. 1
I 2
Ignition Coil and Igniter No. 2
I 3
Ignition Coil and Igniter No. 3
I 4
Ignition Coil and Igniter No. 4
I 5
Ignition Coil and Igniter No. 5
I 6
Ignition Coil and Igniter No. 6
W–R
R–L
P
Y–B
L–Y
G–Y
L–R
S 5(A), S 6(B)
Short Connector
IGT1
IGT2
IGT3
IGT4
IGT5
IGT6
IGF
E 7
Engine and ECT ECU