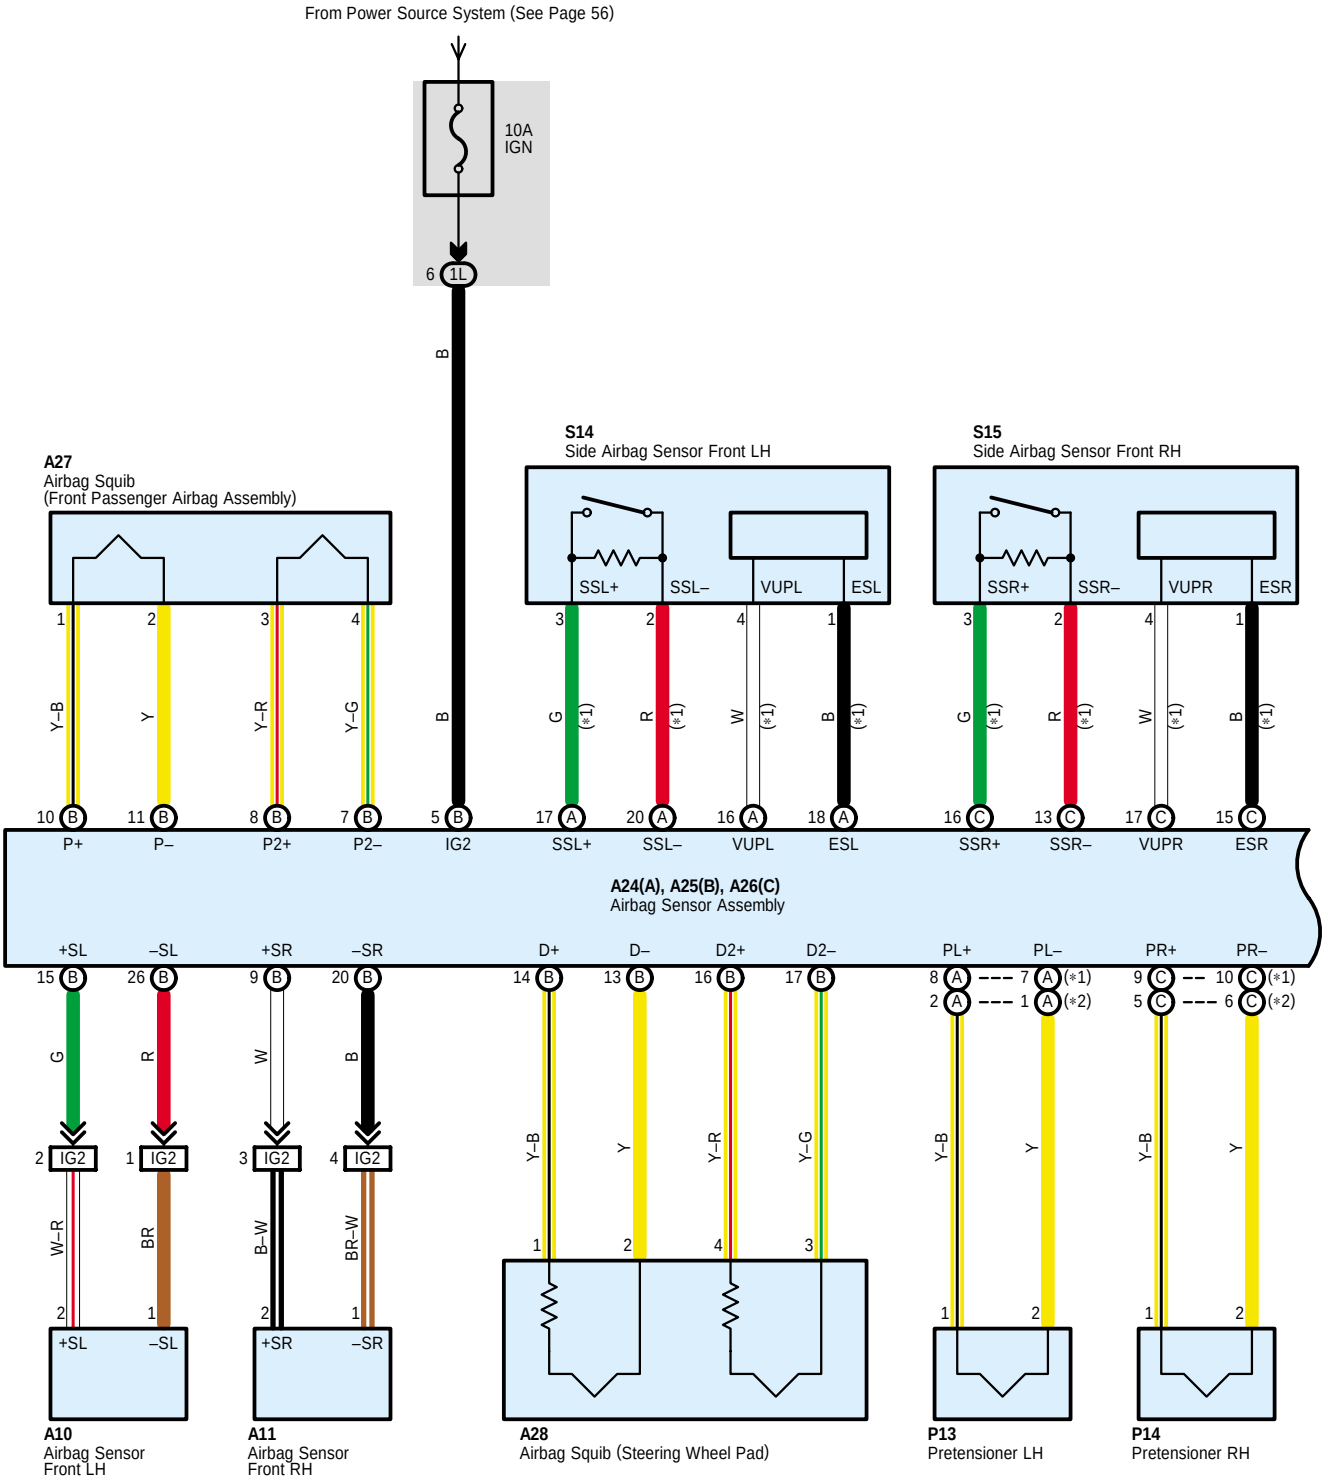
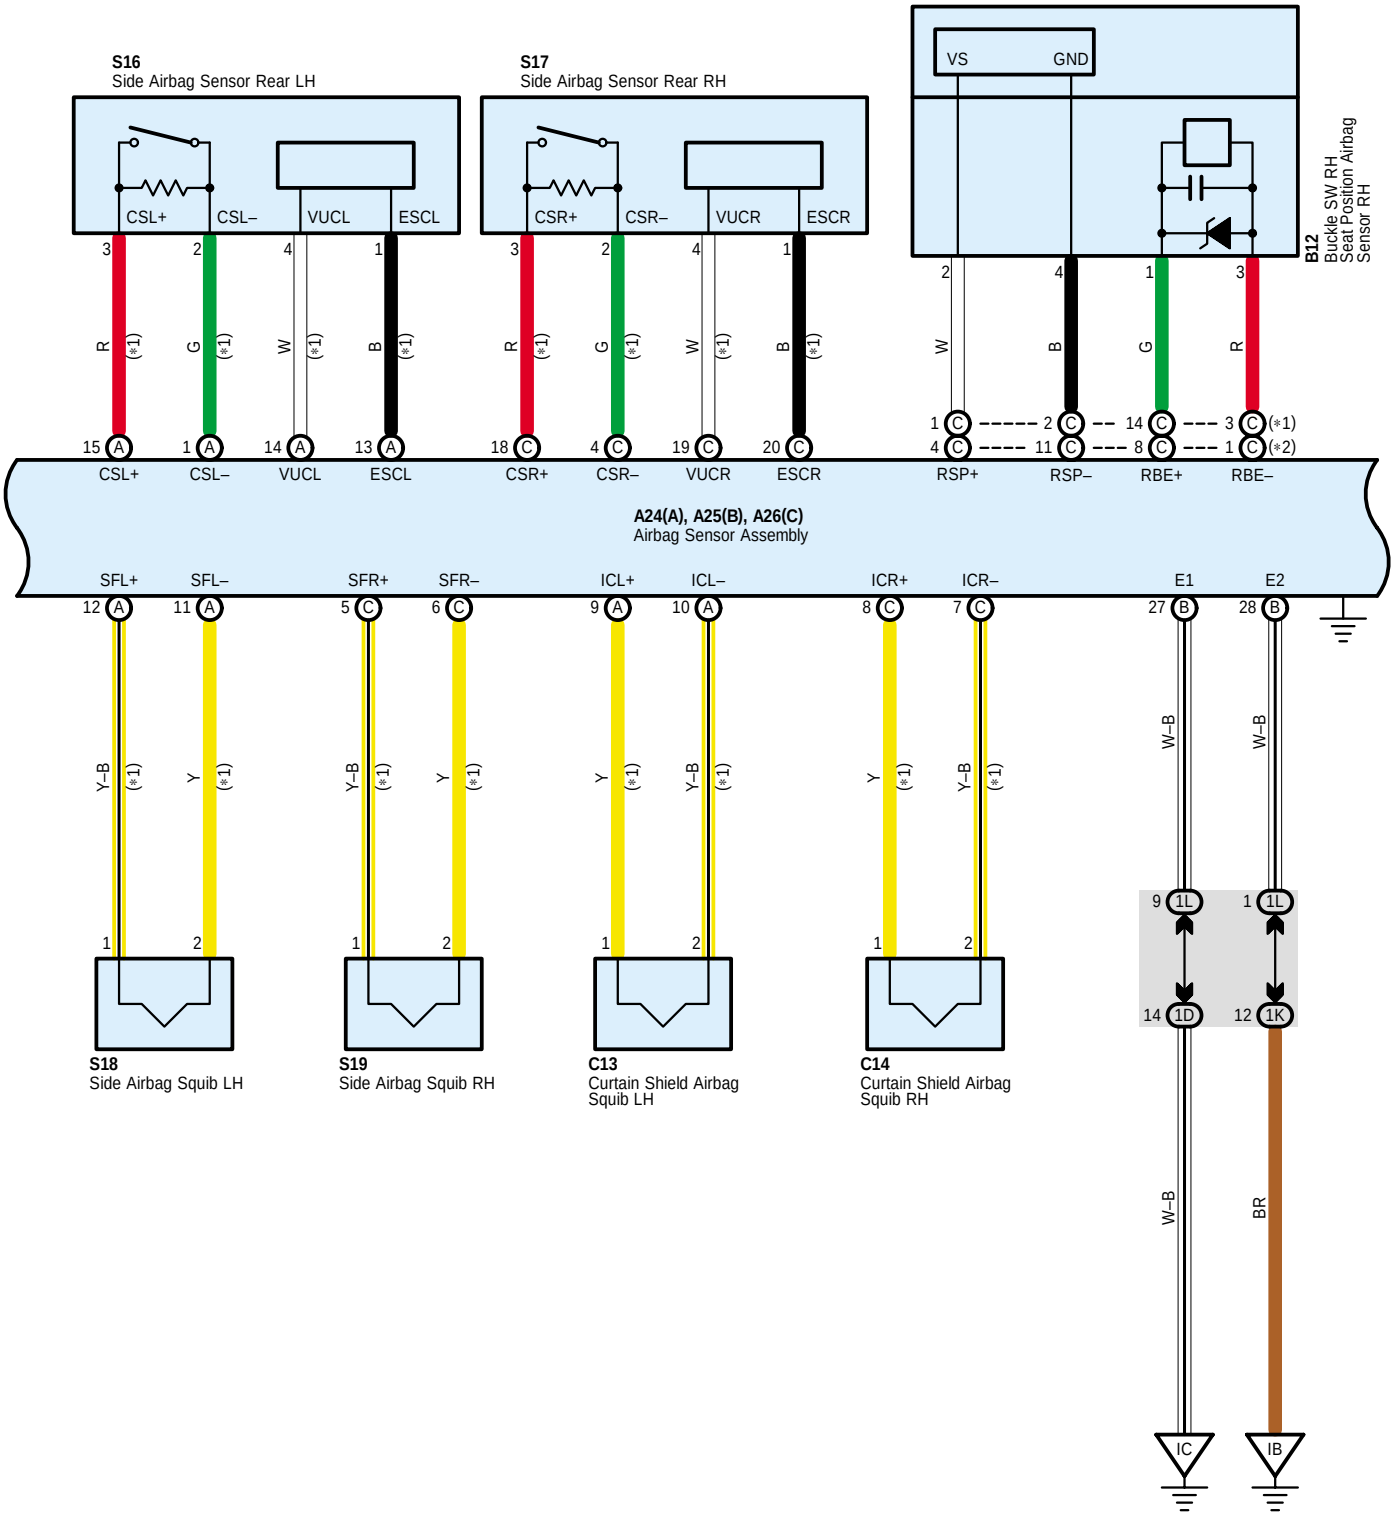
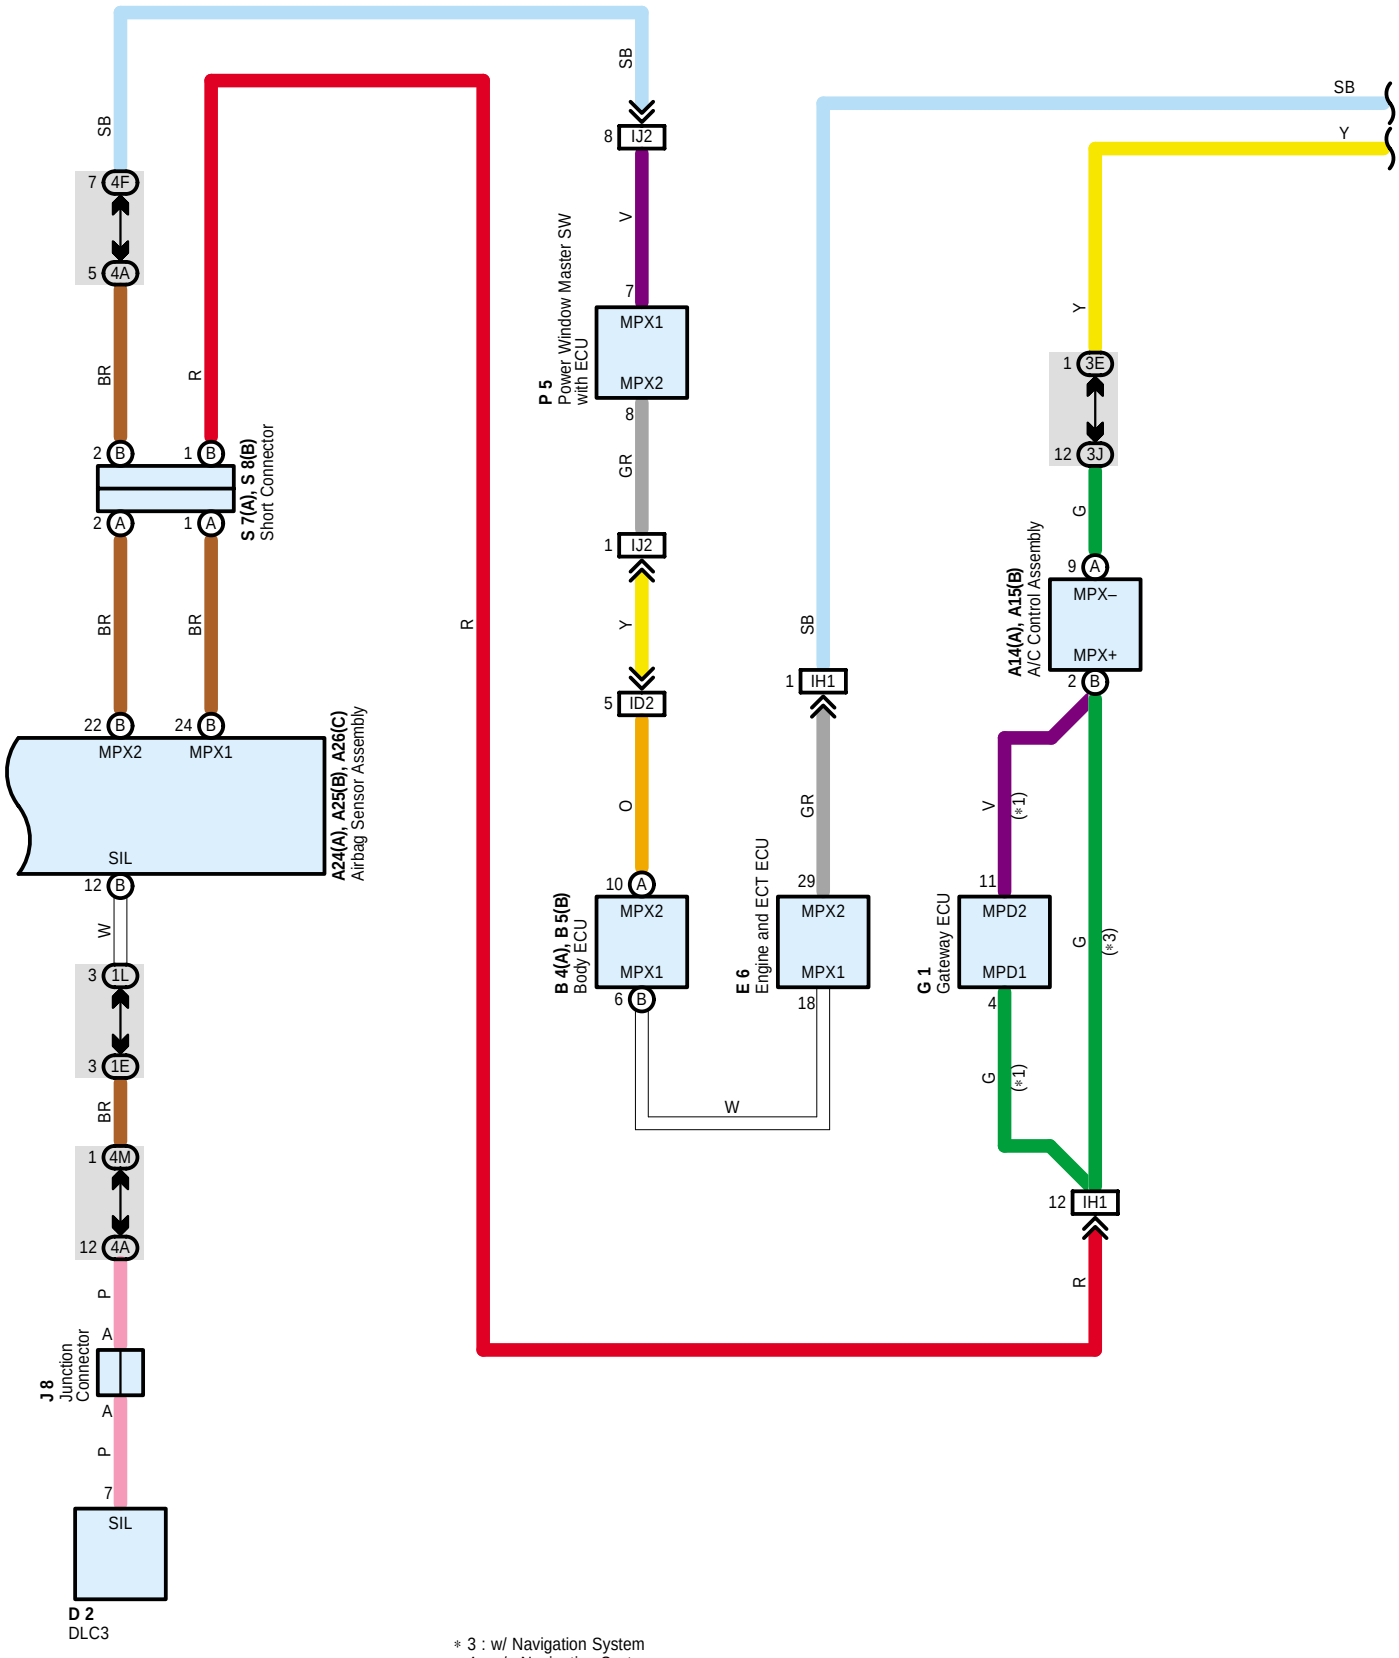
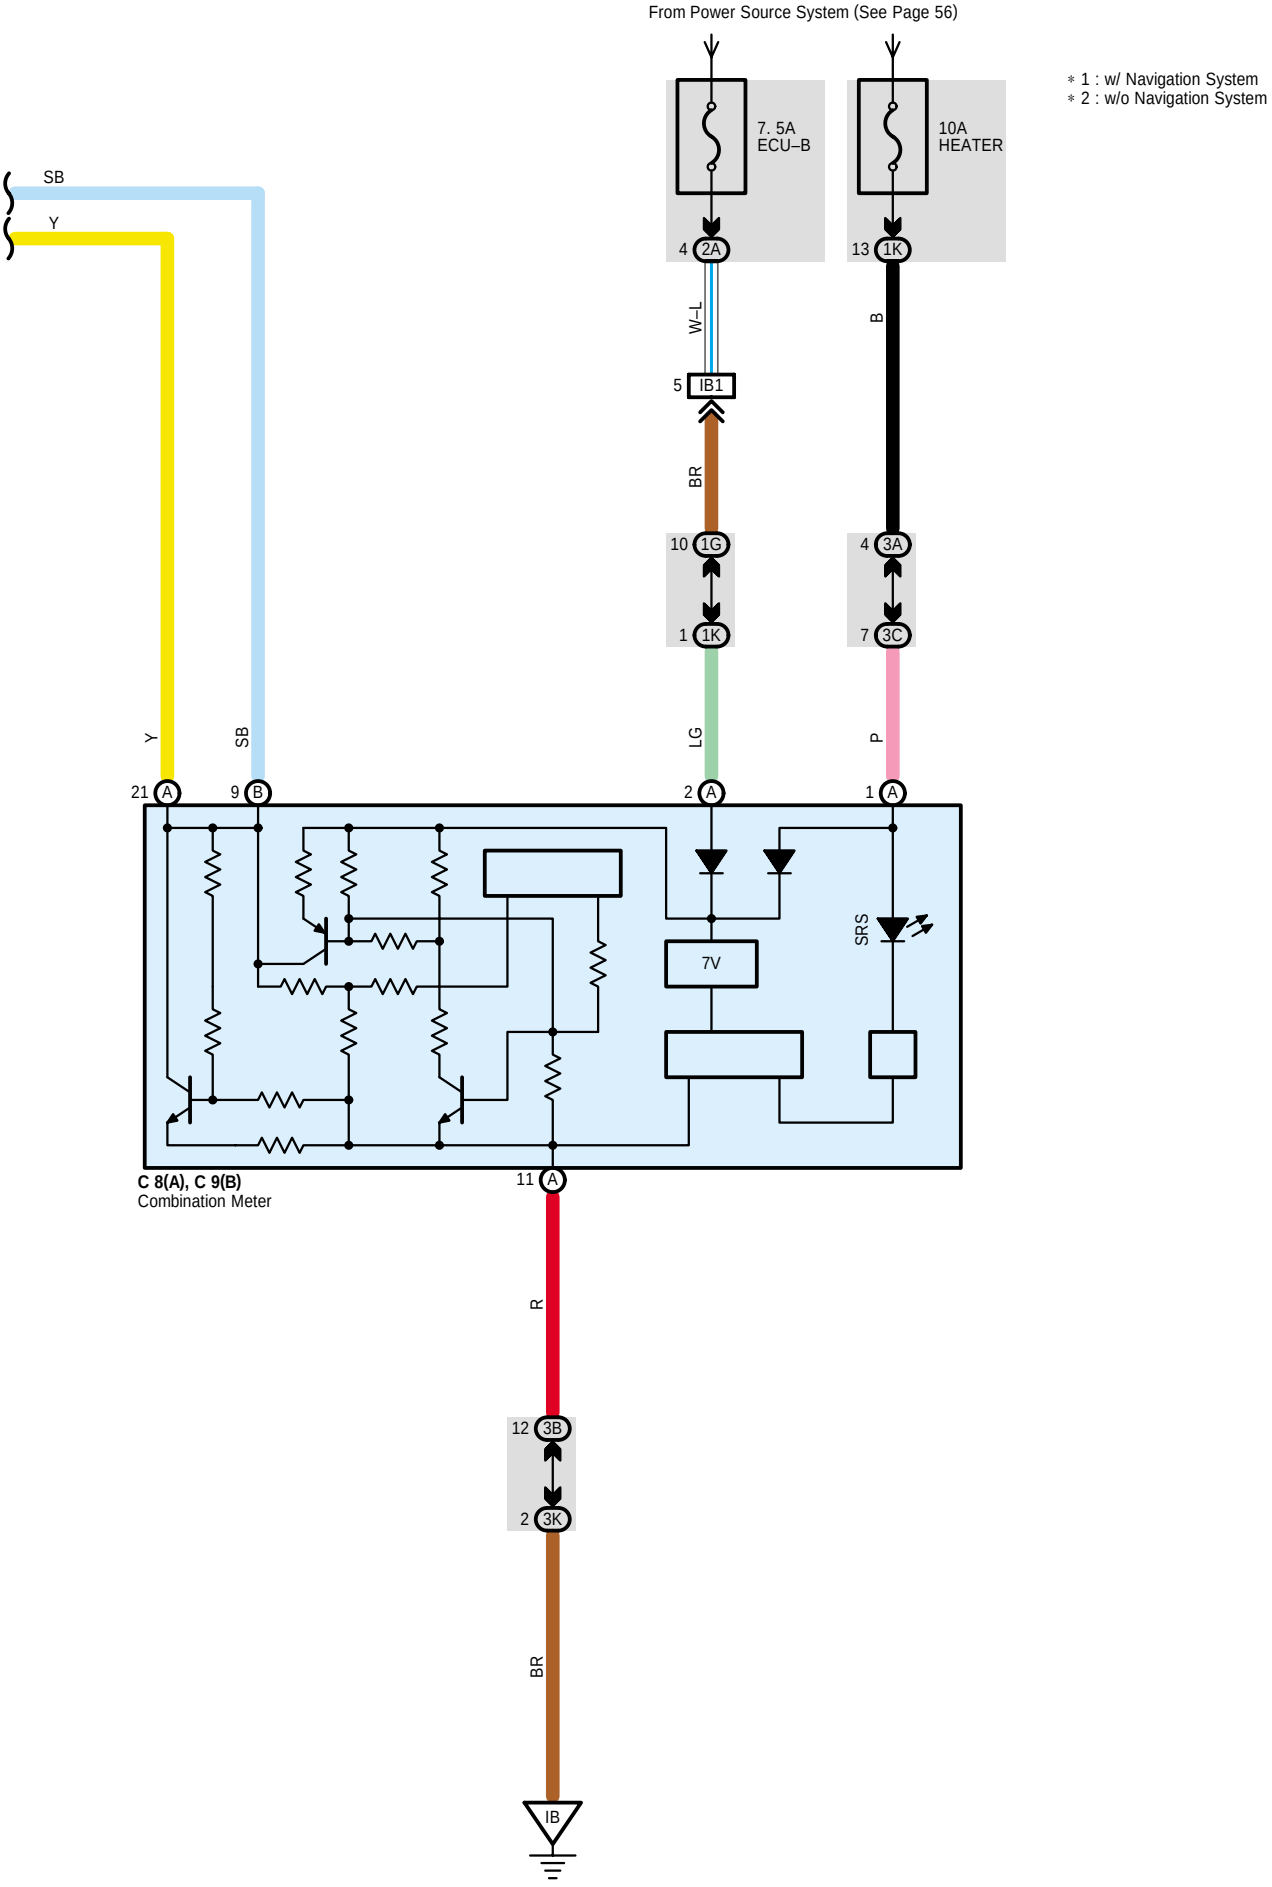

From Power Source System (See Page 56)
10A
IGN
6 1L
B
S14
Side Airbag Sensor Front LH
S15
Side Airbag Sensor Front RH
A27
Airbag Squib
(Front Passenger Airbag Assembly)
SSL+
SSL–
VUPL
ESL
SSR+
SSR–
VUPR
ESR
P+
P–
P2+
P2–
IG2
A24(A), A25(B), A26(C)
Airbag Sensor Assembly
+SL
–SL
+SR
–SR
D+
D–
D2+
D2–
PL+
PL–
PR+
PR–
A10
Airbag Sensor
Front LH
A11
Airbag Sensor
Front RH
A28
Airbag Squib (Steering Wheel Pad)
P13
Pretensioner LH
P14
Pretensioner RH

∗ 1 : w/ Curtain Shield Airbag
∗ 2 : w/o Curtain Shield Airbag





∗ 3 : w/ Navigation System
∗ 4 : w/o Navigation System


From Power Source System (See Page 56)
* 1 : w/ Navigation System
* 2 : w/o Navigation System
7. 5A
ECU–B
10A
HEATER
SB
Y
4 2A
13 1K
W–L
B
5 IB1
BR
10 1G
1 1K
4 3A
7 3C
LG
P
Y
SB
21 A
9 B
2 A
1 A
7V
SRS
C 8(A), C 9(B)
Combination Meter
11 A
R
12 3B
2 3K
BR
IB