




Theft Deterrent System

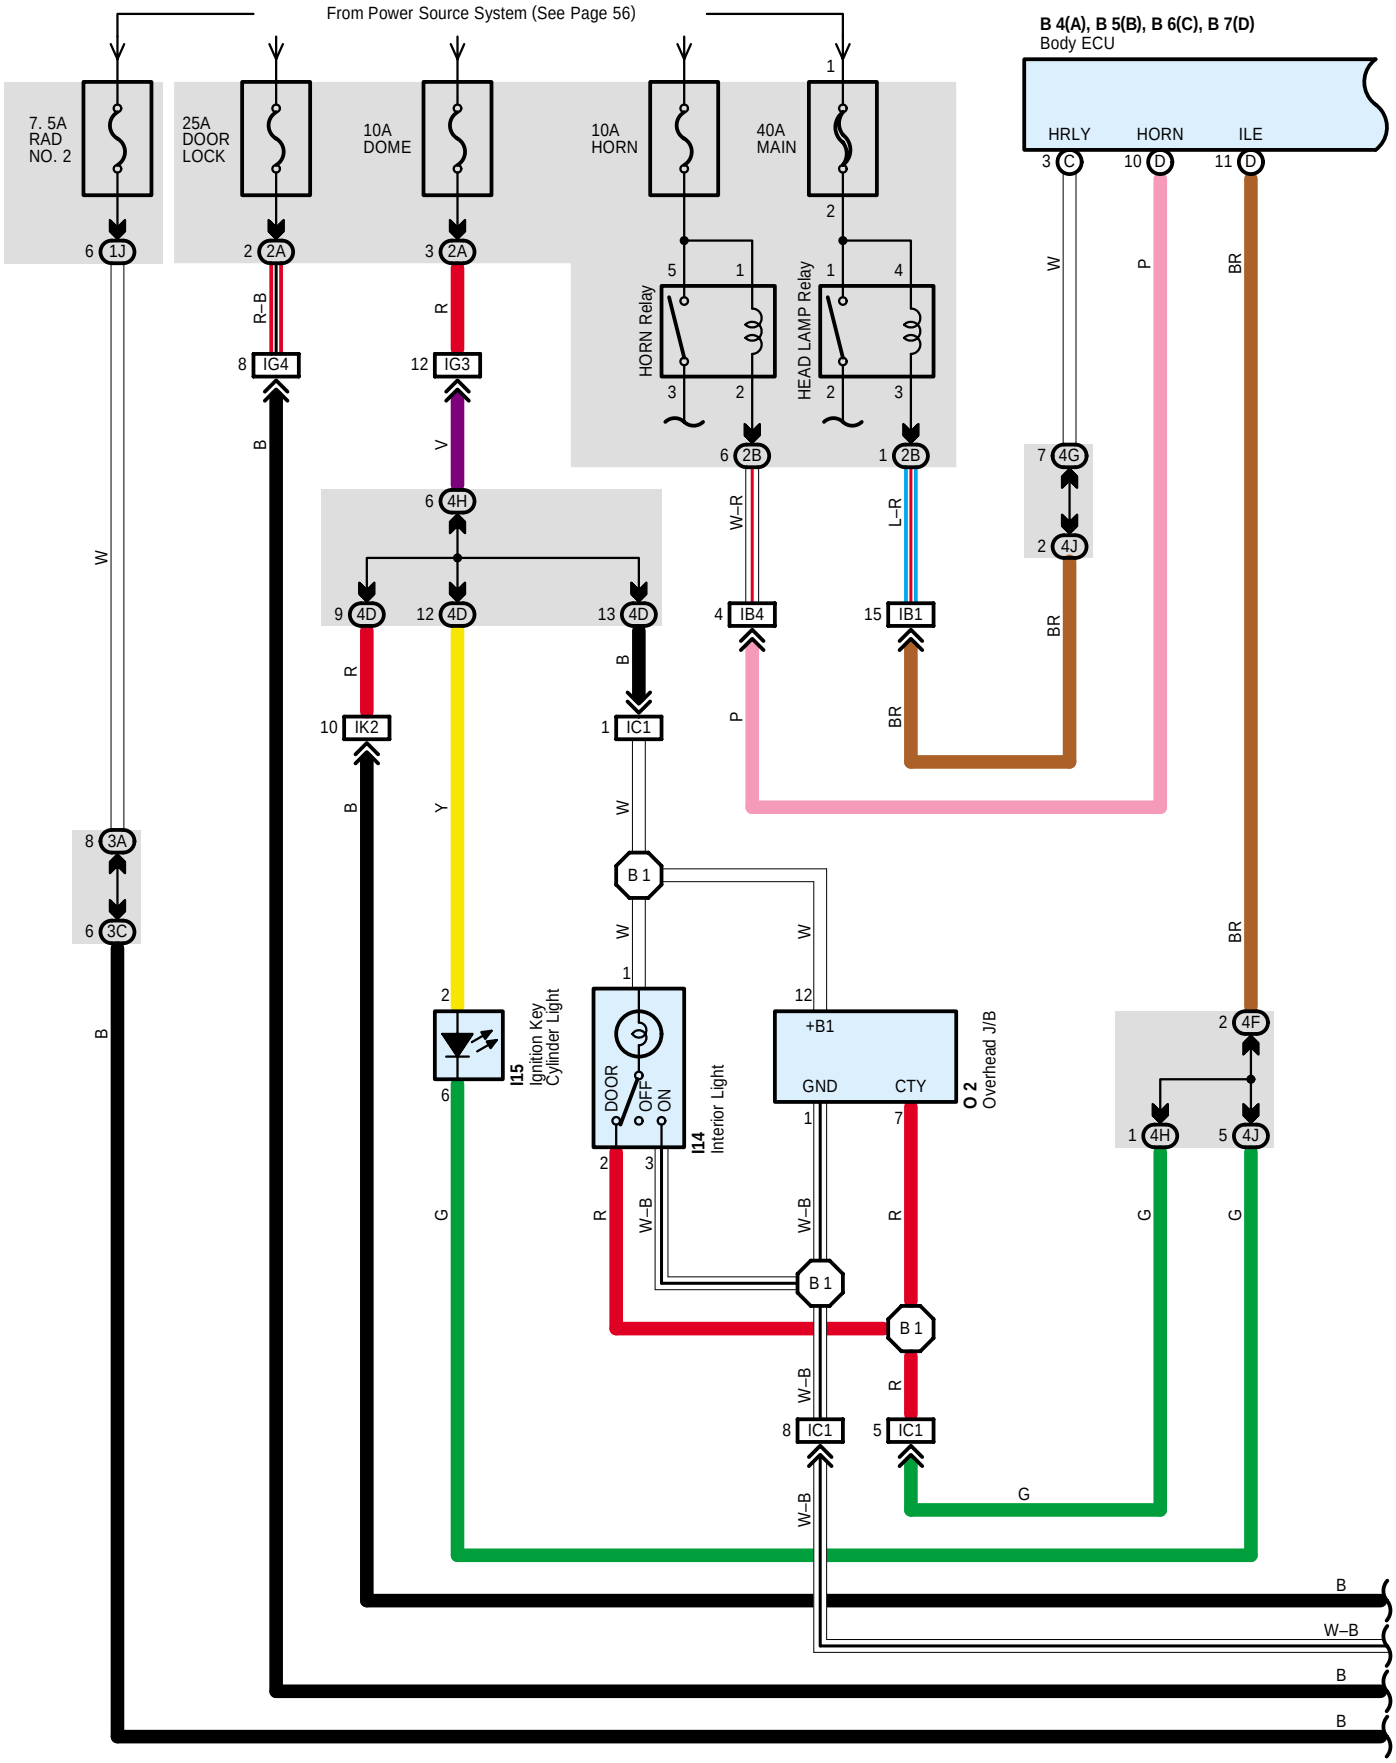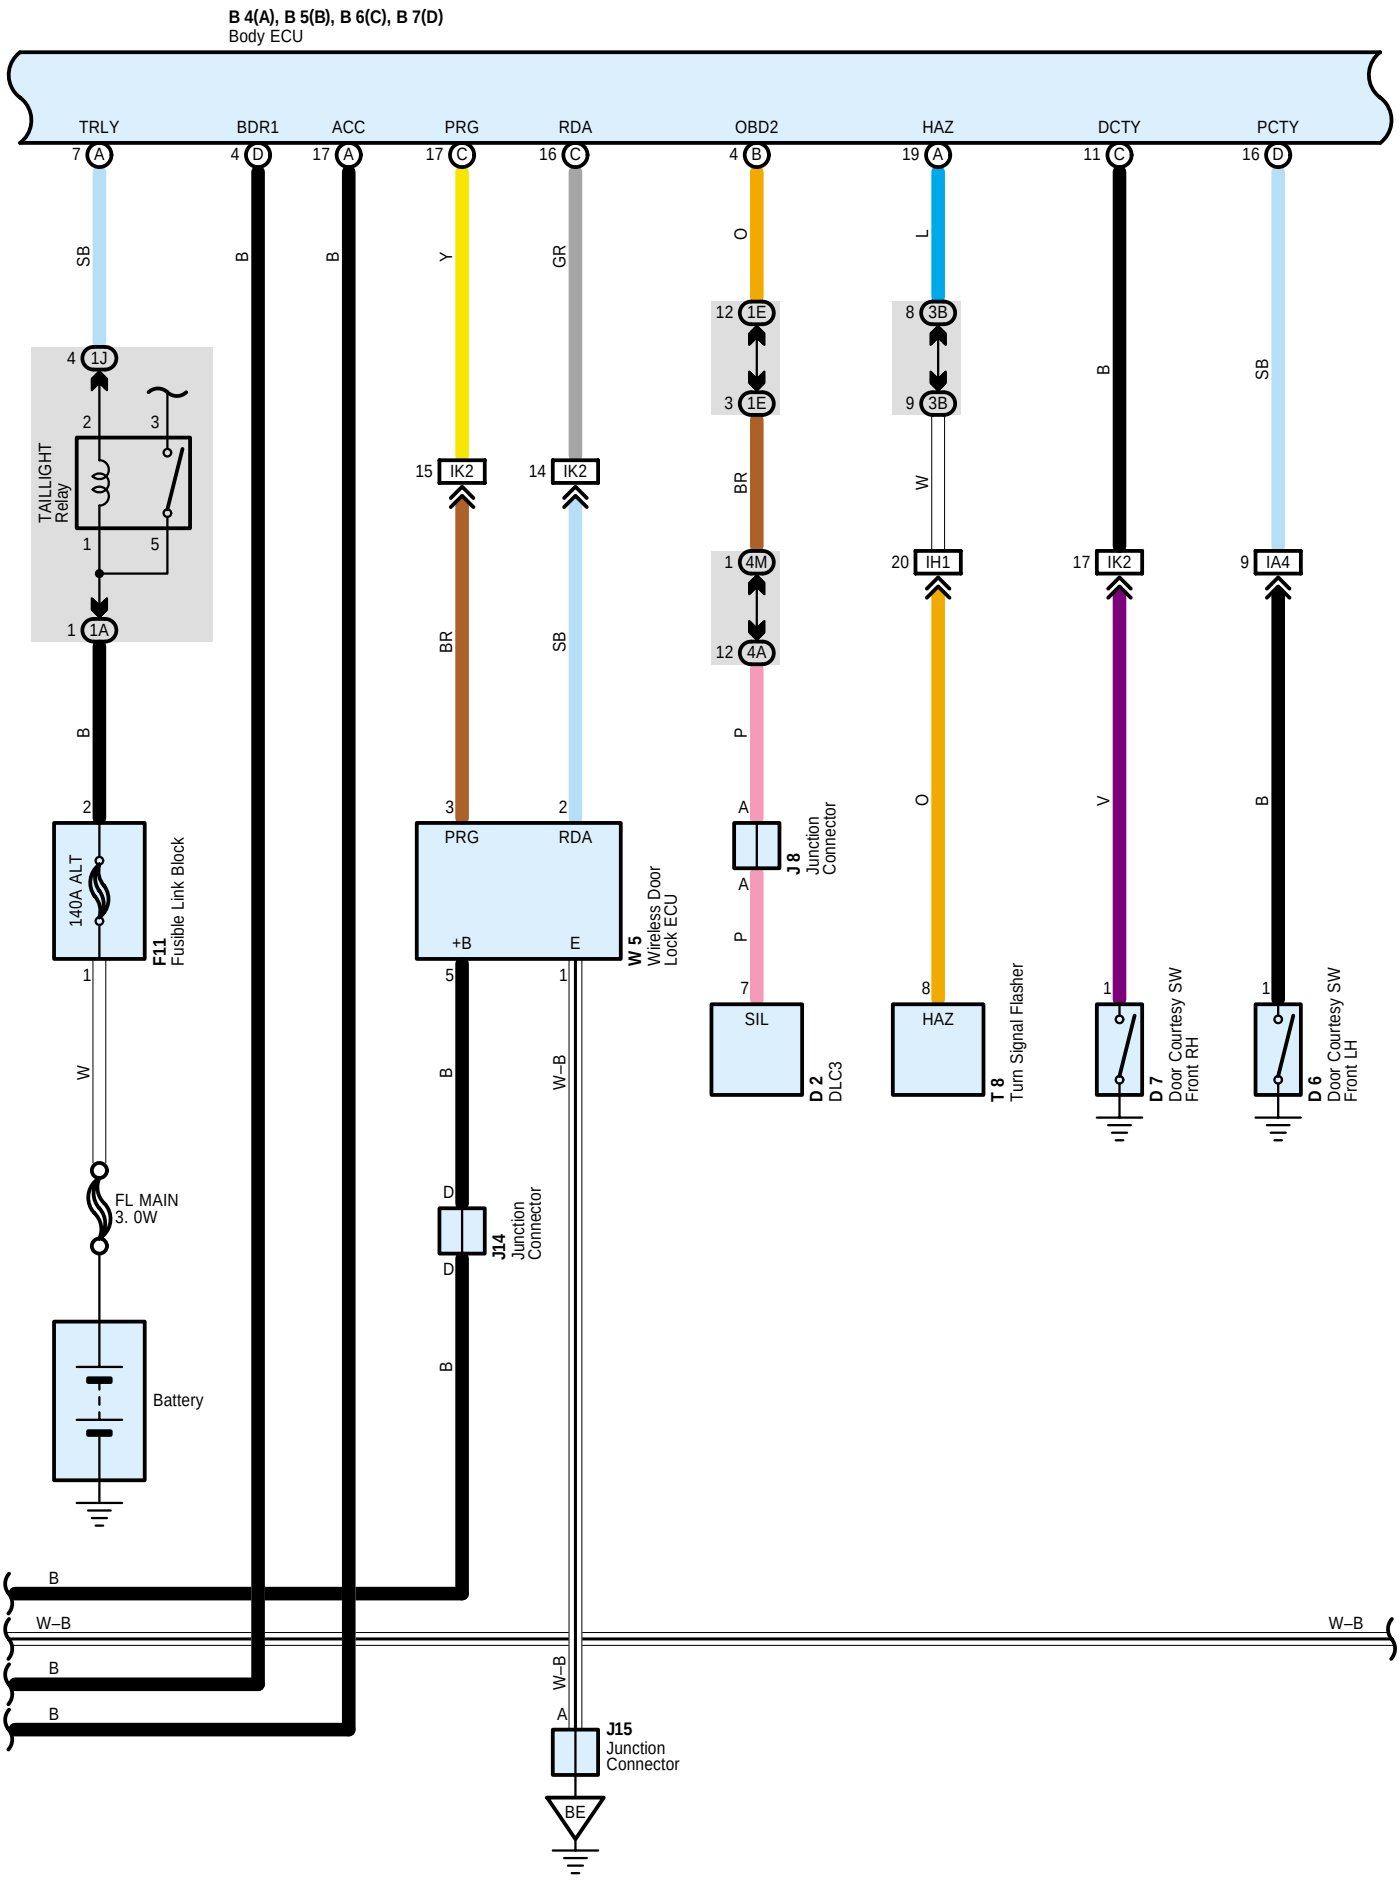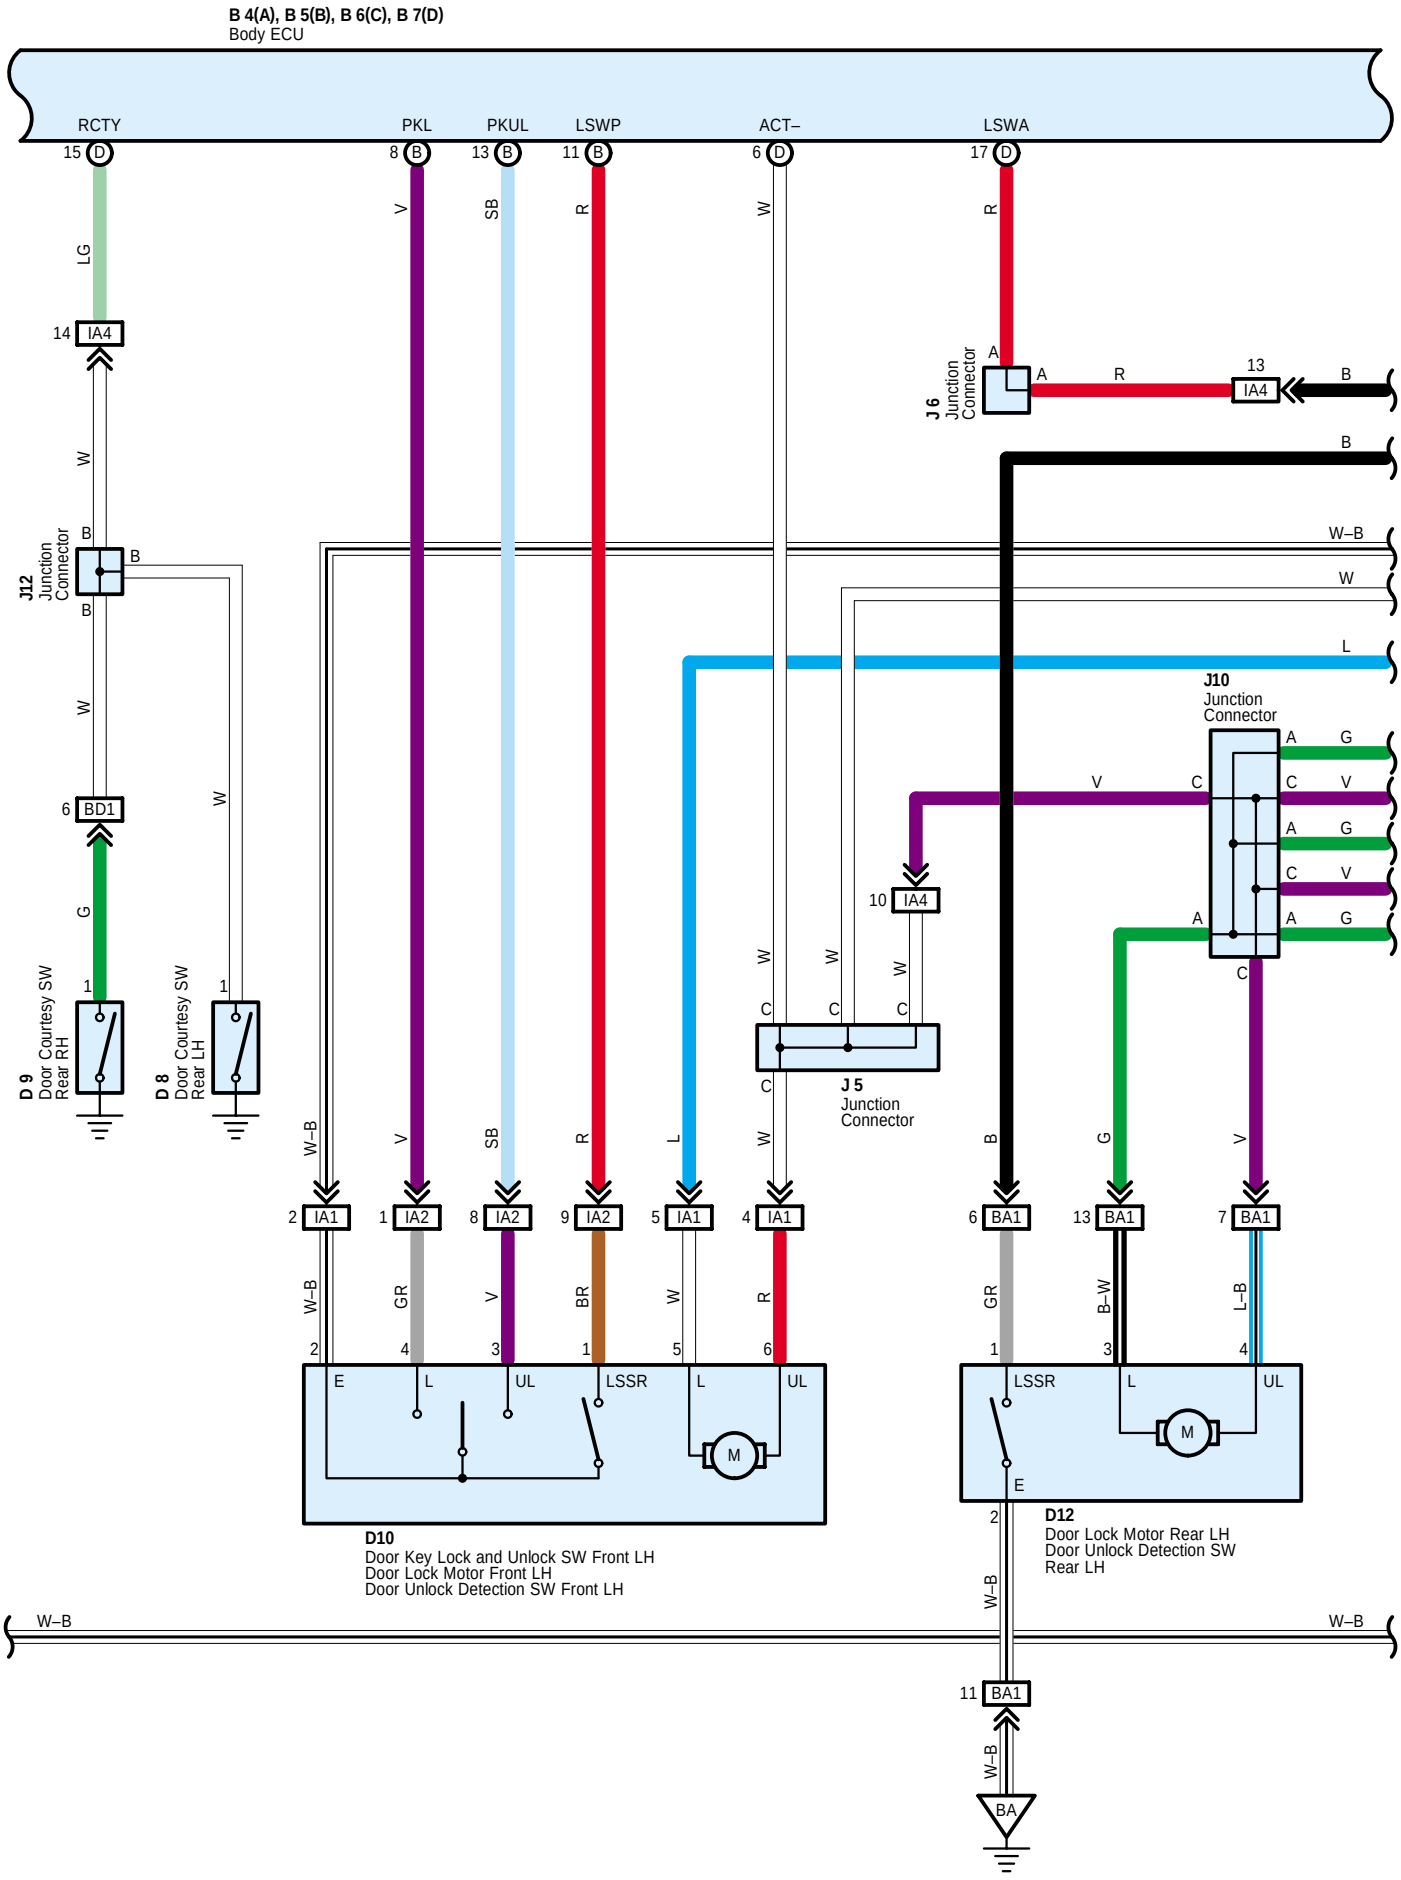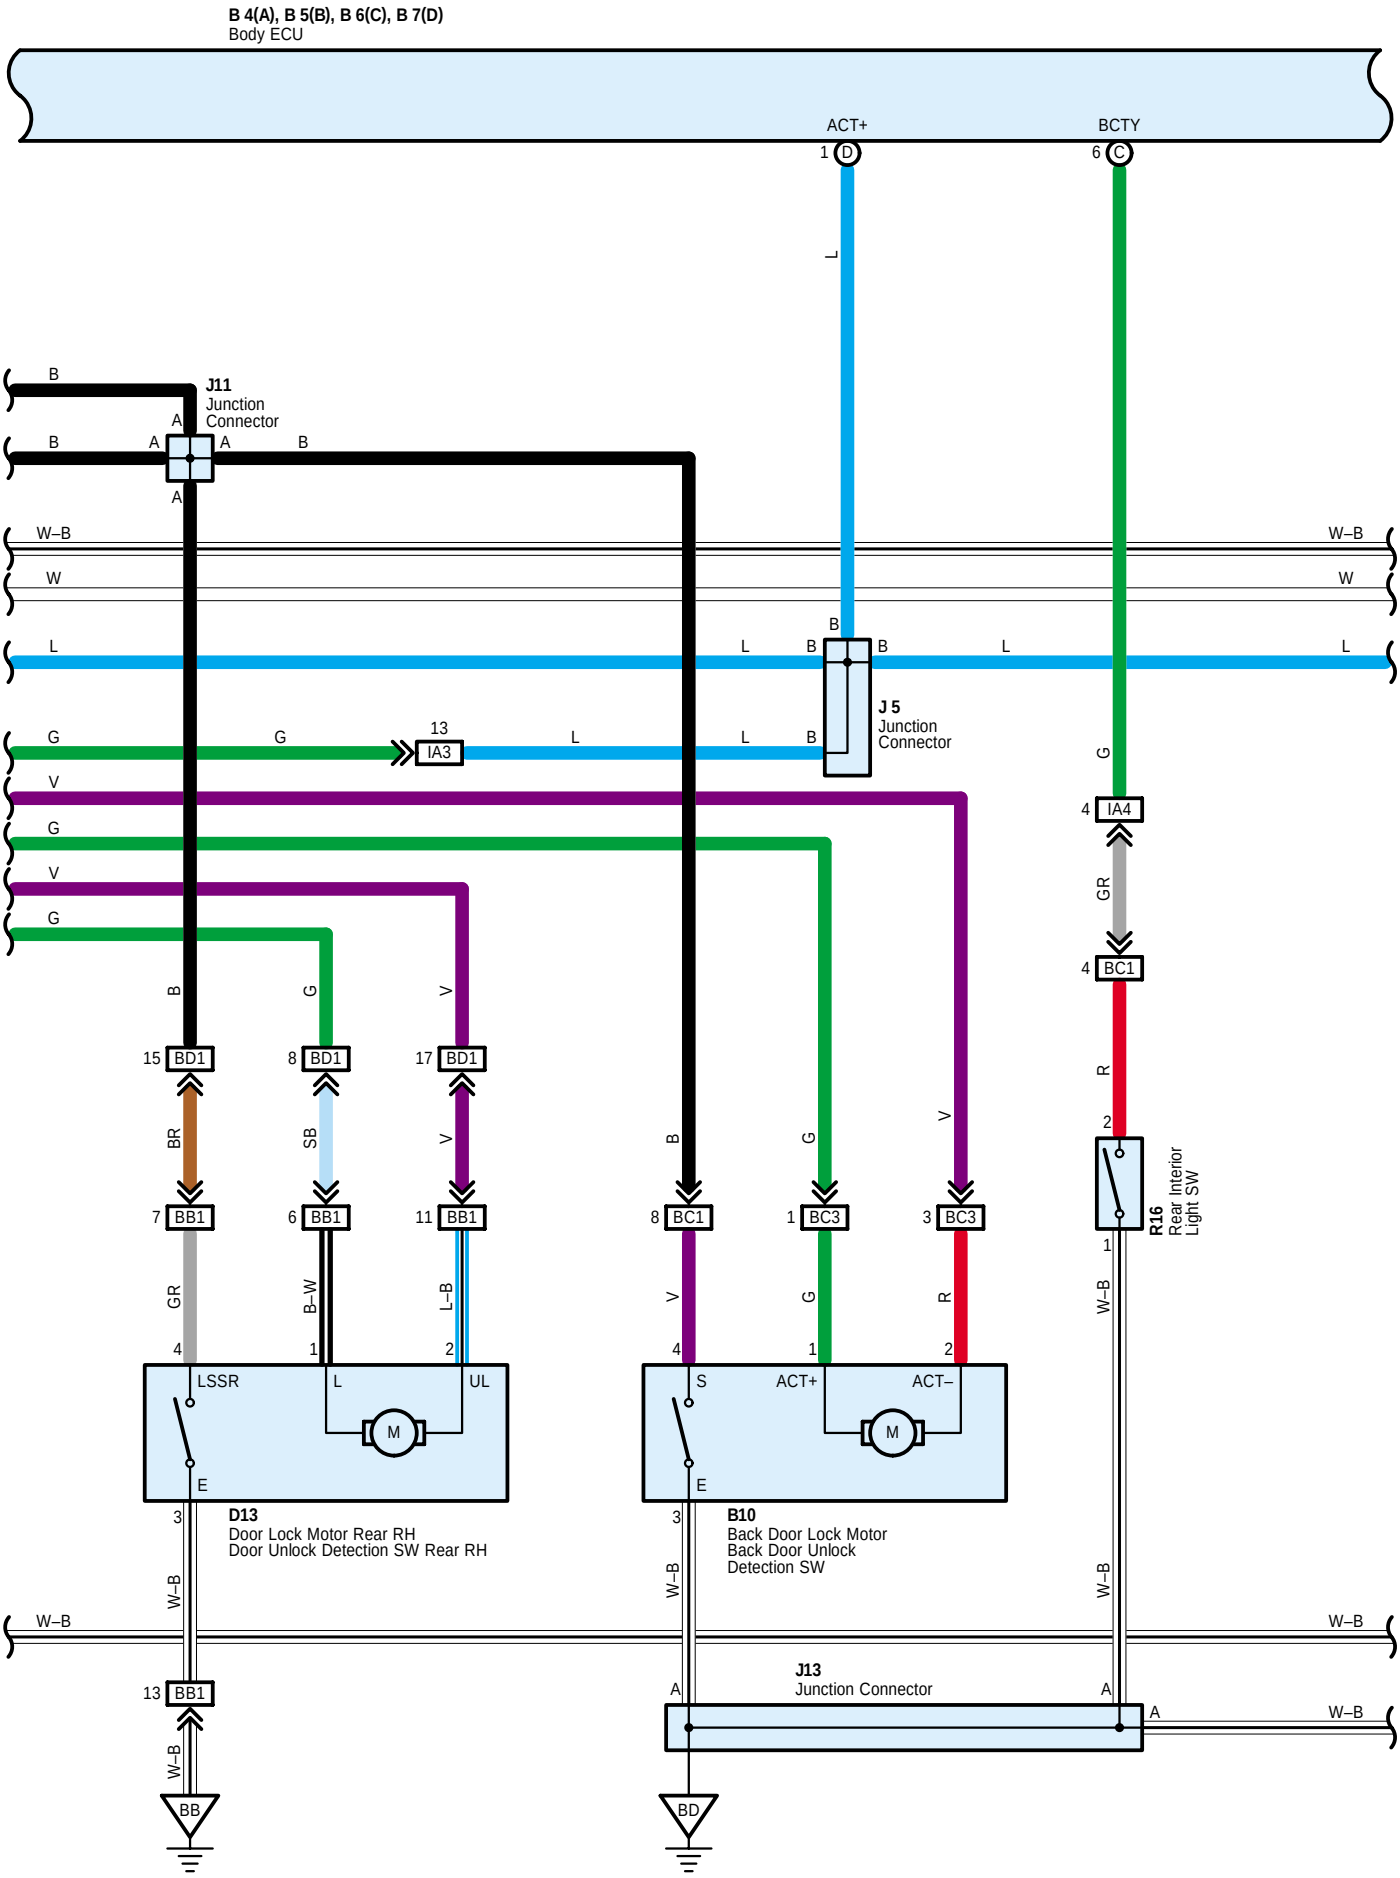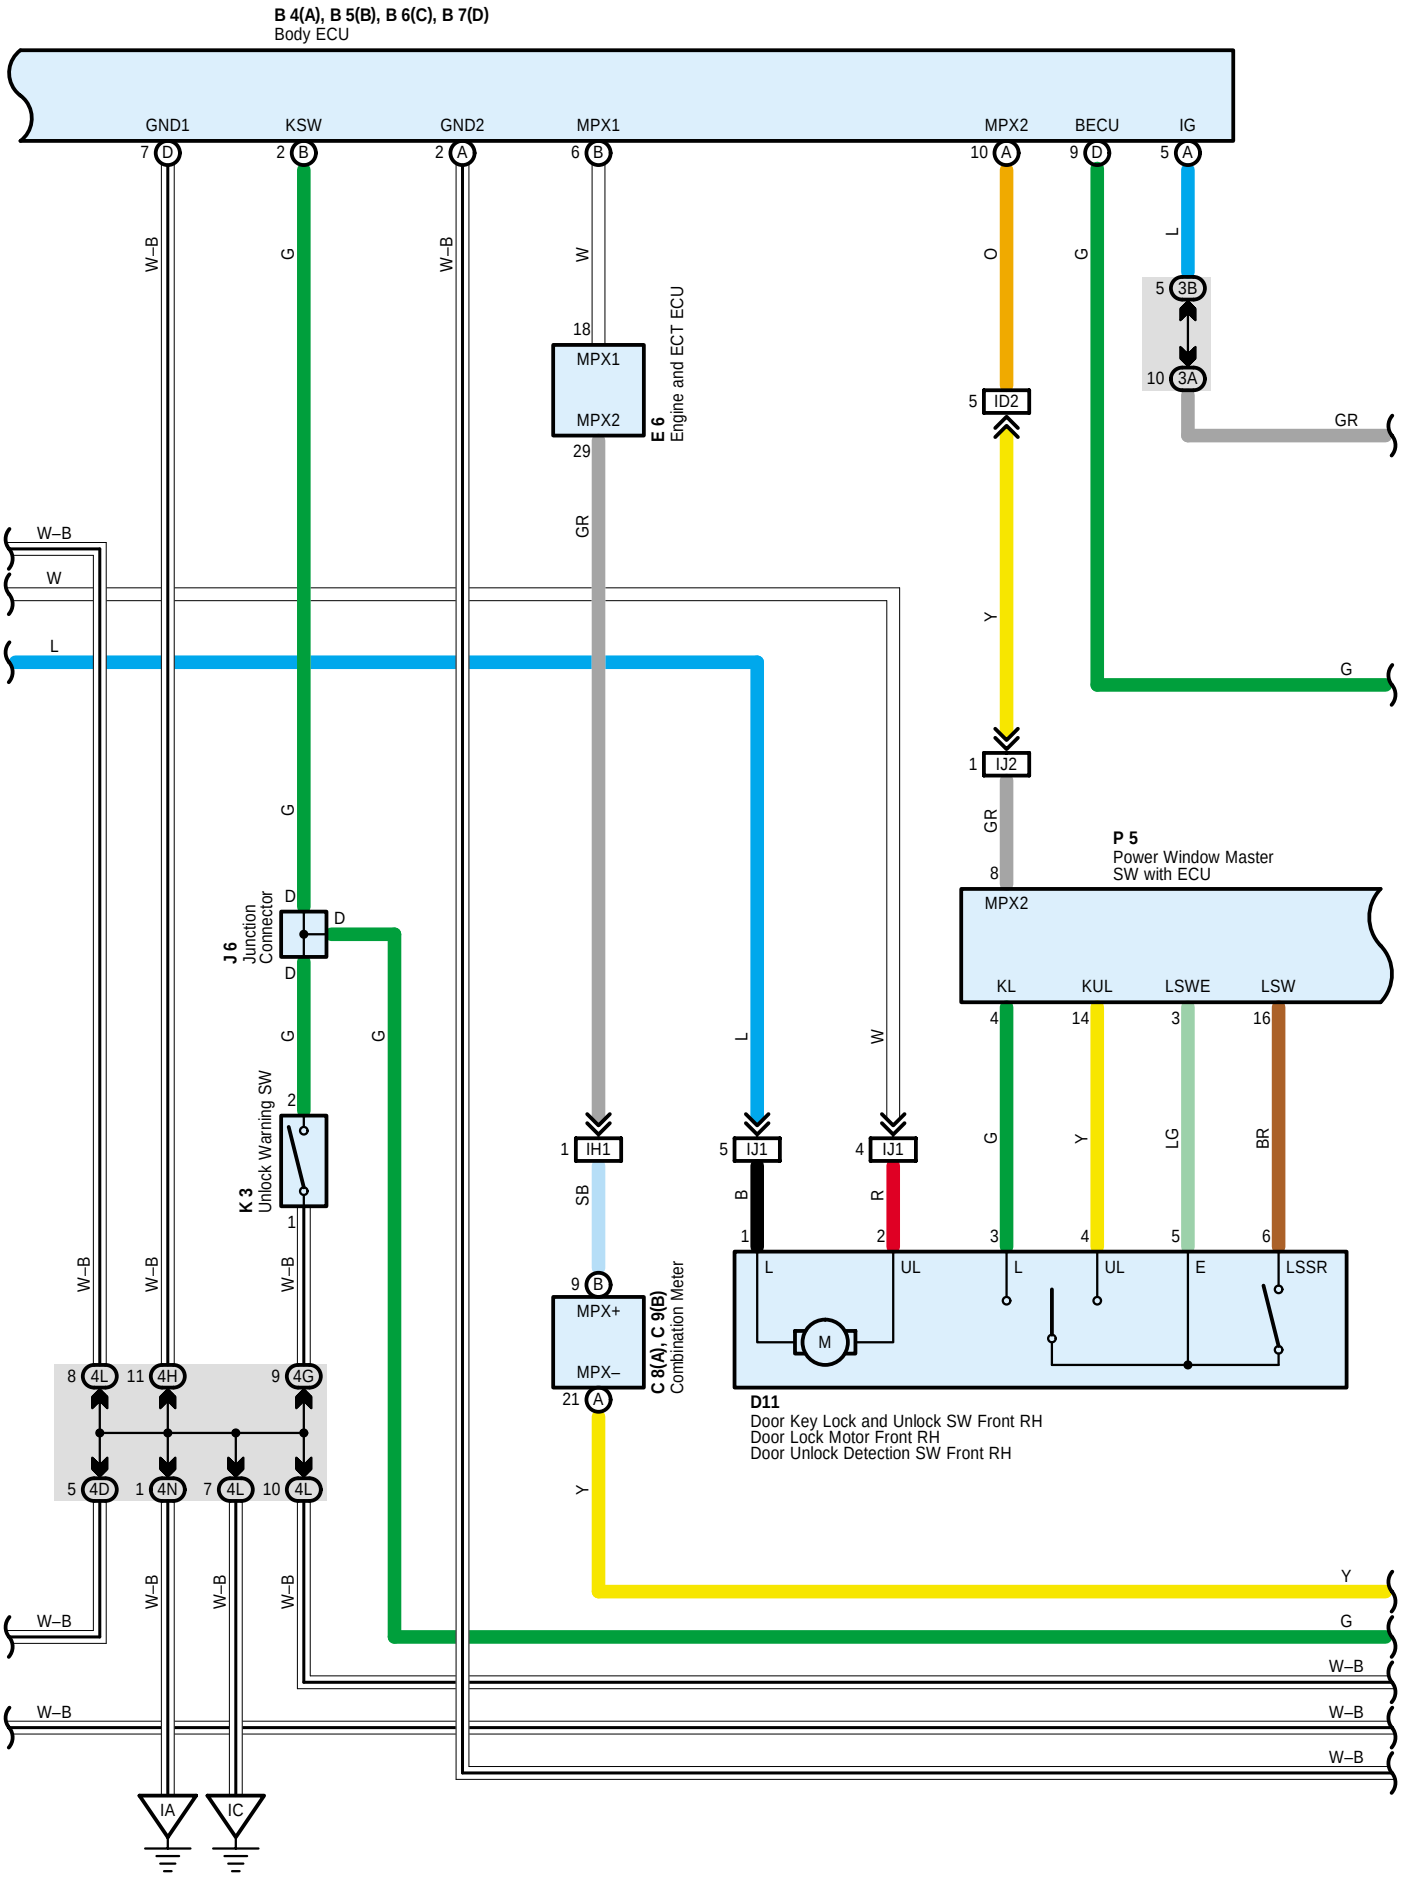




B 4(A), B 5(B), B 6(C), B 7(D)
Body ECU
TRLY
BDR1
ACC
PRG
RDA
OBD2
HAZ
DCTY
PCTY
TAILLIGHT Relay
140A ALT
F11 Fusible Link Block
FL MAIN 3. 0W
Battery
W 5 Wireless Door Lock ECU
J14 Junction Connector
J8 Junction Connector
D 2 DLC3
T 8 Turn Signal Flasher
D 7 Door Courtesy SW Front RH
D 6 Door Courtesy SW Front LH
J15 Junction Connector
BE
SIL
HAZ
IK2
IH1
IA4
1J
1A
1E
3B
4M
4A
+B
E
PRG
RDA
W–B


B 4(A), B 5(B), B 6(C), B 7(D)
Body ECU
RCTY
PKL
PKUL
LSWP
ACT–
LSWA
J6 Junction Connector
J12 Junction Connector
J10 Junction Connector
J5 Junction Connector
D 9 Door Courtesy SW Rear RH
D 8 Door Courtesy SW Rear LH
D10
Door Key Lock and Unlock SW Front LH
Door Lock Motor Front LH
Door Unlock Detection SW Front LH
D12
Door Lock Motor Rear LH
Door Unlock Detection SW Rear LH
W–B
BA


B 4(A), B 5(B), B 6(C), B 7(D)
Body ECU
ACT+
1 D
BCTY
6 C
L
J11
Junction
Connector
A
B
W–B
W
L
J 5
Junction
Connector
13
IA3
G
V
IA4
GR
BC1
R
2
R16
Rear Interior
Light SW
1
W–B
15 BD1
8 BD1
17 BD1
BR
SB
V
7 BB1
6 BB1
11 BB1
GR
B–W
L–B
4
1
2
LSSR
L
UL
M
E
3
D13
Door Lock Motor Rear RH
Door Unlock Detection SW Rear RH
8 BC1
1 BC3
3 BC3
S
ACT+
ACT–
B10
Back Door Lock Motor
Back Door Unlock
Detection SW
J13
Junction Connector
13 BB1
BB
BD


B 4(A), B 5(B), B 6(C), B 7(D)
Body ECU
GND1
KSW
GND2
MPX1
MPX2
BECU
IG
E 6
Engine and ECT ECU
J 6
Junction Connector
K 3
Unlock Warning SW
P 5
Power Window Master SW with ECU
KL
KUL
LSWE
LSW
C 8(A), C 9(B)
Combination Meter
MPX+
MPX–
D11
Door Key Lock and Unlock SW Front RH
Door Lock Motor Front RH
Door Unlock Detection SW Front RH
UL
LSSR
IA
IC

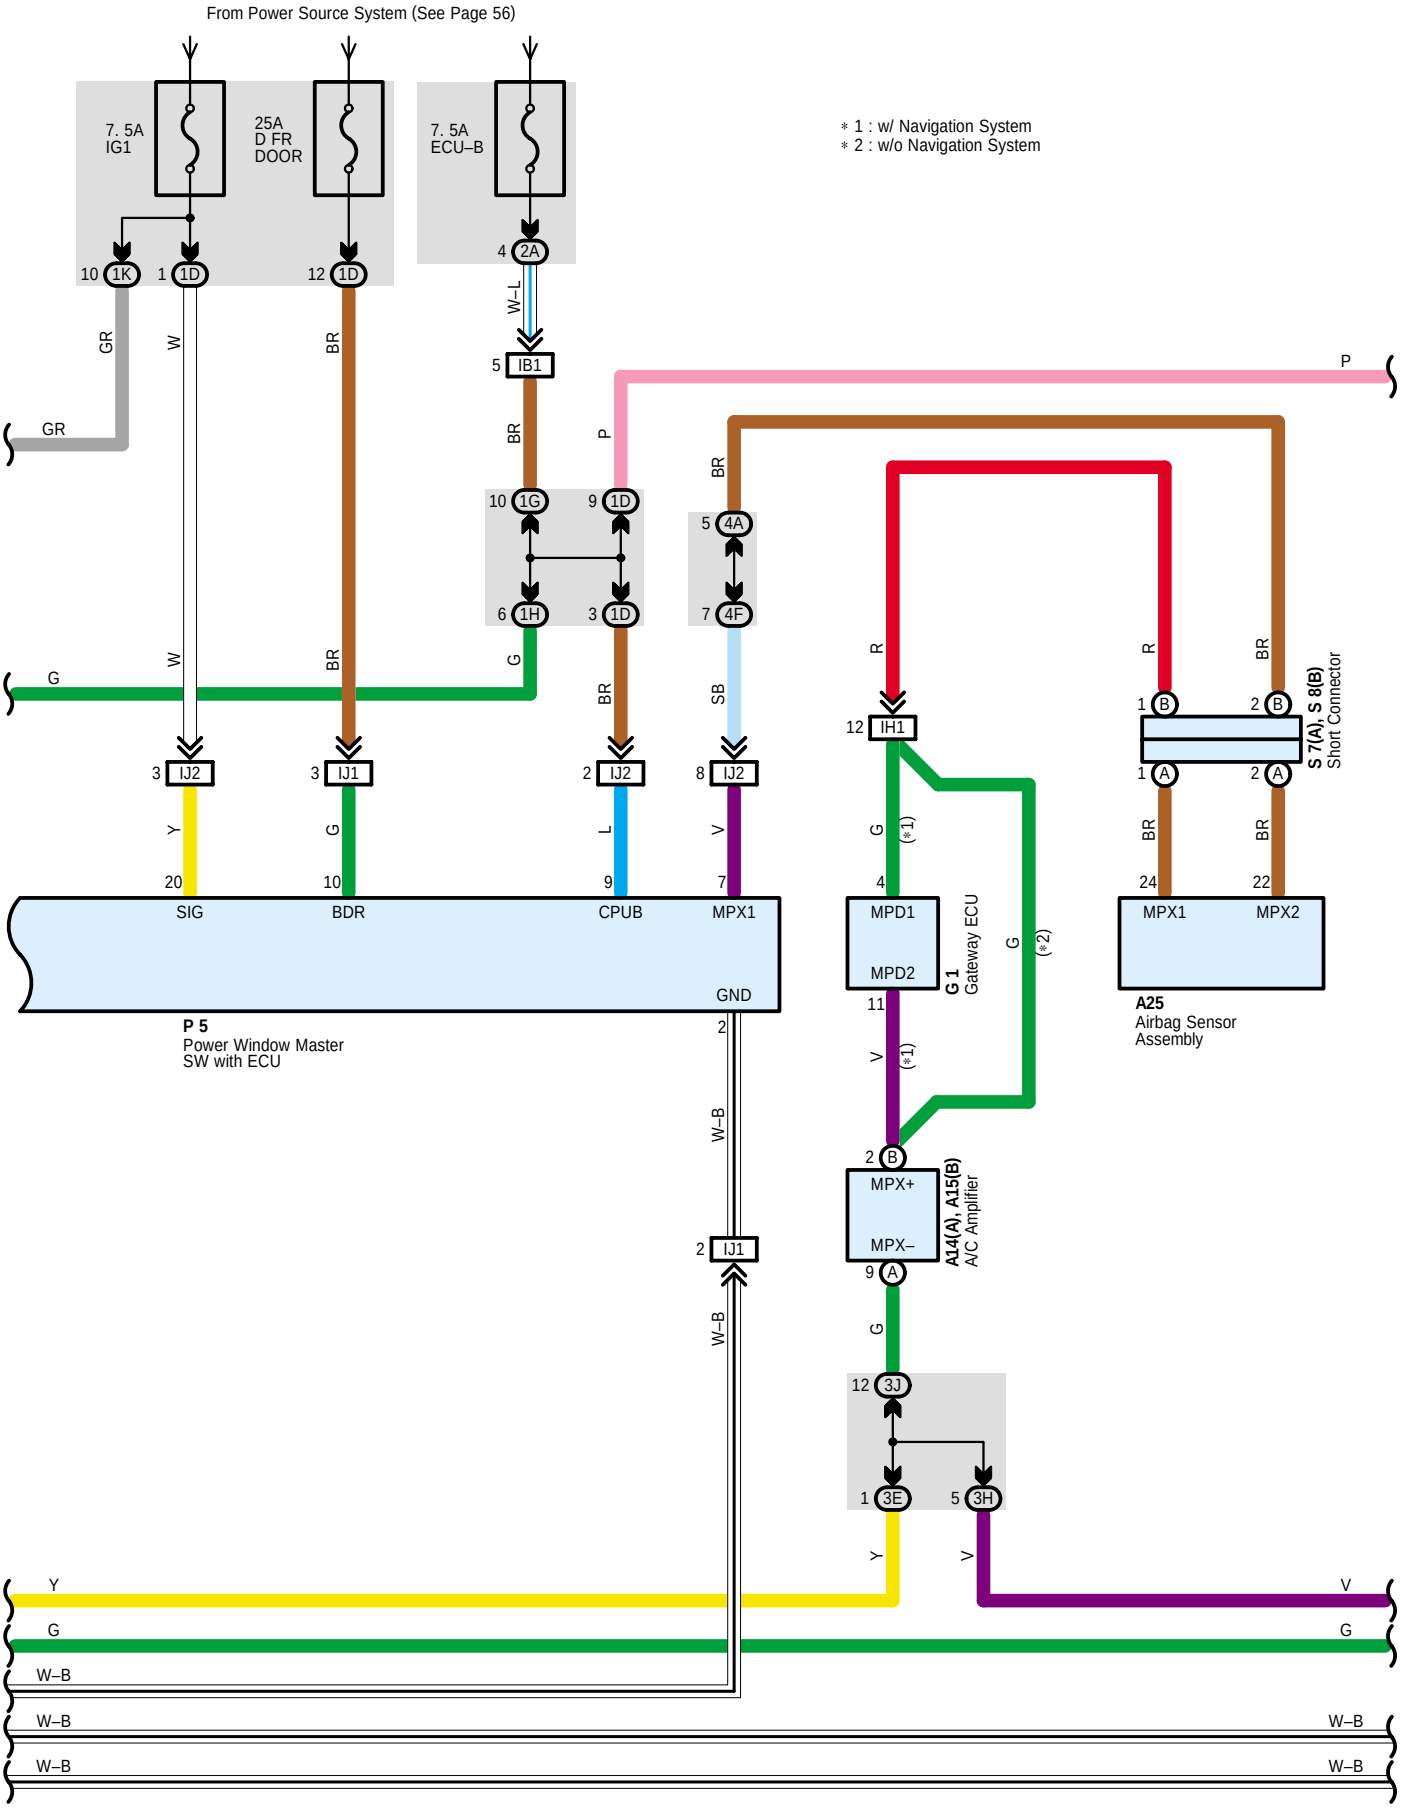
From Power Source System (See Page 56)
7. 5A
IG1
25A
D FR
DOOR
7. 5A
ECU–B
* 1 : w/ Navigation System
* 2 : w/o Navigation System
10 1K
1 1D
12 1D
4 2A
W–L
5 IB1
GR
W
BR
P
10 1G
9 1D
6 1H
3 1D
5 4A
7 4F
G
SB
R
12 IH1
1 B
2 B
S 7(A), S 8(B)
Short Connector
1 A
2 A
3 IJ2
3 IJ1
2 IJ2
8 IJ2
Y
L
V
20
10
9
7
SIG
BDR
CPUB
MPX1
GND
P 5
Power Window Master
SW with ECU
2
W–B
2 IJ1
4
MPD1
MPD2
11
G 1
Gateway ECU
(*1)
(*2)
24
22
MPX1
MPX2
A25
Airbag Sensor
Assembly
2 B
MPX+
MPX–
9 A
A14(A), A15(B)
A/C Amplifier
12 3J
1 3E
5 3H
Y
G
W–B
V

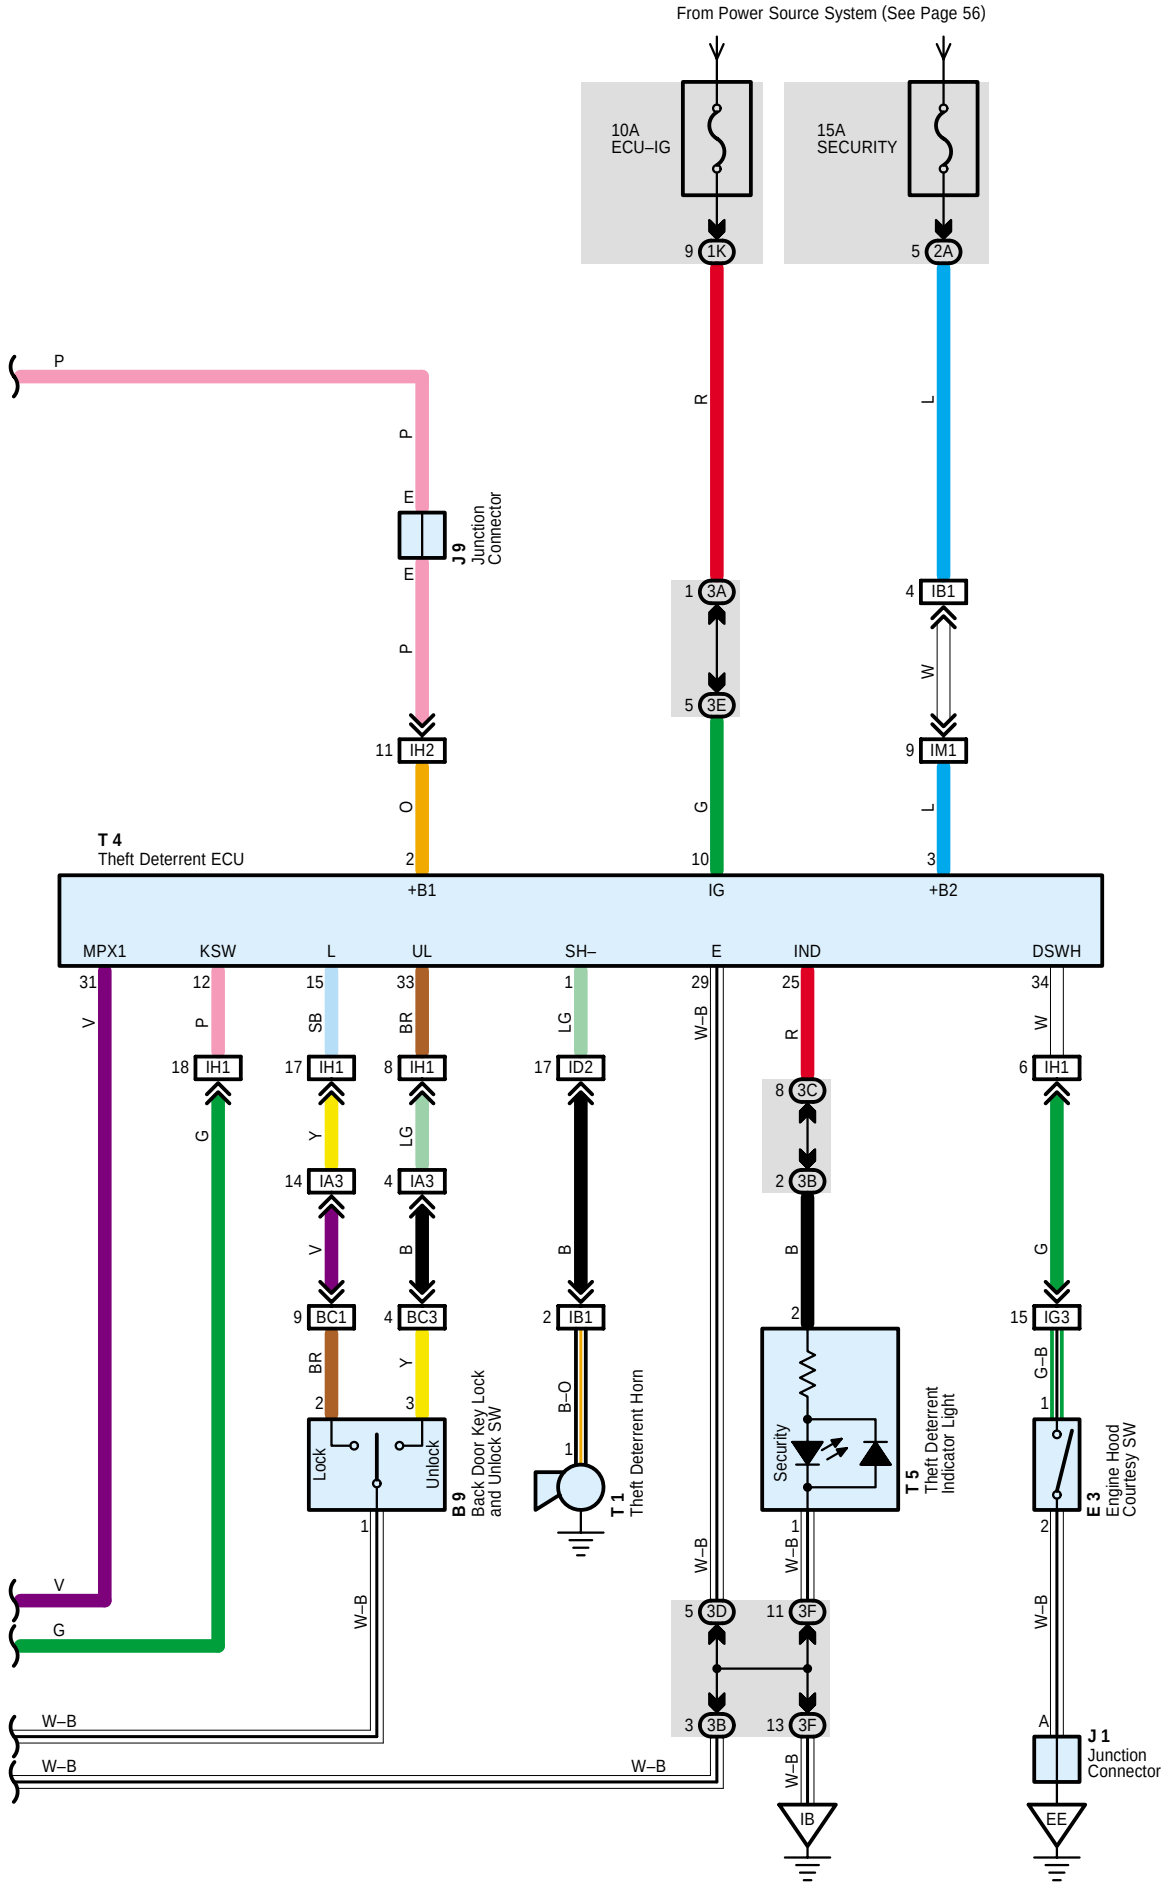
From Power Source System (See Page 56)
10A
ECU–IG
15A
SECURITY
9 1K
5 2A
P
R
L
P
E
J9
Junction
Connector
E
P
1 3A
4 IB1
5 3E
W
11 IH2
9 IM1
O
G
L
T4
Theft Deterrent ECU
2
10
3
+B1
IG
+B2
MPX1
KSW
L
UL
SH–
E
IND
DSWH
31
12
15
33
1
29
25
34
V
P
SB
BR
LG
W–B
R
W
18 IH1
17 IH1
8 IH1
17 ID2
8 3C
6 IH1
G
Y
LG
B
2 3B
G
14 IA3
4 IA3
B
2
15 IG3
V
B
9 BC1
4 BC3
2 IB1
G–B
BR
Y
B–O
2
3
1
1
Lock
Unlock
B9
Back Door Key Lock
and Unlock SW
T1
Theft Deterrent Horn
Security
T5
Theft Deterrent
Indicator Light
E3
Engine Hood
Courtesy SW
W–B
W–B
W–B
W–B
W–B
5 3D
11 3F
3 3B
13 3F
A
J1
Junction
Connector
IB
EE
V
G
W–B
W–B
W–B