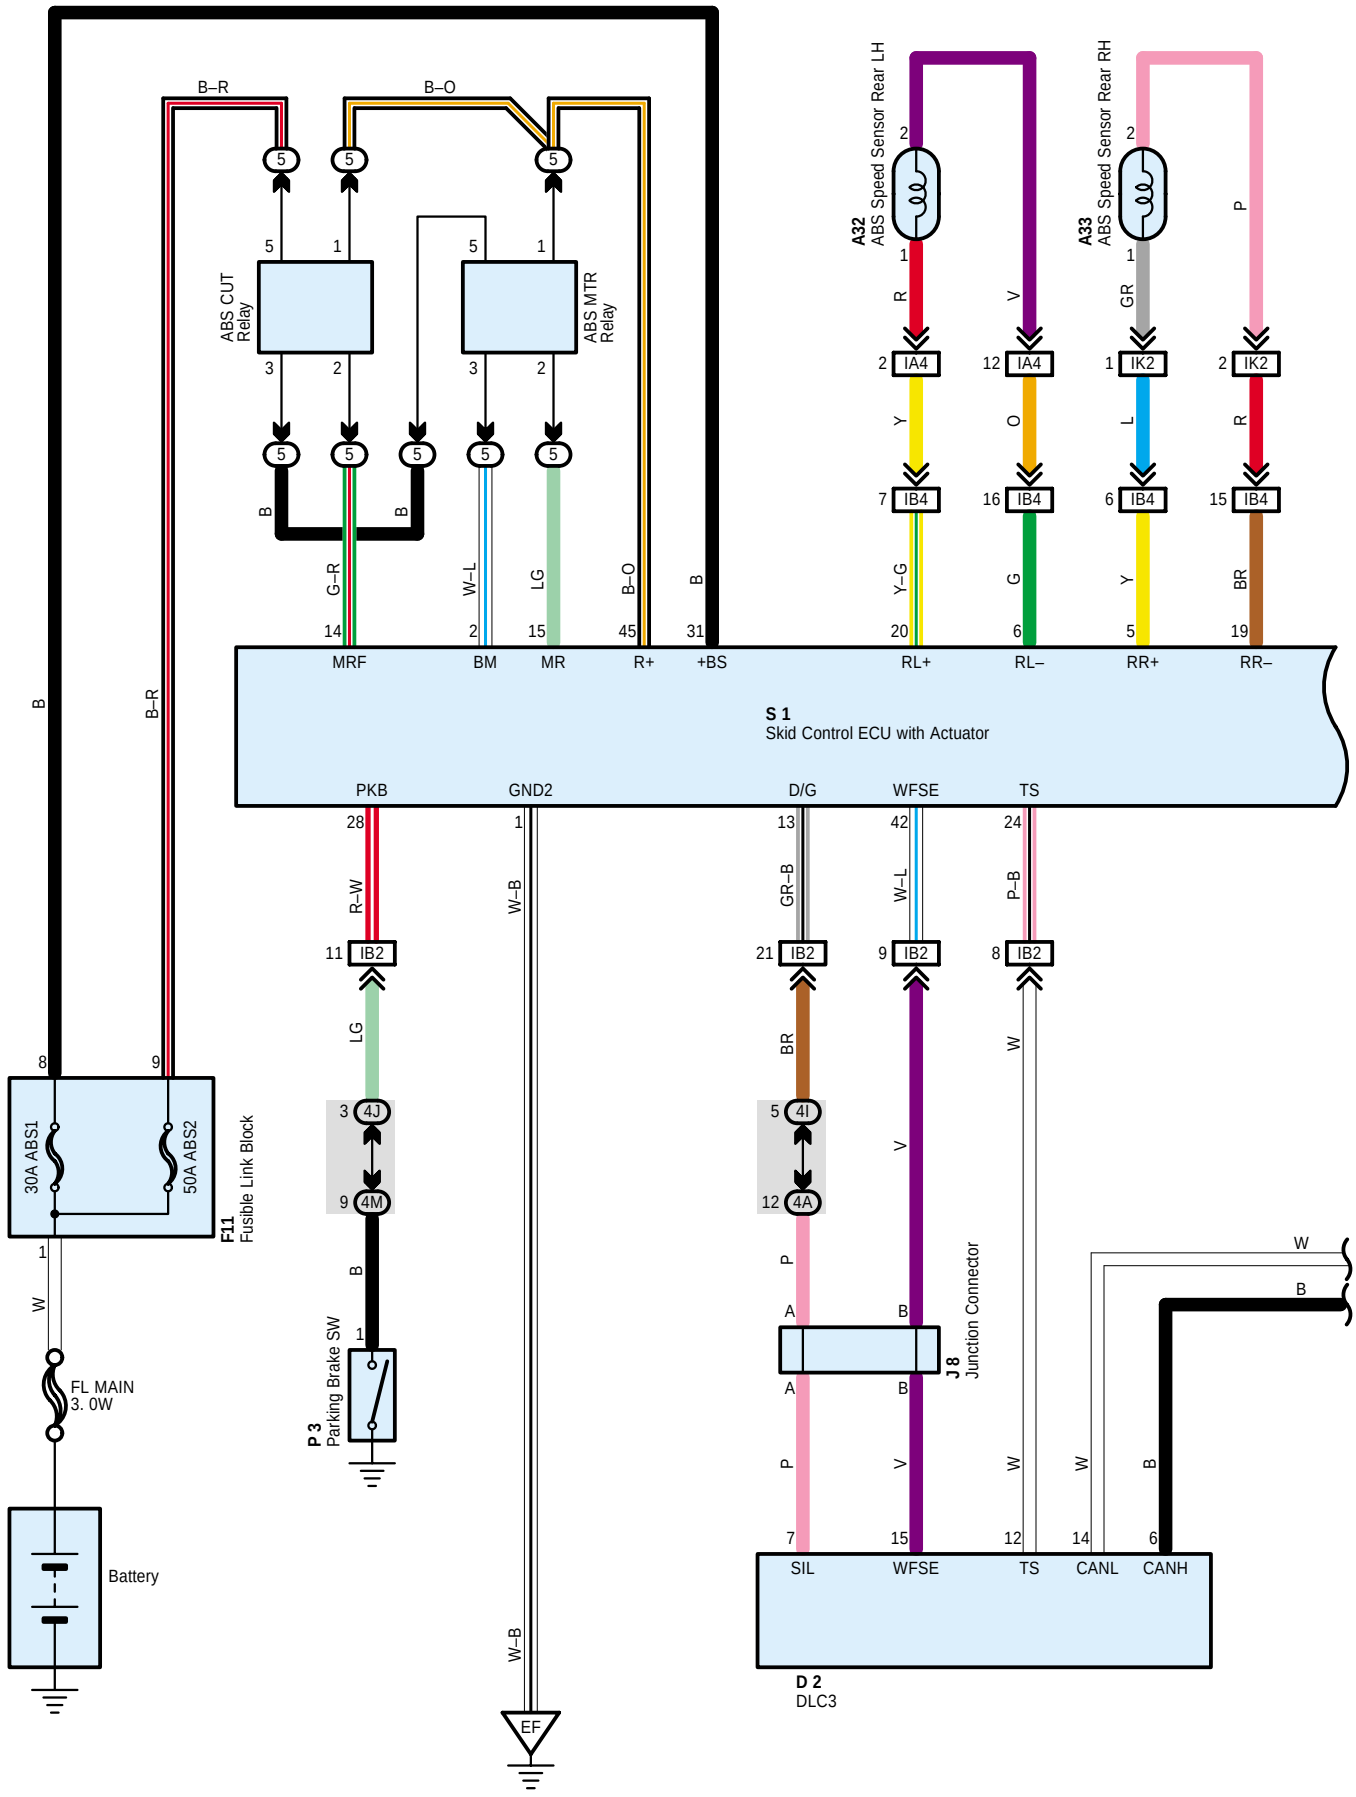
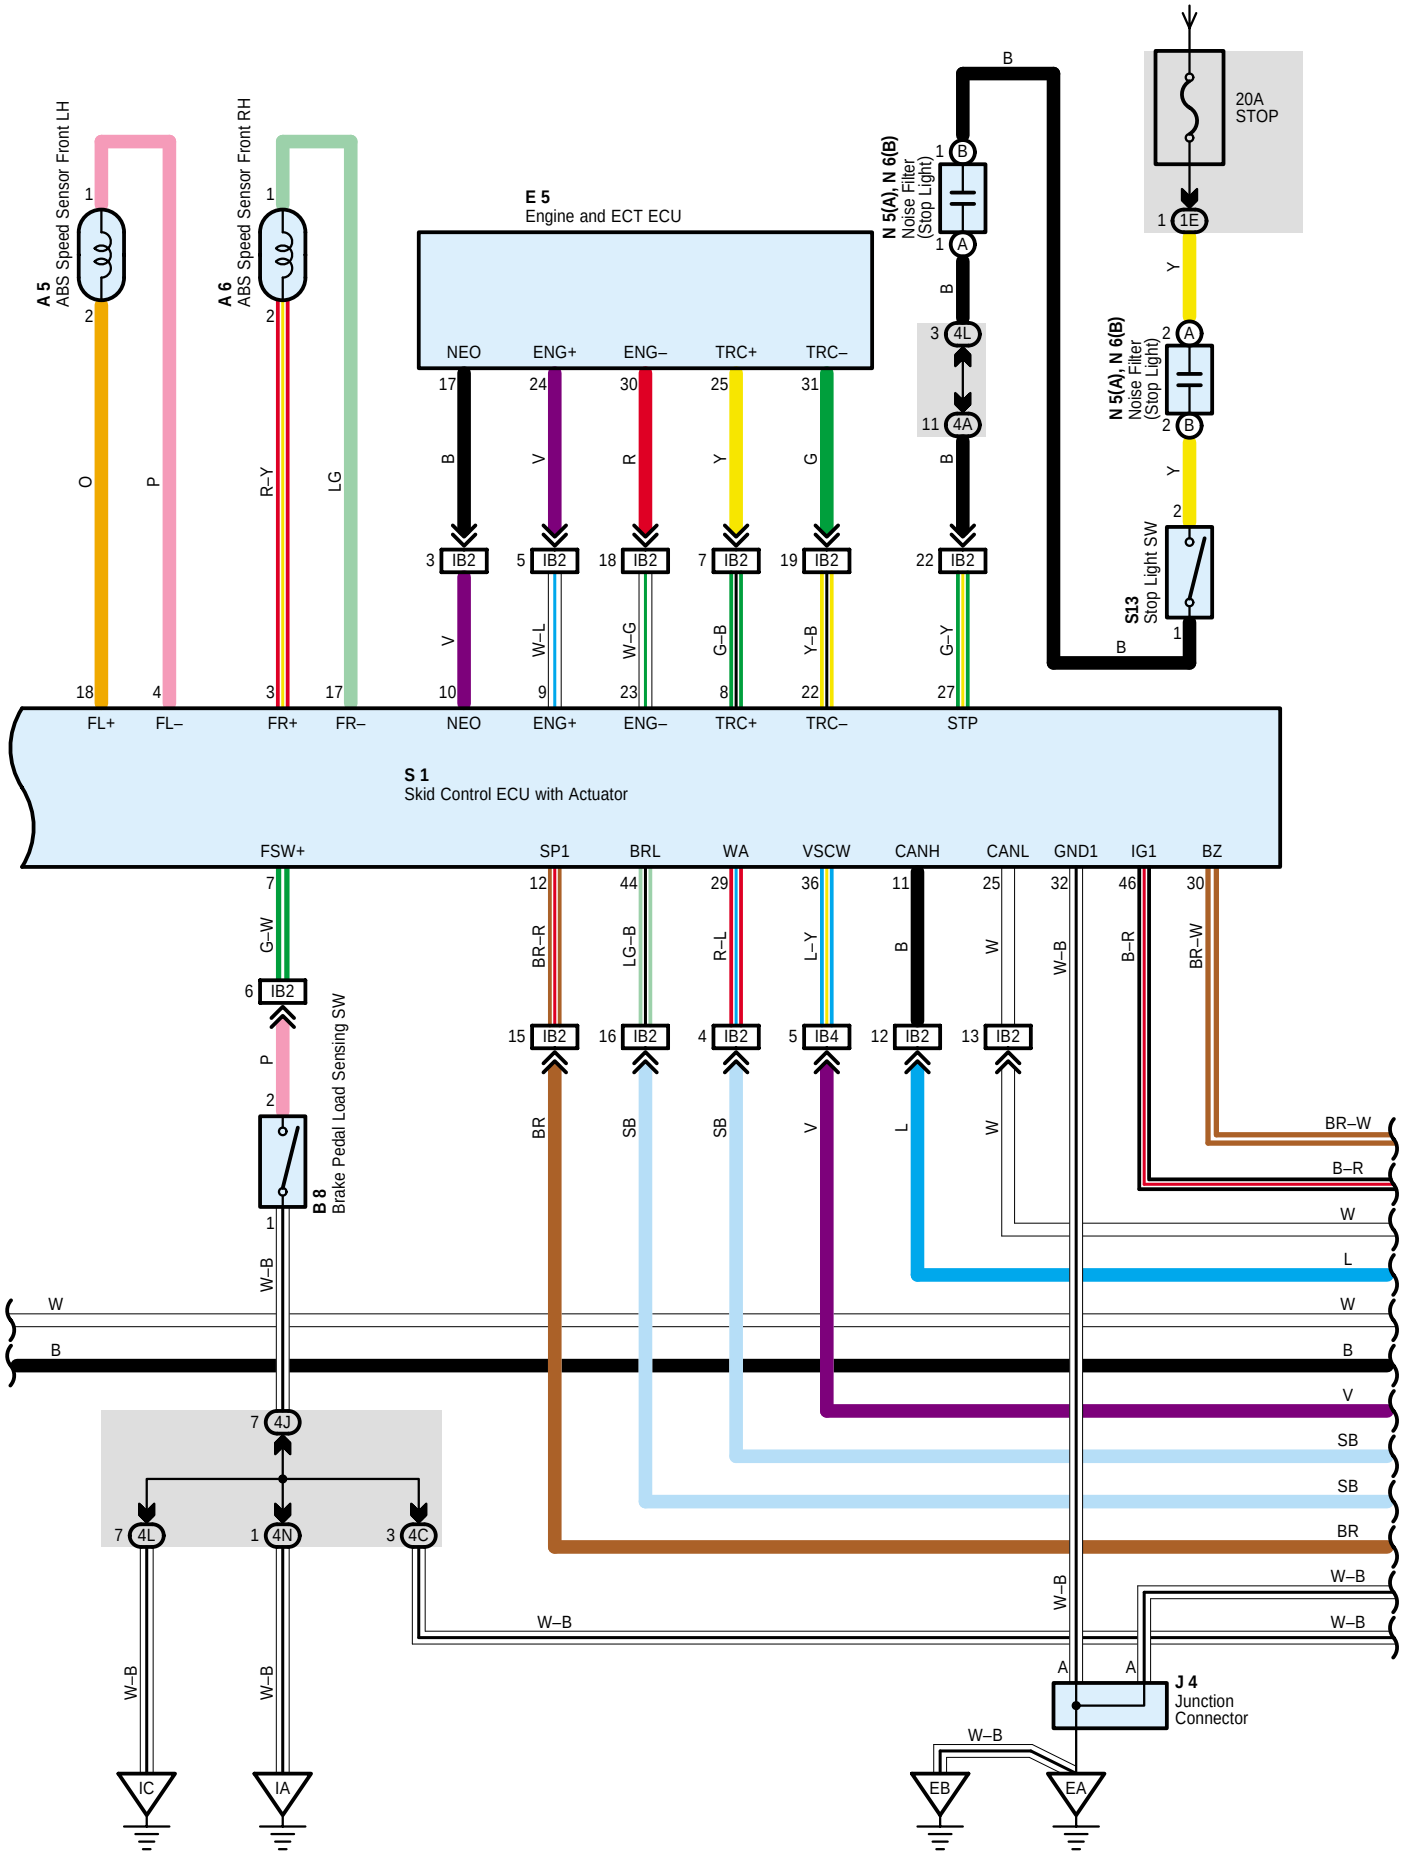
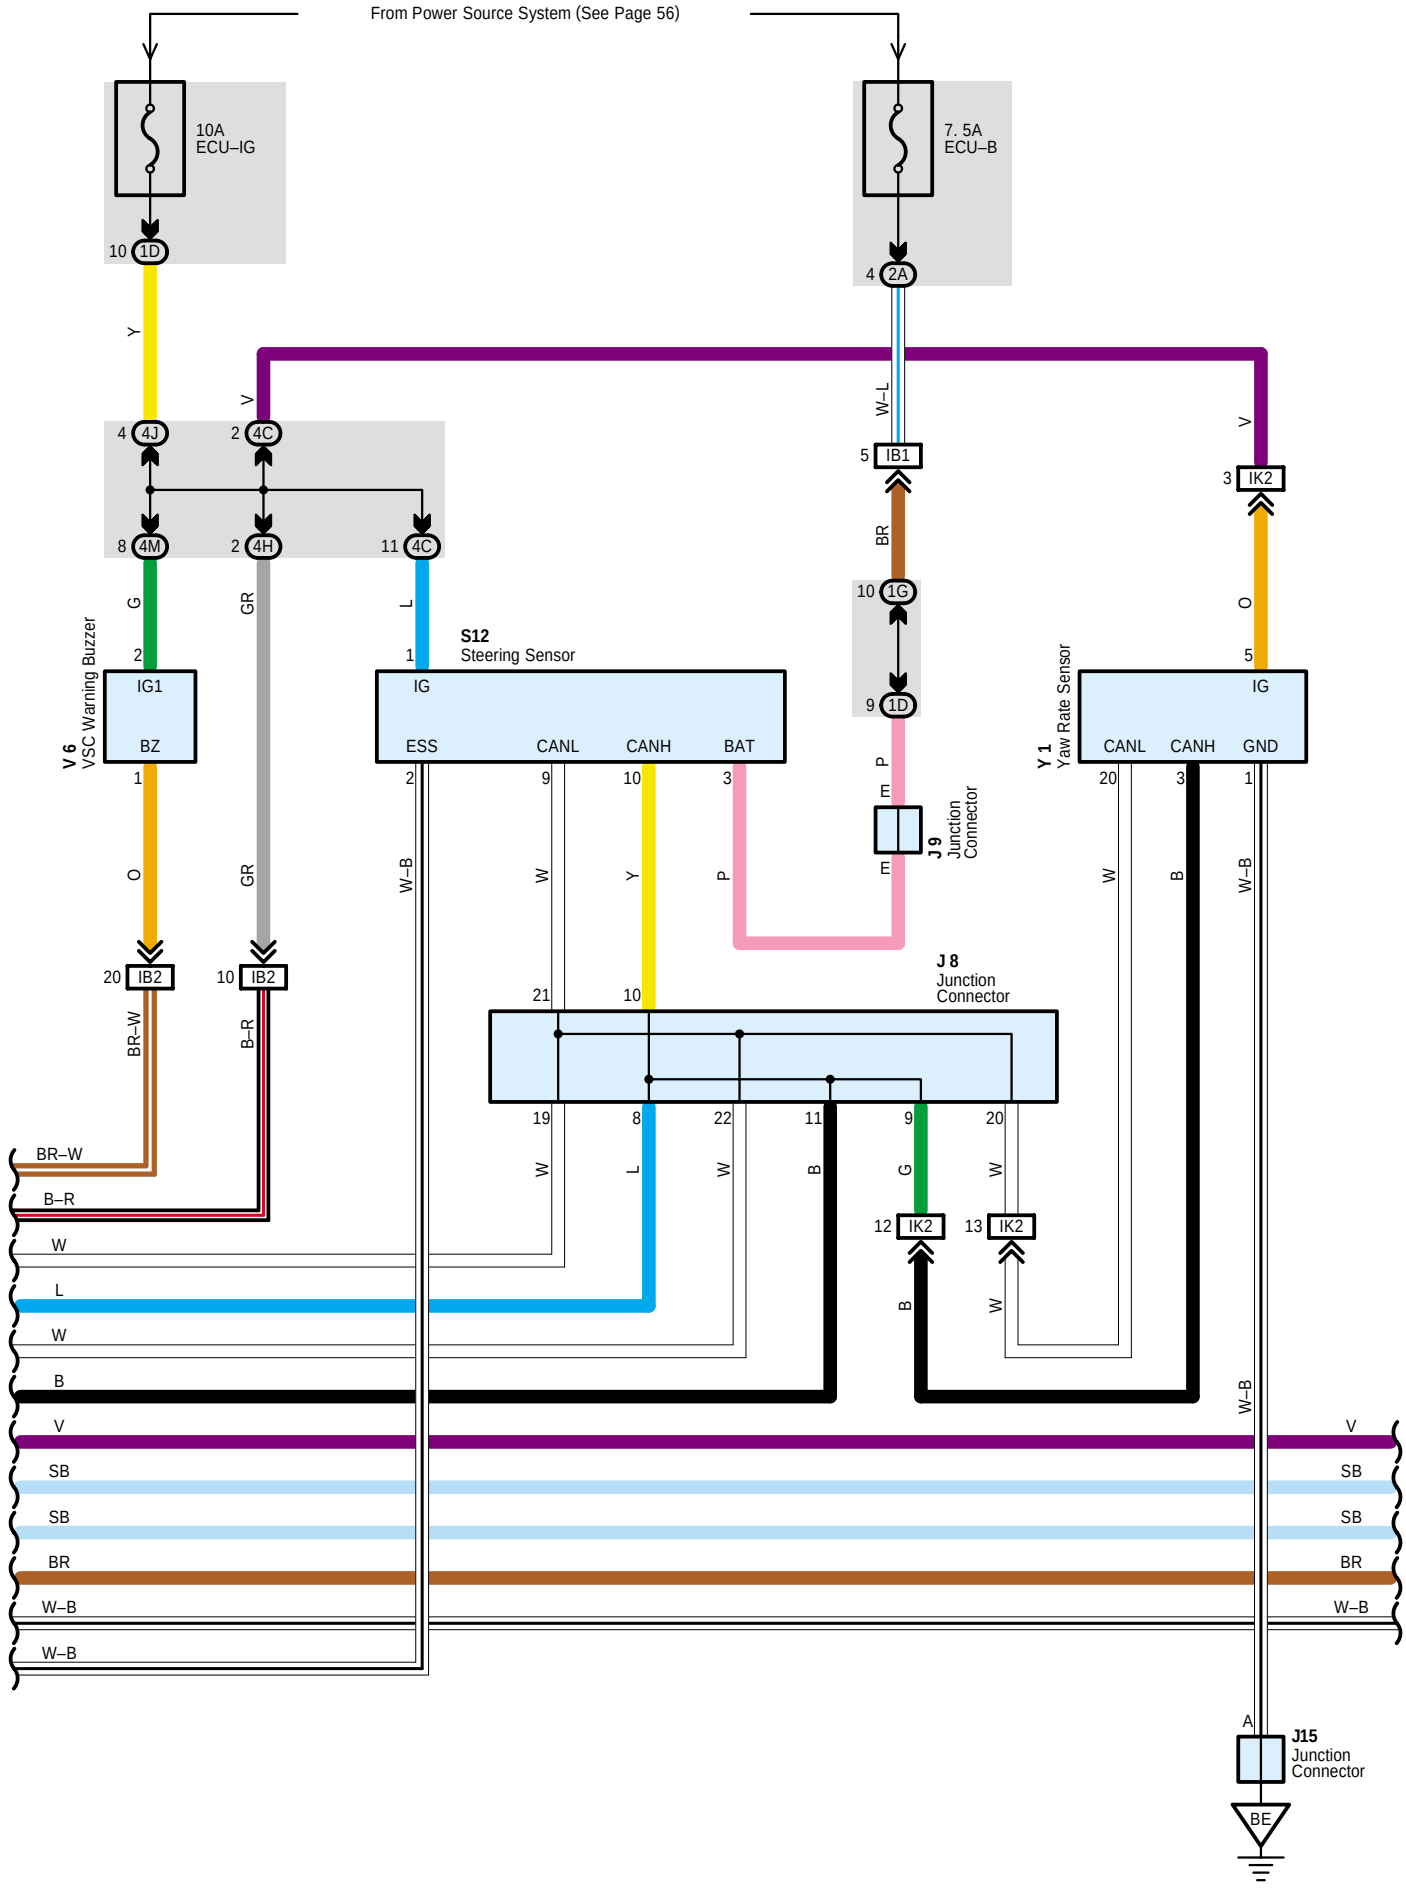
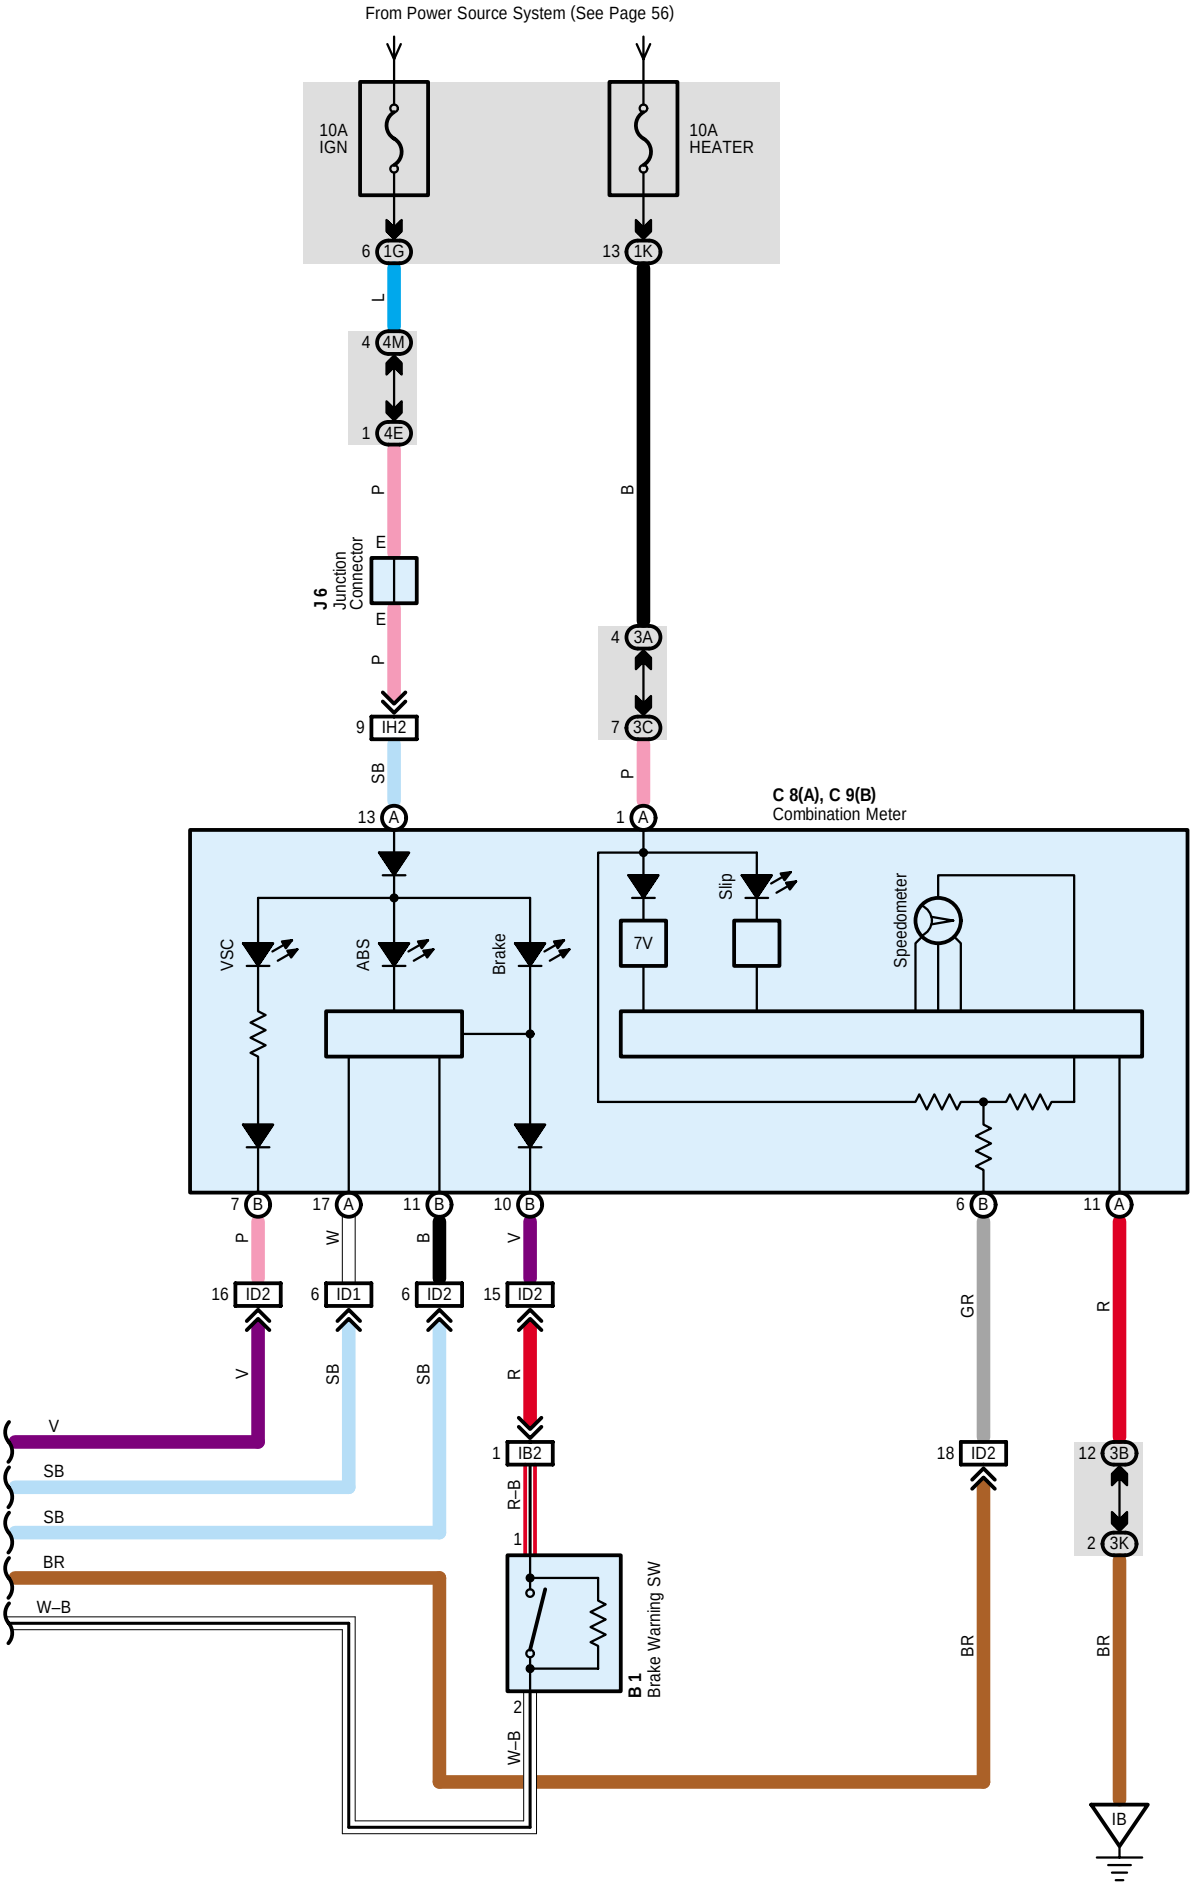

B–R
B–O
ABS CUT Relay
ABS MTR Relay
A32 ABS Speed Sensor Rear LH
A33 ABS Speed Sensor Rear RH
MRF
BM
MR
R+
+BS
RL+
RL–
RR+
RR–
S 1
Skid Control ECU with Actuator
PKB
GND2
D/G
WFSE
TS
30A ABS1
50A ABS2
F11
Fusible Link Block
FL MAIN
3. 0W
Battery
P 3
Parking Brake SW
J 8
Junction Connector
SIL
WFSE
TS
CANL
CANH
D 2
DLC3
EF

From Power Source System (See Page 56)




From Power Source System (See Page 56)
10A
ECU–IG
7. 5A
ECU–B
10 1D
4 2A
Y
V
W–L
4 4J
2 4C
5 IB1
3 IK2
BR
8 4M
2 4H
11 4C
10 1G
G
GR
L
O
2
1
5
S12
Steering Sensor
V 6
VSC Warning Buzzer
IG1
BZ
IG
ESS
CANL
CANH
BAT
9 1D
P
E
J 9
Junction
Connector
Y 1
Yaw Rate Sensor
GND
1
2
9
10
3
20
O
W–B
W
Y
P
B
20 IB2
10 IB2
J 8
Junction
Connector
21
10
19
8
22
11
9
20
12 IK2
13 IK2
BR–W
B–R
W
L
W
B
V
SB
SB
BR
W–B
W–B
A
J15
Junction
Connector
BE


From Power Source System (See Page 56)
10A IGN
10A HEATER
6 1G
13 1K
L
4 4M
1 4E
P
J6 Junction Connector
B
4 3A
7 3C
9 IH2
SB
P
13 A
1 A
C 8(A), C 9(B) Combination Meter
VSC
ABS
Brake
7V
Slip
Speedometer
7 B
17 A
11 B
10 B
6 B
11 A
P
W
B
V
GR
R
16 ID2
6 ID1
6 ID2
15 ID2
18 ID2
12 3B
2 3K
V
SB
SB
R
1 IB2
R–B
1
BR
W–B
B 1 Brake Warning SW
2
W–B
BR
BR
IB
V
SB
SB
BR
W–B