




Wireless Door Lock Control

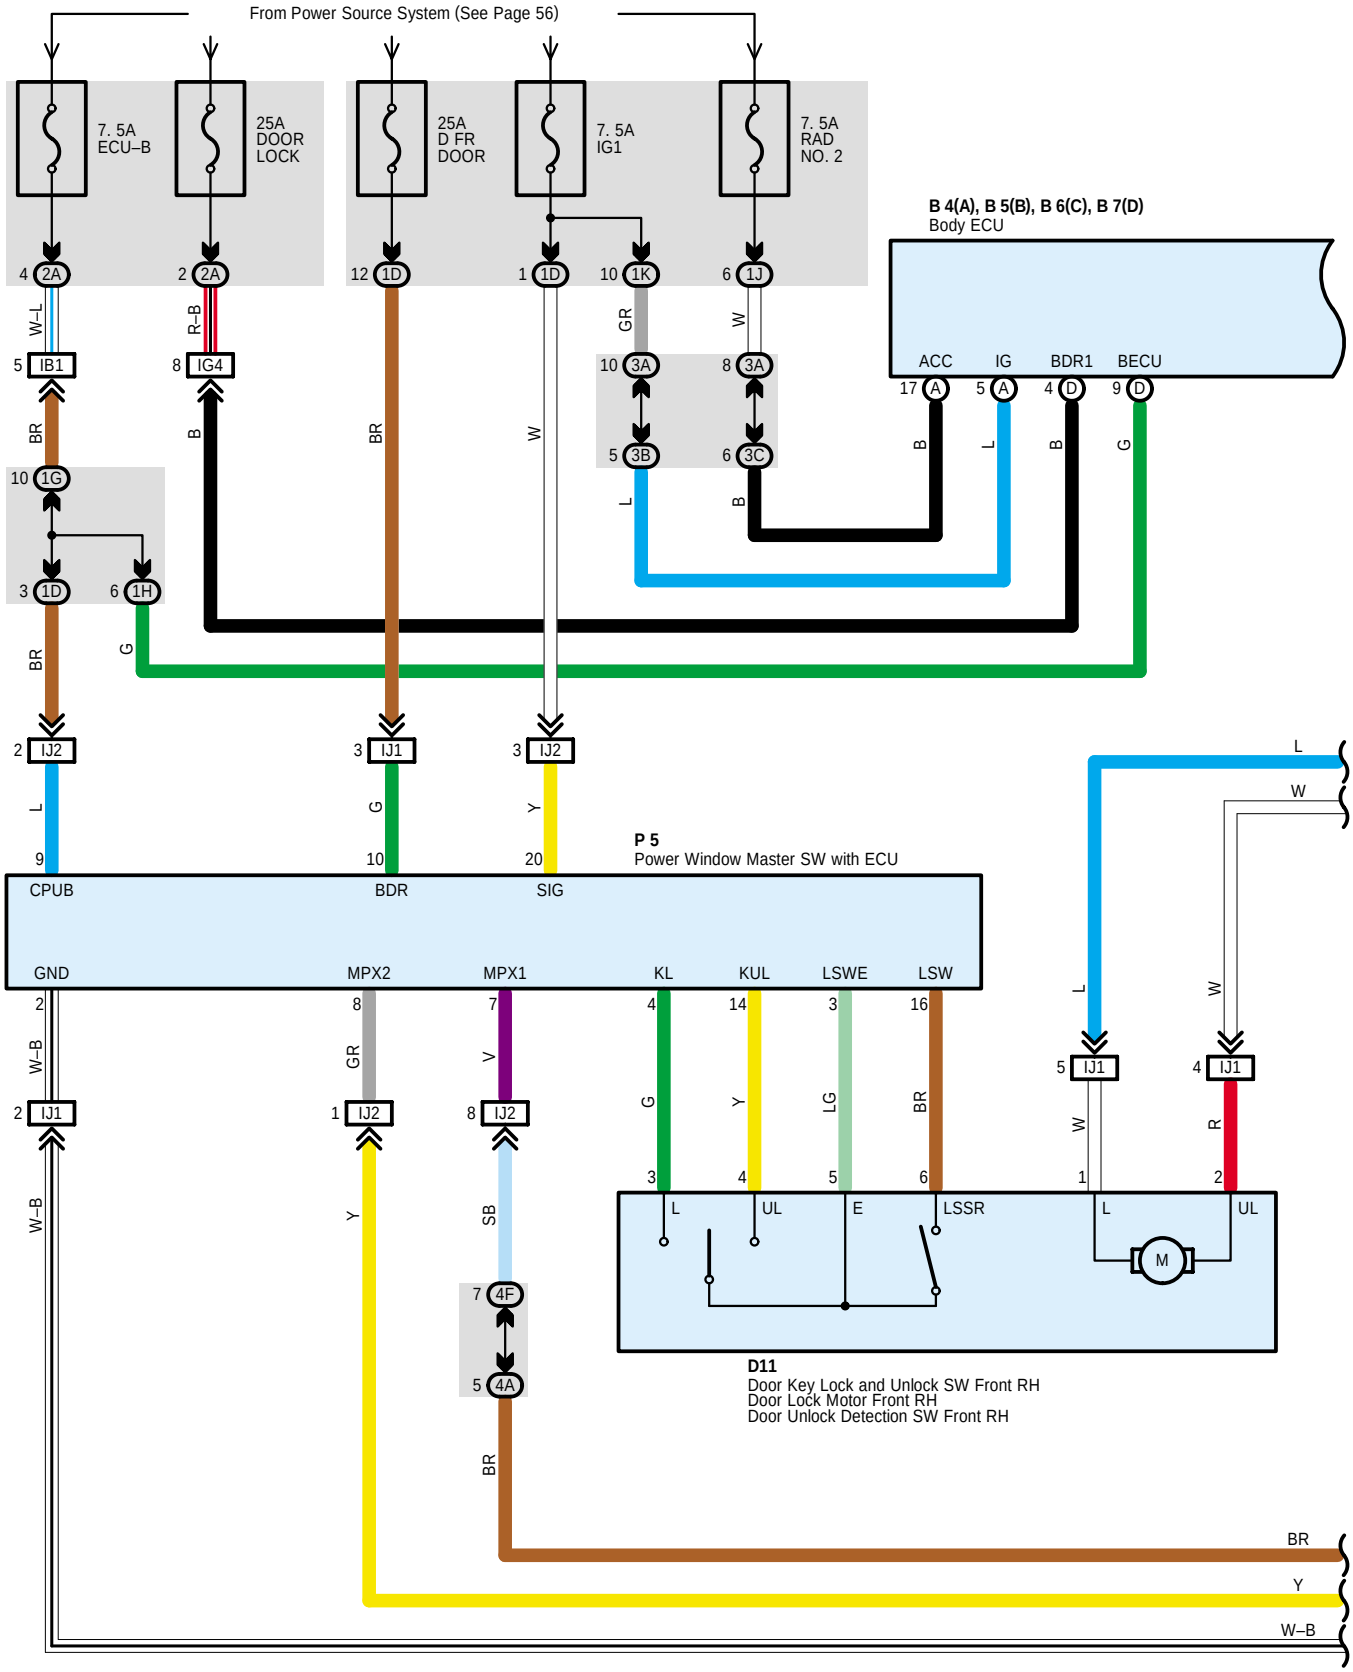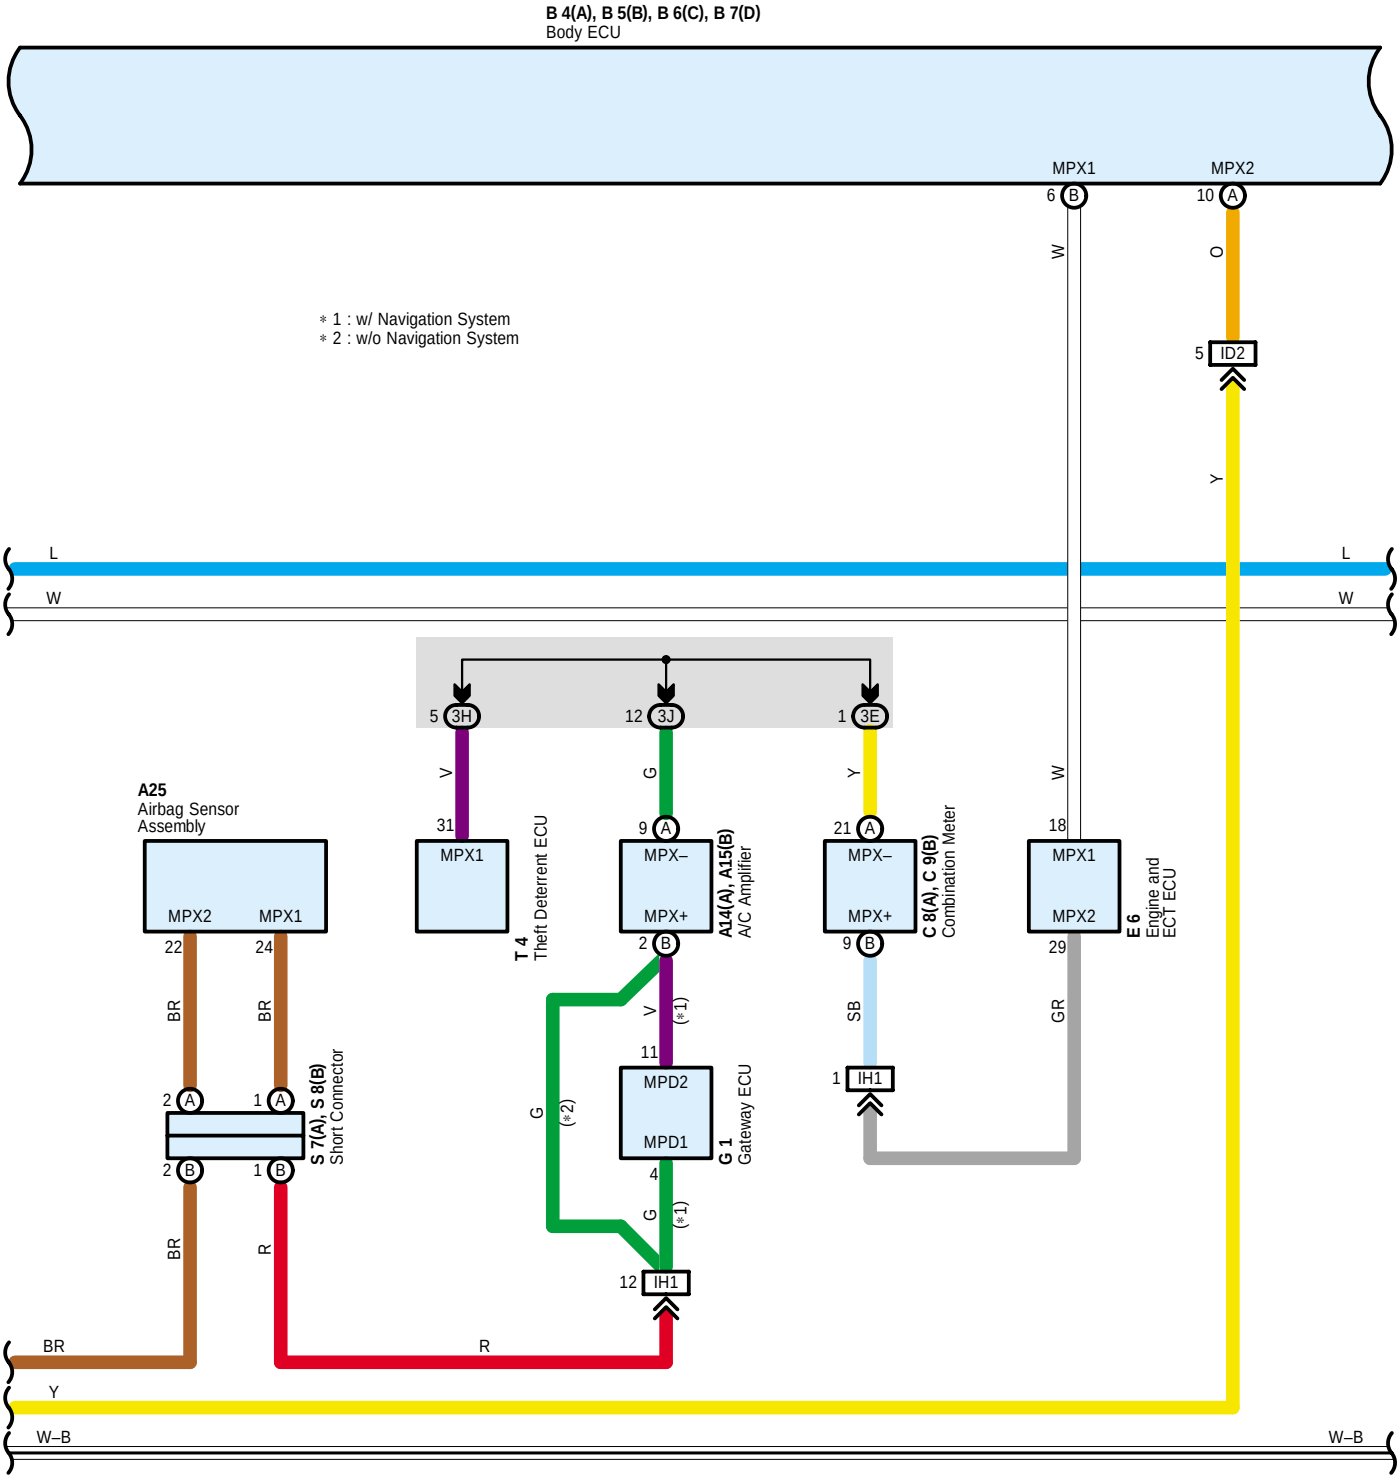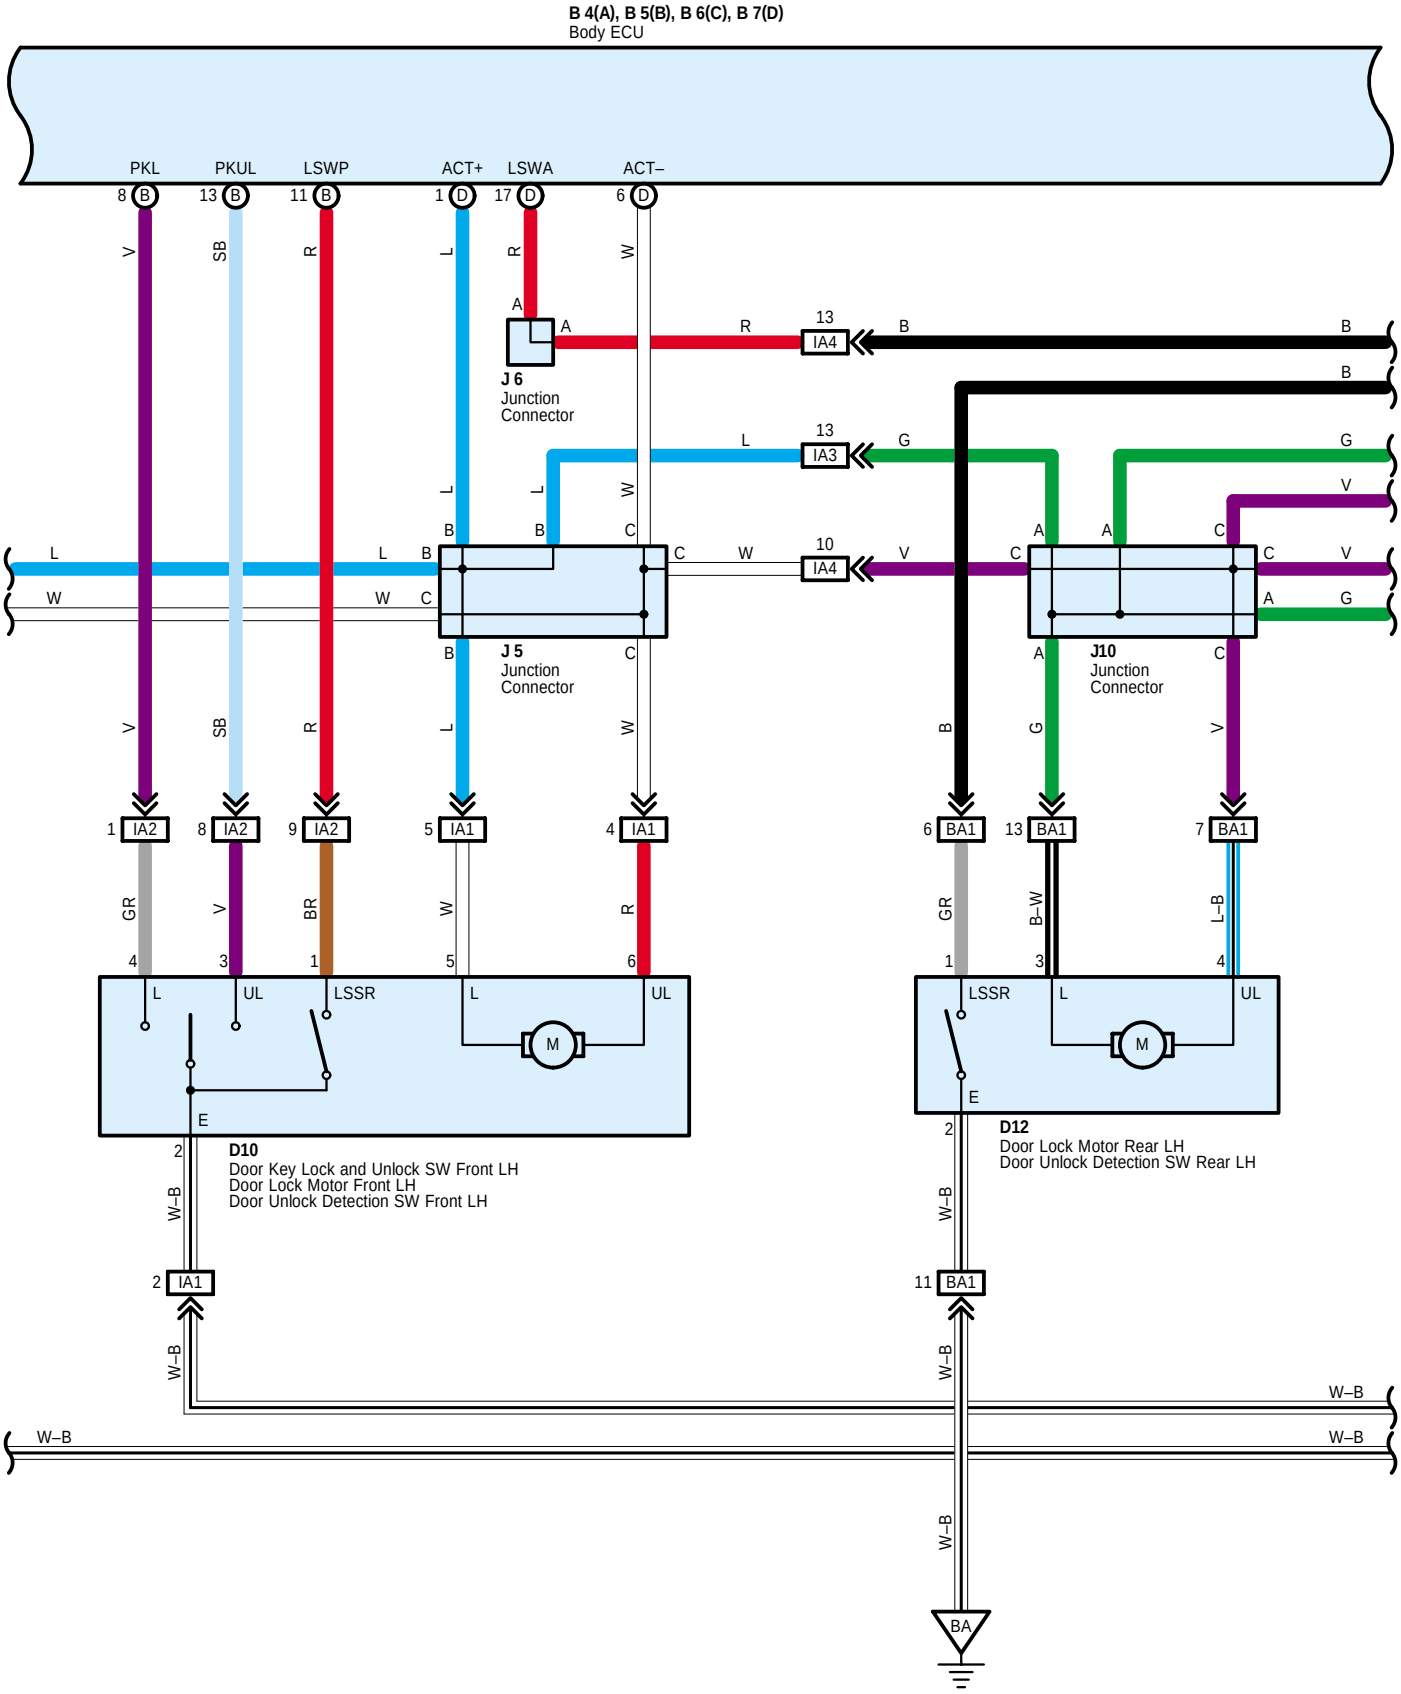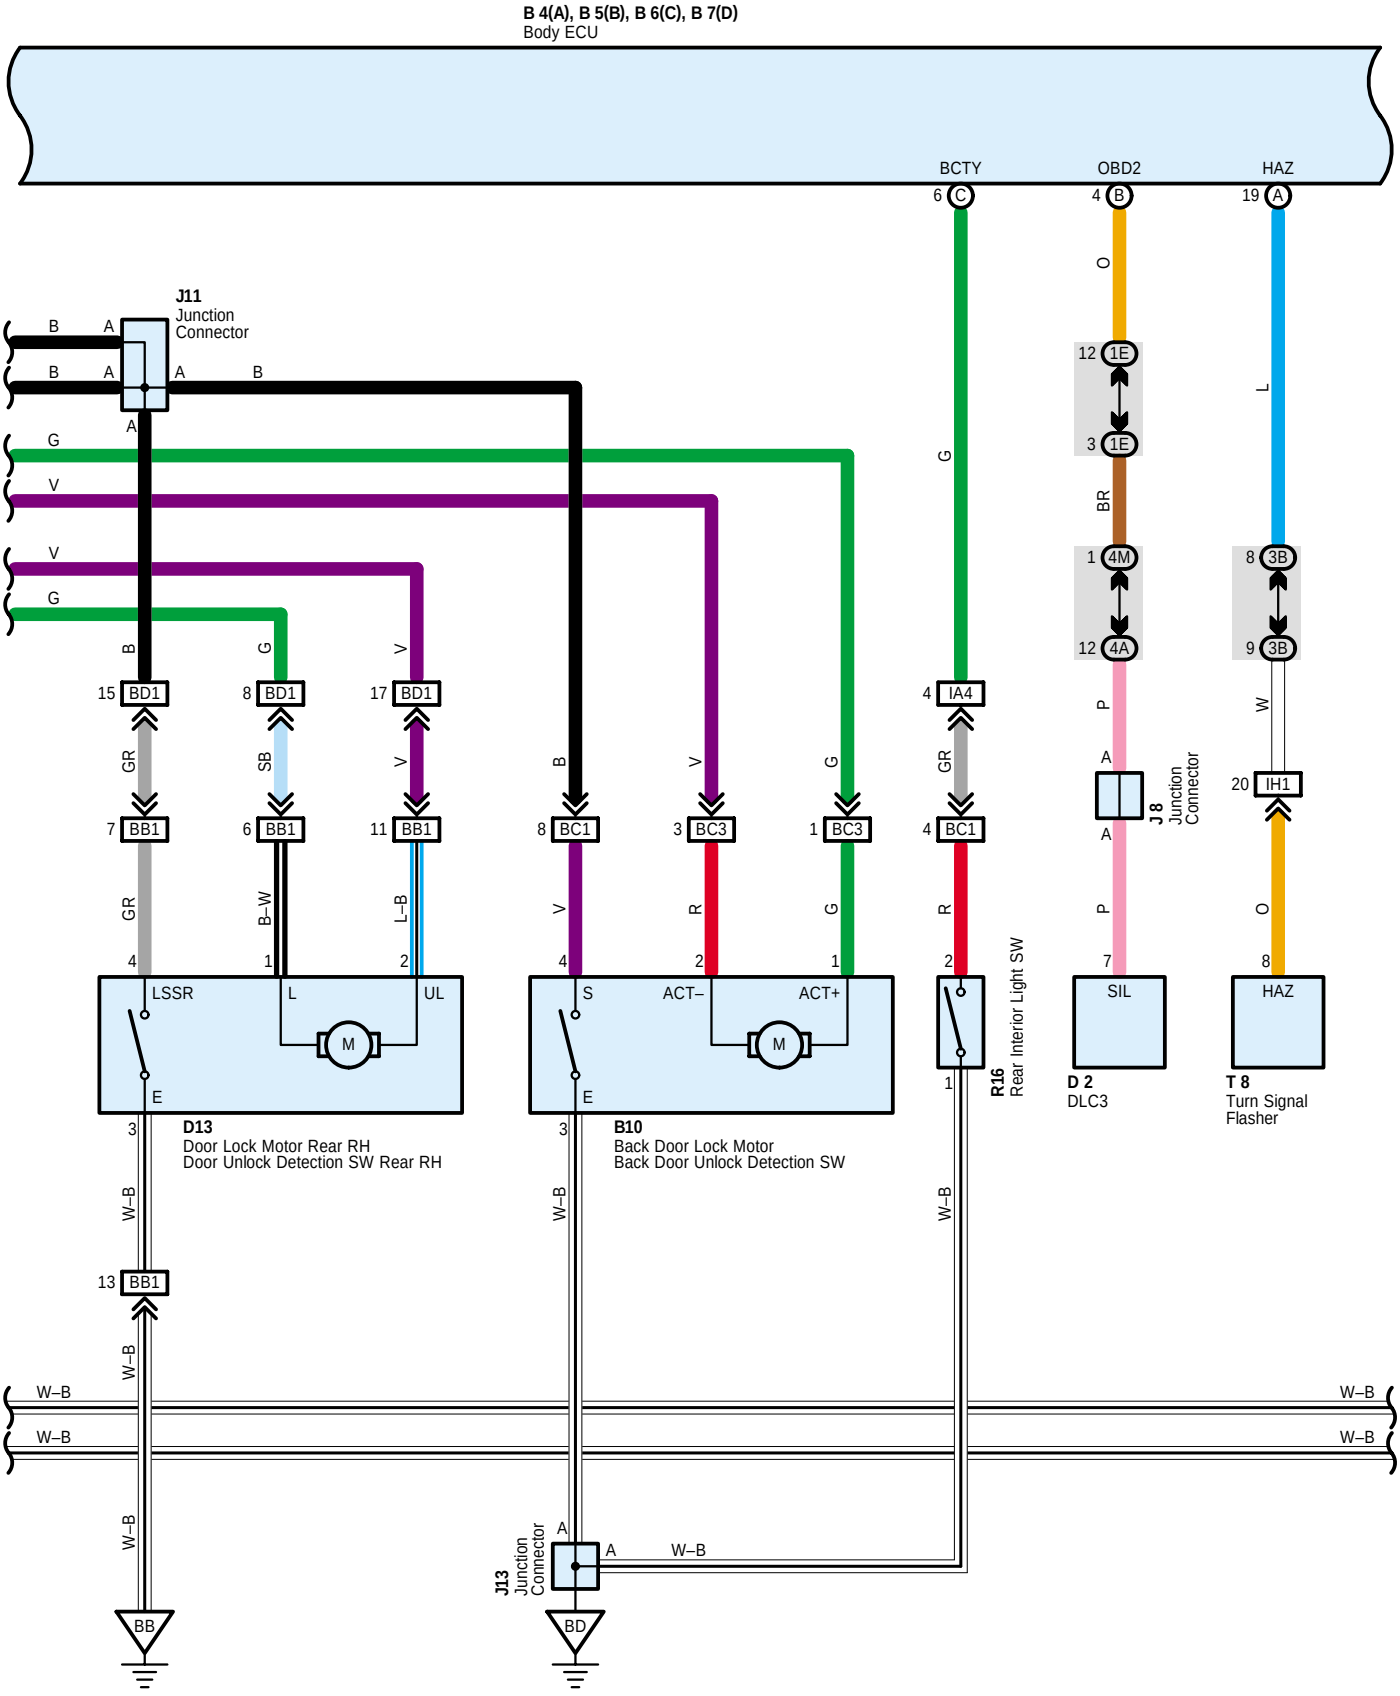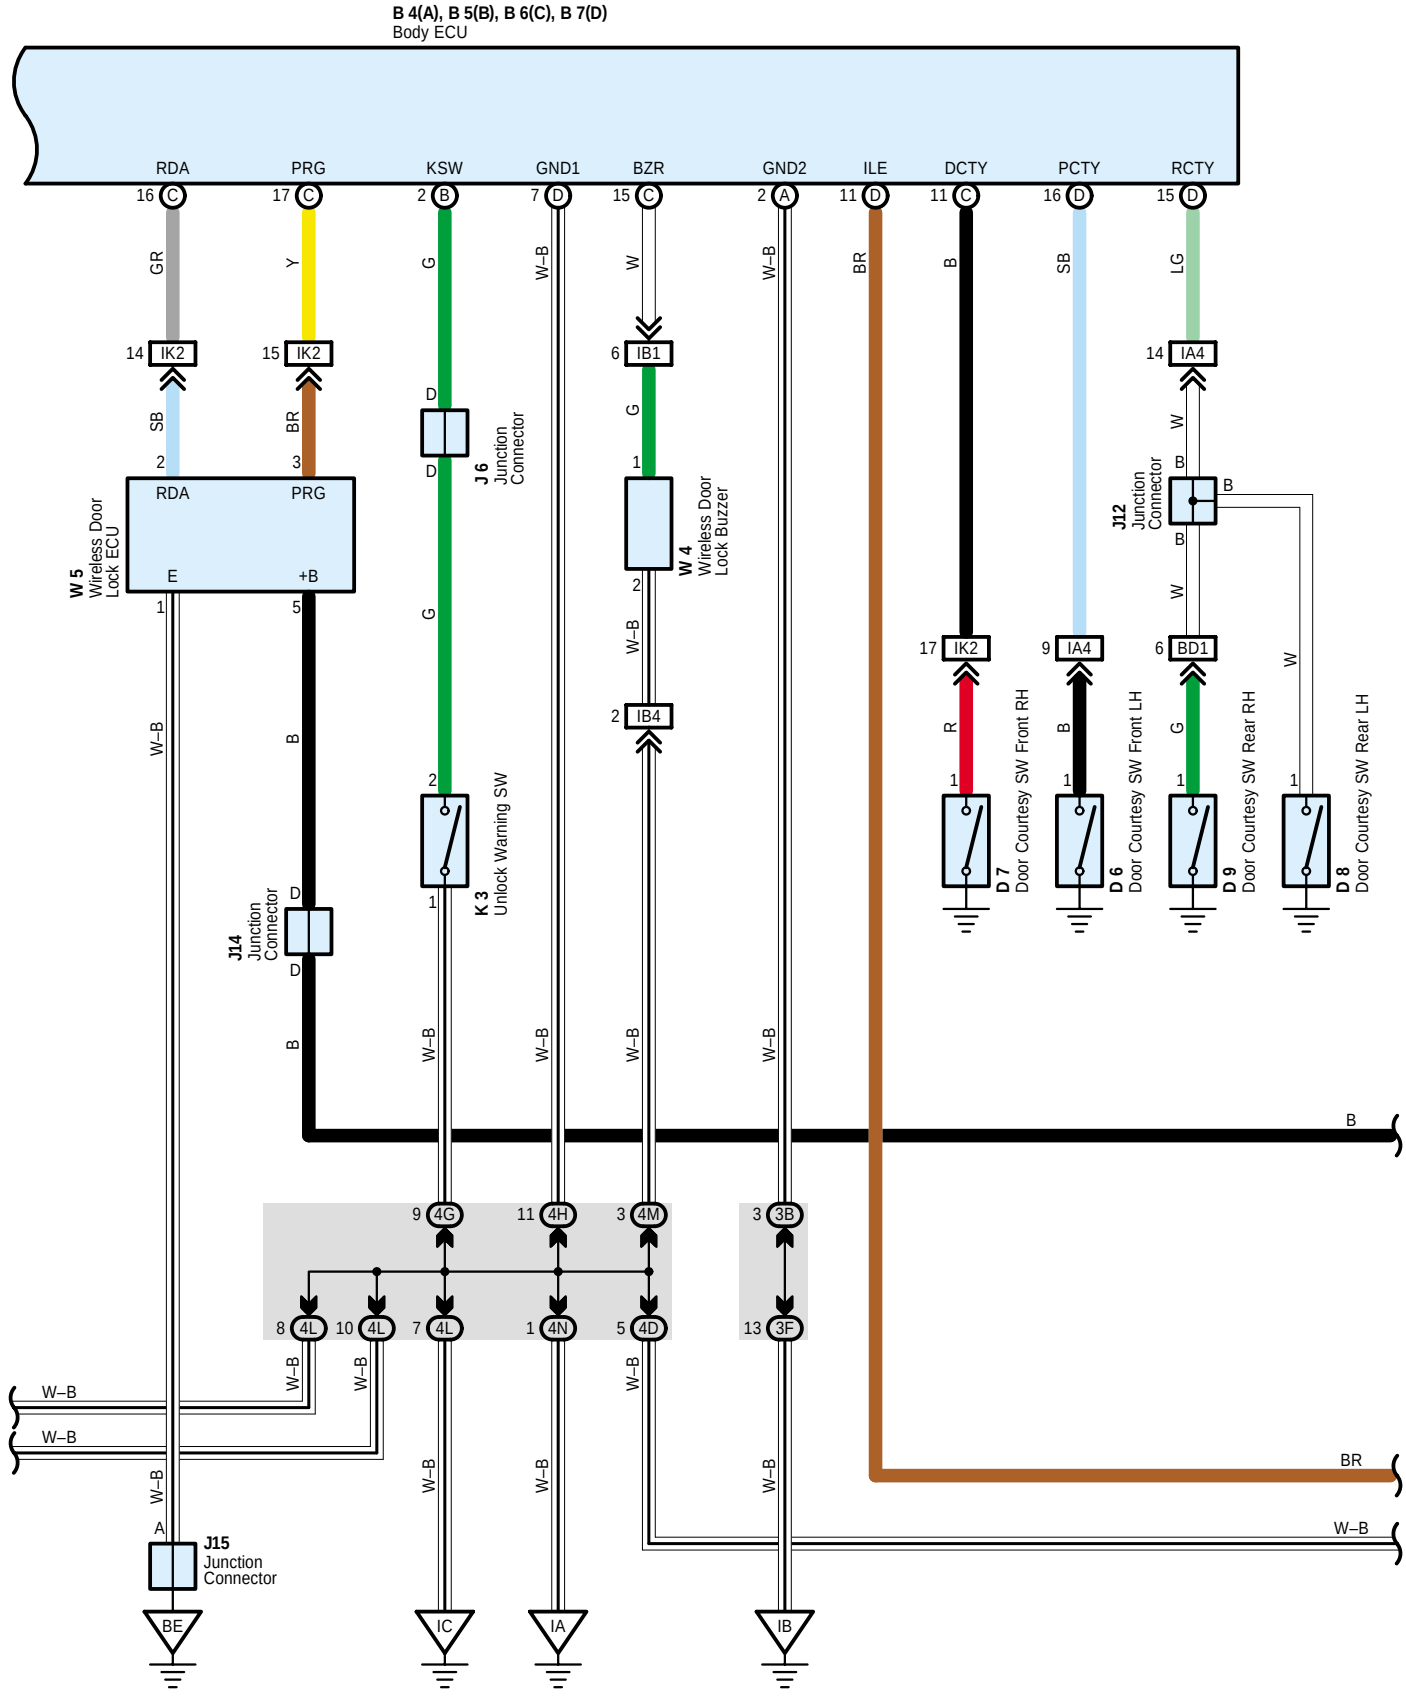


B 4(A), B 5(B), B 6(C), B 7(D)
Body ECU
MPX1
MPX2
6 B
10 A
W
O
5 ID2
Y
＊1 : w/ Navigation System
＊2 : w/o Navigation System
L
W
L
W
5 3H
12 3J
1 3E
V
G
Y
W
A25
Airbag Sensor
Assembly
MPX2
MPX1
22
24
BR
BR
2 A
1 A
S 7(A), S 8(B)
Short Connector
2 B
1 B
BR
R
31
MPX1
T 4
Theft Deterrent ECU
9 A
MPX–
MPX+
2 B
A14(A), A15(B)
A/C Amplifier
V
(＊1)
11
MPD2
MPD1
4
G
(＊1)
12 IH1
G
(＊2)
G 1
Gateway ECU
21 A
MPX–
MPX+
9 B
C 8(A), C 9(B)
Combination Meter
SB
1 IH1
18
MPX1
MPX2
29
GR
E 6
Engine and
ECT ECU
BR
R
Y
W–B
W–B


B 4(A), B 5(B), B 6(C), B 7(D)
Body ECU
PKL
PKUL
LSWP
ACT+
LSWA
ACT–
J 6
Junction Connector
J 5
Junction Connector
J10
Junction Connector
D10
Door Key Lock and Unlock SW Front LH
Door Lock Motor Front LH
Door Unlock Detection SW Front LH
D12
Door Lock Motor Rear LH
Door Unlock Detection SW Rear LH
M
BA


B 4(A), B 5(B), B 6(C), B 7(D)
Body ECU
BCTY
OBD2
HAZ
J11
Junction
Connector
D13
Door Lock Motor Rear RH
Door Unlock Detection SW Rear RH
B10
Back Door Lock Motor
Back Door Unlock Detection SW
R16
Rear Interior Light SW
D 2
DLC3
J 8
Junction
Connector
T 8
Turn Signal
Flasher
J13
Junction
Connector
LSSR
L
UL
S
ACT–
ACT+
SIL
HAZ
M
E
BB
BD


B 4(A), B 5(B), B 6(C), B 7(D)
Body ECU
RDA
PRG
KSW
GND1
BZR
GND2
ILE
DCTY
PCTY
RCTY
W 5 Wireless Door Lock ECU
J6 Junction Connector
W 4 Wireless Door Lock Buzzer
J12 Junction Connector
K 3 Unlock Warning SW
J14 Junction Connector
D 7 Door Courtesy SW Front RH
D 6 Door Courtesy SW Front LH
D 9 Door Courtesy SW Rear RH
D 8 Door Courtesy SW Rear LH
J15 Junction Connector
BE
IC
IA
IB

From Power Source System (See Page 56)

